

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Starting diagnosis	2
3 Technical data	4
3.1 Testing and setting values	4
40 - Front suspension	5
1 Safety information and repair notes	5
1.1 Safety information	5
1.2 Repair instructions	5
2 Front axle	6
2.1 Overview of fitting locations – front axle, rear-wheel drive	6
2.2 Overview of fitting locations – front axle, all-wheel drive	6
3 Subframe	8
3.1 Assembly overview – subframe	8
3.2 Removing and installing subframe with steering rack, rear wheel drive	10
3.3 Removing and installing subframe with motor, all-wheel drive	15
3.4 Servicing threads in longitudinal member	26
3.5 Fixing subframe in position	27
3.6 Taking up weight of subframe using scissor-type assembly platform	30
3.7 Preparing scissor-type assembly platform	31
3.8 Supporting components in vehicle front end	33
3.9 Renewing front motor mounting, all-wheel drive	37
4 Suspension strut, upper suspension link	39
4.1 Assembly overview – suspension strut	39
4.2 Removing and installing suspension strut	41
4.3 Removing and installing spring	49
5 Lower suspension link, swivel joint	54
5.1 Assembly overview – suspension link, swivel joint	54
5.2 Removing and installing suspension link	56
5.3 Removing and installing swivel joint	57
5.4 Removing and installing stone deflector for suspension link	59
5.5 Renewing front suspension link bush	60
5.6 Renewing suspension link bush, rear	64
6 Wheel bearing	67
6.1 Assembly overview – wheel bearing assembly, rear-wheel drive	67
6.2 Assembly overview – wheel bearing, all-wheel drive	67
6.3 Removing and installing wheel bearing housing	68
6.4 Loosening and tightening threaded connections of wheel bearings	72
6.5 Removing and installing wheel bearing unit, all-wheel drive	75
6.6 Removing and installing wheel bearing unit, rear-wheel drive	77
7 Drive shaft	80
7.1 Assembly overview – drive shaft	80
7.2 Removing and installing drive shaft	81
7.3 Removing and installing external constant velocity joint, drive shaft installed	86
7.4 Loosening and tightening threaded connections of drive shaft	88
7.5 Removing and installing constant velocity joint	91
7.6 Tensioning clamp for boot	100



8	Anti-roll bar	102
8.1	Assembly overview – anti-roll bar	102
8.2	Removing and installing anti-roll bar	102
8.3	Removing and installing coupling rod	104
42	Rear suspension	107
1	Safety information and repair notes	107
1.1	Safety information	107
1.2	Repair instructions	107
2	Rear axle	108
2.1	Overview of fitting locations – rear axle	108
2.2	Removing and installing rear axle	110
2.3	Lowering rear axle	114
2.4	Securing vehicle to support arms of lifting platform	119
3	Subframe	121
3.1	Assembly overview – subframe mountings	121
3.2	Assembly overview – subframe	122
3.3	Fixing subframe in position	122
3.4	Preparing scissor-type assembly platform	125
3.5	Taking up weight of subframe using scissor-type assembly platform	127
3.6	Renewing gearbox/transmission unit mounting	128
3.7	Renewing motor mountings	134
3.8	Renewing front subframe mountings	140
3.9	Renewing rear subframe mountings	146
4	Anti-roll bar	154
4.1	Assembly overview – anti-roll bar	154
4.2	Removing and installing anti-roll bar	156
4.3	Removing and installing coupling rod	157
5	Suspension link, track rod	160
5.1	Assembly overview ? suspension link	160
5.2	Assembly overview – track rod	161
5.3	Assembly overview – spring control arm	162
5.4	Removing and installing track rod	163
5.5	Removing and installing stone deflector for spring control arm	165
5.6	Removing and installing spring control arm	166
5.7	Removing and installing lower suspension link	169
5.8	Removing and installing upper rear suspension link	171
5.9	Removing and installing upper front suspension link	173
6	Suspension strut, shock absorber, spring	175
6.1	Exploded view - shock absorber	175
6.2	Assembly overview – spring	175
6.3	Removing and installing shock absorber	176
6.4	Renewing shock absorber	178
6.5	Removing and installing spring	182
6.6	Renewing spring	190
7	Wheel bearing assembly, trailing arm	196
7.1	Assembly overview – wheel bearing	196
7.2	Removing and installing wheel bearing housing	196
7.3	Removing and installing wheel bearing unit	199
7.4	Raising wheel bearing assembly to unladen position	200
8	Drive shaft	204
8.1	Assembly overview – drive shaft	204
8.2	Removing and installing drive shaft	205
8.3	Loosening and tightening threaded connections of drive shaft	213

8.4	Dismantling and assembling drive shaft	214
8.5	Tensioning clamp for boot	220
43	- Self-levelling suspension	222
1	Safety information and repair notes	222
1.1	Safety information	222
1.2	Repair instructions	222
2	Electronic damping control	223
2.1	Installation location overview - controlled damping	223
2.2	Summary of components: Control unit for electronically controlled damping	225
2.3	Exploded view - damping control	225
2.4	Removing and installing the control unit for electronically controlled damping J250	226
2.5	Removing and installing front body acceleration senders [G341]/[G342]	227
2.6	Removing and installing rear body acceleration sender [G343]	228
3	Vehicle level sender	231
3.1	Exploded view - front vehicle level senders	231
3.2	Assembly overview – rear vehicle level senders	231
3.3	Removing and installing front vehicle level senders [G78]/[G289]	232
3.4	Removing and installing rear vehicle level senders [G76]/[G77]	234
44	- Wheels, tyres, vehicle geometry	237
1	Safety information and repair notes	237
1.1	Safety information	237
1.2	Repair instructions	237
2	Wheel alignment	238
2.1	Notes on wheel alignment	238
2.2	Test requirements	238
2.3	Nominal values for the axle alignment	238
2.4	Setting vehicle to initial position for wheel alignment	242
2.5	When does wheel alignment have to be checked?	242
2.6	Adjusting camber at front wheels	244
2.7	Adjusting camber at rear wheels	244
2.8	Adjusting toe setting at rear wheels	245
2.9	Adjusting toe setting at front wheels	246
2.10	Checking full steering lock	246
2.11	Preparations for testing	247
3	Wheels, tyres	248
3.1	Assembly overview - wheel	248
3.2	Removing and installing wheel	250
3.3	Cleaning contact surfaces on rim	251
3.4	Positioning anti-theft wheel bolts - steel wheels	252
48	- Steering	253
1	Safety information and repair notes	253
1.1	Safety information	253
1.2	Repair instructions	253
2	Steering wheel	254
2.1	Overview of components - Steering wheel	254
2.2	Removing and installing the steering wheel	254
3	Steering column	257
3.1	Assembly overview – steering column	257
3.2	Checking steering column for damage	261
3.3	Removing and installing steering column	261
3.4	Removing and installing intermediate steering shaft	266
3.5	Removing and installing control unit for electronic steering column lock J764	268



4	Steering rack	272
4.1	Assembly overview – steering rack, left-hand drive	272
4.2	Assembly overview – steering rack, right-hand drive	272
4.3	Assembly overview – track rods	273
4.4	Removing and installing steering rack, all-wheel drive	274
4.5	Removing and installing steering rack, rear-wheel drive	276
4.6	Servicing steering rack	281
4.7	Removing and installing boot	282
4.8	Removing and installing track rod	284
4.9	Removing and installing track rod ball joint	286