



Contents

00 - Technical data	1
1 Electrical components	1
1.1 Access to diagnoses	1
98 - Assist systems	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Installation location overview: senders, sensors and control units in the front part of the vehicle	4
2.2 Installation location overview: senders, sensors and control units in the middle part of the vehicle	5
2.3 Installation location overview: encoders, sensors and control units in the rear part of the vehicle	5
3 Senders/sensors/control units	8
3.1 Removing and installing front parking aid encoder G252/G253/G254/G255	8
3.2 Removing and installing rear parking aid encoder G203/G204/G205/G206	9
3.3 Removing and installing front park assist steering senders [G568]/[G569]	10
3.4 Removing and installing rear park assist encoder G716/G717	11
3.5 Removing and installing the J428 adaptive cruise control unit	12
3.6 Removing and installing J769/J770 lane change assist (SmartGate)	14
3.7 Removing and installing lane change assist warning lamp in exterior mirror	15
3.8 Removing and left/right-view camera R244/R245	16
3.9 Removing and installing control unit for overhead view camera [J928]	17
3.10 Removing and installing front camera for driver assist systems [R242]	18
3.11 Removing and installing parking aid control unit [J446]	19
3.12 Removing and installing front surround-view camera R243	20
3.13 Removing and installing reversing camera [R189]	21
3.14 Removing and installing rear overhead view camera [R246]	21
4 Adaptive cruise control	23
4.1 Necessity of calibration	23
4.2 Adjusting/calibrating adaptive cruise control unit	25
5 Reversing camera system	29
5.1 Calibrating reversing camera [R189]	29
6 Front camera for driver assist systems	34
6.1 Calibrating front camera for driver assist systems [R242]	34
6.2 Removing and installing windscreen heater for front sensors [Z113]	41
7 Surround-view camera	43
7.1 Calibrating overhead view camera system	43