



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety and repair instructions</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Electrical components</b>	<b>2</b>
2.1 Access to diagnoses	2
<b>27 - Starter, current supply, CCS</b>	<b>4</b>
<b>1 Safety information and repair notes</b>	<b>4</b>
1.1 Safety information	4
1.2 Repair instructions	4
<b>2 Battery</b>	<b>5</b>
2.1 Assembly overview – battery	5
2.2 Removing and installing battery [A]	5
2.3 Disconnecting and connecting battery	10
2.4 Removing and installing battery tray	13
2.5 Removing and installing earth wire with battery monitor control unit [J367]	13
2.6 Commissioning battery monitor control unit [J367]	15
<b>90 - Gauges, instruments</b>	<b>16</b>
<b>1 Safety information and repair notes</b>	<b>16</b>
1.1 Safety information	16
1.2 Repair instructions	16
<b>2 Dash panel insert</b>	<b>17</b>
2.1 Overview of components: control unit with display unit for driver information system	17
2.2 Assembly overview – head-up display	17
2.3 Removing and installing the display unit with display unit for driver information system - J1254	18
2.4 Removing and installing the heads-up display control unit -J898	20
2.5 Calibrating control unit for head-up display [J898]	22
<b>3 Horn</b>	<b>26</b>
3.1 Assembly overview – horn	26
3.2 Removing and installing horn or dual tone horn [H1]	26
<b>92 - Windscreen wash/wipe system</b>	<b>28</b>
<b>1 Safety information and repair notes</b>	<b>28</b>
1.1 Safety information	28
1.2 Repair instructions	28
<b>2 Windscreen wiper system</b>	<b>29</b>
2.1 Summary of components: front windscreen wipers	29
2.2 Moving wipers to service position	30
2.3 Removing and installing wiper blade	30
2.4 Removing and installing windscreen wiper arms	31
2.5 Adjusting windscreen wiper arms	33
2.6 Removing and installing wiper motor [V]	34
2.7 Deactivating APP function	36
2.8 Removing and installing rain and light sensor [G397]	36
<b>3 Windscreen washer system</b>	<b>40</b>
3.1 Assembly overview – windscreen washer system	40
3.2 Removing and installing washer fluid reservoir	42
3.3 Removing and installing washer pump [V59]	43
3.4 Removing and installing washer jets	44



3.5	Adjusting spray jets	45
<b>4</b>	<b>Rear window wiper system</b>	<b>46</b>
4.1	Summary of components: rear window wiper	46
4.2	Removing and installing wiper blade	46
4.3	Removing and installing windscreen wiper arm	47
4.4	Adjusting wiper arm	48
4.5	Removing and installing V12 rear window wiper motor	49
<b>5</b>	<b>Rear window washer system</b>	<b>51</b>
5.1	Overview of components: rear window washer system	51
5.2	Removing and installing spray jet	51
<b>6</b>	<b>Headlamp cleaning system</b>	<b>54</b>
6.1	Assembly overview - Headlight washer system pump	54
6.2	Removing and installing washer fluid container	54
6.3	Removing and installing V11 headlight cleaning system pump	54
6.4	Adjusting spray jets	55
6.5	Removing and installing the lift cylinder	55
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>57</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>57</b>
1.1	Safety information	57
1.2	Repair instructions	57
<b>2</b>	<b>Headlights</b>	<b>58</b>
2.1	Summary of components: headlights	58
2.2	Removing and installing headlight	61
2.3	Adjusting headlights	61
2.4	Remove and install bulb for front indicator light -M5/M7	62
2.5	Installing repair kit for headlight housing	63
2.6	Switching headlights over from driving on the right to driving on the left	64
2.7	Switching headlights over from driving on the left to driving on the right	64
2.8	Removing and installing headlight range control motor	65
2.9	Removing and installing the headlight fan -V407/-V408	70
2.10	Removing and installing power module 1 for LED headlights -A27/-A31	72
<b>3</b>	<b>Lights in exterior mirror</b>	<b>74</b>
3.1	Assembly overview - lights in exterior mirror	74
3.2	Removing and installing turn signal repeater bulb [L131]/[L132]	76
3.3	Removing and installing entry light in exterior mirror [W52]/[W53]	77
<b>4</b>	<b>Tail lights</b>	<b>79</b>
4.1	Summary of components: Tail lights in the body	79
4.2	Removing and installing tail light cluster [MX3]/[MX4]	79
4.3	Removing and installing the tail light in the tailgate	81
<b>5</b>	<b>High-level brake light</b>	<b>82</b>
5.1	Summary of components - high-level brake light	82
5.2	Removing and installing bulb M25 for raised brake light M25	83
<b>6</b>	<b>Number plate light</b>	<b>86</b>
6.1	Removing and installing number plate light [X4]/[X5]	86
<b>7</b>	<b>Other lights, exterior</b>	<b>87</b>
7.1	Removing and installing light guide for contour lighting in front radiator grille -L362/-L363	87
<b>8</b>	<b>Entry and start authorisation system</b>	<b>89</b>
8.1	Overview of fitting locations – entry and start authorisation system	89
8.2	Overview of fitting locations – keyless entry system	90
8.3	Removing and installing the control unit for entry and start authorisation J518	94
8.4	Removing and installing the aerial on the driver's side for entry and start system R134	96
8.5	Removing and installing the aerial on the passenger's side for entry and start system R135	97



8.6	Removing and installing aerial in luggage compartment for entry and start system R137	98
8.7	Removing and installing interior aerial 1 for entry and start system -R138	98
8.8	Removing and installing intrusion protection control unit 2 -J1192/intrusion protection control unit 3 -J1193	99
8.9	Removing and installing intrusion protection control unit 4 -J1194/intrusion protection control unit 5 -J1195	100
8.10	Removing and installing tailgate opening encoder G750/G760	101
8.11	Alcohol interlock	102
<b>9</b>	<b>Steering column switch module</b>	<b>114</b>
9.1	Summary of components: switch unit on the steering column	114
9.2	Removing and installing steering column combination switch	115
<b>10</b>	<b>Automatic headlight range control</b>	<b>118</b>
10.1	Overview of components: automatic headlight range adjustment	118
<b>11</b>	<b>Towing bracket</b>	<b>119</b>
11.1	Assembly overview - towing bracket socket	119
11.2	Removing and installing trailer socket [U10]	119
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>121</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>121</b>
1.1	Safety information	121
1.2	Repair instructions	121
<b>2</b>	<b>Lights</b>	<b>122</b>
2.1	Installation location overview - Lights in the dash panel	122
2.2	Installation location overview - Lights in the front doors	122
2.3	Overview of components - Lights in the rear doors	123
2.4	Overview of fitting locations – footwell lights	124
2.5	Installation location overview - Lights in the centre console	125
2.6	Installation overview - Lights in the luggage compartment	126
2.7	Overview of fitting locations ? lights in roof trim	127
2.8	Replacing bulb for glove box light in dash panel W6	129
2.9	Removing and installing footwell light [W9]/[W10]	130
2.10	Removing and installing central locking SAFELOCK function warning lamp [K133]	131
2.11	Removing and installing bulb L160/L161 for door pockets	132
2.12	Removing and installing bulb for door opener lights L108/L109	133
2.13	Removing and installing rear door opener light bulb L110/L111	133
2.14	Removing and installing footwell/luggage compartment light	134
2.15	Removing and installing rear illuminated vanity mirror [W49]/[W50]	134
2.16	Removing and installing bulb L157 for centre armrests	135
<b>3</b>	<b>Controls</b>	<b>137</b>
3.1	Installation location overview - Controls in the dash panel	137
3.2	Overview of fitting locations – controls in front doors	137
3.3	Overview of fitting locations – controls in rear doors	138
3.4	Installation overview - controls in the centre console	139
3.5	Overview of fitting locations – controls in luggage compartment	140
3.6	Overview of fitting locations ? controls in roof trim	141
3.7	Removing and installing operating unit for lighting -EX59	143
3.8	Removing and installing centre switch module in dash panel -EX22	145
3.9	Removing and installing the window lifter operating unit in the driver's door -EX36	146
3.10	Removing and installing window switch/operating unit in the door	146
3.11	Removing and installing the button for unlocking the tailgate remotely E233	148
3.12	Removing and installing starter button [E378]	149
3.13	Removing and installing electromechanical parking brake button E538	149
3.14	Removing and installing the electric swivelling trailer hitch attachment button -E474	150
3.15	Removing and installing rear lid closure button	151
3.16	Removing and installing rear lid warning buzzer [H32]	152



3.17	Removing and installing the front door module -WX3 .....	152
3.18	Removing and installing rear interior light/reading light .....	153
3.19	Removing and installing the passenger side glove box light switch E26 .....	155
3.20	Removing and installing heated rear seat control switch E128/E129 .....	155
<b>4</b>	<b>Anti-theft alarm system .....</b>	<b>157</b>
4.1	Assembly overview – interior monitor .....	157
4.2	Removing and installing alarm horn [H12] .....	158
4.3	Removing and installing anti-theft alarm sensor [G578] .....	159
<b>5</b>	<b>Cigarette lighter, socket .....</b>	<b>161</b>
5.1	Removing and installing 12 V socket [U5]/[U19] .....	161
5.2	Removing and installing inverter with socket, 12 V-230 V -U13 .....	161
<b>97 - Wiring .....</b>		<b>164</b>
<b>1</b>	<b>Safety information and repair notes .....</b>	<b>164</b>
1.1	Safety information .....	164
1.2	Repair instructions .....	164
<b>2</b>	<b>Relay carriers, fuse holders, electronics boxes .....</b>	<b>165</b>
2.1	Overview of fitting locations - relay carriers, fuse carriers .....	165
2.2	Assembly overview ? relay carriers, fuse holders, electronics boxes .....	165
2.3	Removing and installing electronics box .....	167
2.4	Removing and installing fuse holder A [SA] .....	168
2.5	Removing and installing fuse holder B [SB] .....	170
2.6	Removing and installing fuse holder C [SC] .....	172
<b>3</b>	<b>Control units .....</b>	<b>176</b>
3.1	Overview of fitting locations - control units .....	176
3.2	Assembly overview – onboard supply control unit .....	177
3.3	Removing and installing onboard supply control unit [J519] .....	179
3.4	Removing and installing bracket for onboard supply control unit [J519] .....	181
3.5	Removing and installing the databus diagnostic interface - J533 .....	184
3.6	Removing and installing fan for control unit [V274] .....	185