



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Electrical components</b>	<b>1</b>
1.1 Diagnostic access	1
<b>2 Safety information and repair notes</b>	<b>2</b>
2.1 Safety information	2
2.2 Repair instructions	2
<b>91 - Communication</b>	<b>3</b>
<b>1 Safety information and repair notes</b>	<b>3</b>
1.1 Safety information	3
1.2 Repair instructions	3
<b>2 Fitting locations</b>	<b>4</b>
2.1 Infotainment system set overview of fitting locations	4
2.2 Installation location overview - Sound playback system	5
2.3 Assembly overview: sound package	5
2.4 Overview of locations where aerial systems are fitted	10
2.5 Phone system overview of fitting locations	12
2.6 Installation location overview - mobile online services	12
<b>3 Components/control units</b>	<b>14</b>
3.1 Removing and installing the front information display and operating unit -J685	14
3.2 Control unit 1 for information electronics [J794]	15
3.3 Removing and installing the -R20/-R22 front tweeter	18
3.4 Removing and installing the R14/R16 rear tweeter	19
3.5 Removing and installing front bass loudspeakers	20
3.6 Removing and installing rear bass loudspeakers	21
3.7 Removing and installing the R103/R104 front mid-range speaker	22
3.8 Removing and installing -R211 subwoofer	22
3.9 Removing and installing the digital sound package control unit -J525	23
3.10 Removing and installing aerial module	25
3.11 Removing and installing frequency modulation (FM) frequency filters [R178]/[R179]	26
3.12 Removing and installing roof aerial [RX5]	26
3.13 Removing and installing the LTE aerial	27
3.14 Removing and installing internet access control unit [J666]	28
3.15 Removing and installing data transmission aerial	29
3.16 Removing and installing 2-way signal amplifier for mobile telephone/data services J984	29
3.17 Removing and installing charging unit 1 for mobile devices [J1146]	30
3.18 Removing and installing the multifunction buttons E440/E441	31
3.19 Removing and installing the front USB connection 1 -U41	32
3.20 Removing and installing the USB charging socket 1 -U37	33
3.21 Removing and installing the control unit for the J949 emergency call module and communication unit	34
3.22 Removing and installing the speaker for the emergency call module -R335	36
3.23 Removing and installing emergency battery, telematics [A16]	37