

## Contents

<b>68 - Interior equipment</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair notes	1
<b>2 Compartments/covers</b>	<b>2</b>
2.1 Removing and installing the steering column trim panel	2
2.2 Removing and installing the steering column trim panel	3
2.3 Removing and installing brake element for glove compartment flap on the dash panel	4
2.4 Removing and installing glove box in the dash panel	5
<b>3 Equipment</b>	<b>8</b>
3.1 Summary of components: sun visor	8
3.2 Removing and installing the sun visor	8
3.3 Removing and installing sun visor centre mount	10
3.4 Removing and installing roof grab handle	11
<b>4 Centre console</b>	<b>13</b>
4.1 Removing and installing the cover of the centre console	13
4.2 Removing and installing the bracket for the centre console	13
4.3 Removing and installing centre console	14
4.4 Summary of components: centre console	23
<b>5 Front armrest</b>	<b>26</b>
5.1 Removing and installing front armrest	26
<b>6 Interior mirror</b>	<b>28</b>
6.1 Summary of components - Interior rear-view mirror	28
6.2 Removing and installing the interior rear-view mirror	29
6.3 Bonding retaining plate for interior mirror	30
<b>69 - Passenger protection</b>	<b>32</b>
<b>1 Safety information and repair notes</b>	<b>32</b>
1.1 Safety information	32
1.2 Repair notes	32
<b>2 Seat belts</b>	<b>33</b>
2.1 Overview of fitting locations – seat belts and anchorage points	33
2.2 Assembly overview ? front three-point seat belt	35
2.3 Summary of components: rear outer three-point seat belt	37
2.4 Assembly overview – rear centre three-point seat belt	37
2.5 Summary of components: front seat belt buckle	38
2.6 Assembly overview – rear belt buckle	39
2.7 Removing and installing front three-point seat belt [NX10]/[NX11]	40
2.8 Removing and installing rear three-point seat belt	44
2.9 Removing and installing rear belt guide	46
2.10 Removing and installing front belt guide	46
2.11 Removing and installing front belt end fitting	47
2.12 Removing and installing the outer rear belt end fitting	49
2.13 Removing and installing belt height adjuster	50
2.14 Removing and installing front belt buckle	51
2.15 Removing and installing rear belt buckle	52
<b>3 Child seat anchors</b>	<b>55</b>
3.1 Assembly overview ? front child seat anchors	55
3.2 Assembly overview – rear child seat anchors	55
3.3 Removing and installing front child seat anchors	56
<b>4 Airbag system</b>	<b>58</b>
4.1 Installation location overview: airbag system	58



<b>5</b>	<b>Airbag control unit</b>	<b>61</b>
5.1	Assembly overview ? airbag control unit	61
5.2	Removing and installing airbag control unit J234	61
<b>6</b>	<b>Front airbag, driver side</b>	<b>63</b>
6.1	Assembly overview: Driver airbag	63
6.2	Removing and installing the airbag unit with igniter for airbag -N95 on the driver's side	63
6.3	Renewing connector on airbag	65
<b>7</b>	<b>Front passenger airbag</b>	<b>68</b>
7.1	Assembly overview: Passenger airbag	68
7.2	Removing and installing front passenger airbag unit with igniter	68
7.3	Removing and installing key-operated switch for deactivating the front passenger front passenger	70
<b>8</b>	<b>Side airbags</b>	<b>72</b>
8.1	Assembly overview - front outer side airbag	72
8.2	Assembly overview – front side airbag, inner side	72
8.3	Removing and installing front outer side airbag	73
8.4	Removing and installing front inner side airbag	75
8.5	Summary of components - side airbag rear	77
8.6	Removing and installing rear side airbag with igniter	78
<b>9</b>	<b>Curtain airbags</b>	<b>80</b>
9.1	Summary of components: head airbag	80
9.2	Removing and installing curtain airbag with igniter	80
<b>10</b>	<b>Airbag crash sensors</b>	<b>84</b>
10.1	Summary of components: crash sensors for airbag	84
10.2	Removing and installing front airbag crash sensor for driver side G283	86
10.3	Removing and installing front side airbag crash sensor [G179/G180]	88
10.4	Removing and installing rear side airbag crash sensor [G256/G257]	89
10.5	Removing and installing crash sensor for side airbag in B-pillar [G1101/G1102]	91
<b>11</b>	<b>Seat belt verification</b>	<b>94</b>
11.1	Summary of components: seat occupancy sensor	94
11.2	Removing and installing front seat occupied sensor [G1067]/[G128]	94
<b>12</b>	<b>Seat occupied recognition</b>	<b>96</b>
12.1	Installation location overview: seat occupancy detection system	96
12.2	Removing and installing seat occupied recognition control unit [J706]	96
<b>70 - Trim, insulation</b>		<b>98</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>98</b>
1.1	Safety information	98
1.2	Repair notes	98
<b>2</b>	<b>Front door trims</b>	<b>99</b>
2.1	Summary of components: Front door trim panel	99
2.2	Removing and installing the front door trim panel	99
<b>3</b>	<b>Rear door trims</b>	<b>102</b>
3.1	Summary of components: rear door trim panel	102
3.2	Removing and installing the rear door trim panel	102
<b>4</b>	<b>Dash panel</b>	<b>105</b>
4.1	Summary of components: dash panel	105
4.2	Removing and installing the dash panel	105
4.3	Removing and installing cover for dash panel/head-up display	119
<b>5</b>	<b>Central tube for dash panel</b>	<b>120</b>
5.1	Removing and installing the cross member for the dash panel	120
5.2	Removing and installing crash strut	122
<b>6</b>	<b>Interior trims</b>	<b>124</b>
6.1	Removal and installation of the door sill	124

6.2	Assembly overview – foot rest	124
6.3	Removing and installing top trim panel of pillar A	125
6.4	Removing and installing bottom trim panel of A-pillar	127
6.5	Removing and installing top B-pillar trim panel	128
6.6	Removing and installing bottom B-pillar trim panel	129
6.7	Removing and installing the rear door sill trim	130
6.8	Removing and installing trim panel of pillar C	132
6.9	Removing and installing top D-pillar trim panel	133
6.10	Removing and installing foot rest	134
<b>7</b>	<b>Luggage compartment trim panels</b>	<b>136</b>
7.1	Removing and installing boot trim	136
7.2	Removing and installing upper boot trim	136
7.3	Removing and installing lock carrier trim	137
7.4	Summary of components - luggage compartment side trim panel	138
7.5	Removing and installing luggage compartment side trim panel	141
<b>8</b>	<b>Roof trims</b>	<b>146</b>
8.1	Removing and installing moulded headliner	146
8.2	Summary of components: moulded headliner	148
<b>72</b>	<b>Seat frames</b>	<b>150</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>150</b>
1.1	Safety information	150
1.2	Repair notes	150
<b>2</b>	<b>Overview of seat variants</b>	<b>151</b>
2.1	Overview of fitting locations: seat variants	151
<b>3</b>	<b>Front seats</b>	<b>152</b>
3.1	Summary of components: front seat	152
3.2	Summary of components: front backrest	154
3.3	Assembly overview – head restraint	155
3.4	Assembly overview ? seat pan	156
3.5	Assembly overview – bench seat/individual seats	157
3.6	Assembly overview - seat pan, electric adjustment	158
3.7	Assembly overview ? seat height adjustment	160
3.8	Summary of components: lumbar support	162
3.9	Summary of components: seat depth adjustment system	163
3.10	Assembly overview ? seat rake adjustment	164
3.11	Removing and installing front seat	165
3.12	Removing and installing seat height adjustment handle	168
3.13	Removing and installing seat height adjuster	169
3.14	Removing and installing seat rake adjustment unit	171
3.15	Removing and installing the front backrest	172
3.16	Removing and installing head restraint	173
3.17	Removing and installing the headrest guide	174
3.18	Removing and installing lumbar support adjustment switch E176/E177	175
3.19	Removing and installing backrest adjuster	176
3.20	Securing front seat to seat repair stand	176
3.21	Removing and installing the lumbar support	177
3.22	Removing and installing seat adjustment operating unit [E470]/[E471]	178
3.23	Removing and installing bracket for seat trim	179
3.24	Removing and installing seat adjustment control unit	180
3.25	Removing and installing seat longitudinal adjustment motor [V28]/[V31]	181
3.26	Removing and installing inner seat trim	182
3.27	Removing and installing outer seat trim	183
3.28	Removing and installing operating unit for memory settings [E464]/[E465]	185
<b>4</b>	<b>Rear seats</b>	<b>187</b>



4.1	Summary of components - row of seats / individual seats	187
4.2	Assembly overview ? rear seat backrest	187
4.3	Assembly overview ? locking mechanism	189
4.4	Assembly overview – centre armrest	189
4.5	Removing and installing the row of seats / individual seats	190
4.6	Removing and installing seat pan	192
4.7	Removing and installing head restraint	193
4.8	Removing and installing head restraint guide	194
4.9	Removing and installing rear seat backrest	195
4.10	Removing and installing trim for locking mechanism	196
4.11	Removing and installing back panel trim	197
4.12	Removing and installing locking mechanism for rear seat backrest	199
4.13	Removing and installing trim frame for load-through hatch	199
4.14	Removing and installing flap for load-through hatch	201
4.15	Removing and installing centre armrest	202
<b>74</b>	<b>- Seat - padding, covers</b>	<b>203</b>
<b>1</b>	<b>Safety information and repair notes</b>	<b>203</b>
1.1	Safety information	203
1.2	Repair notes	203
<b>2</b>	<b>Front seat covers and padding</b>	<b>204</b>
2.1	Assembly overview ? seat pan cover and padding	204
2.2	Assembly overview ? backrest cover and padding	204
2.3	Assembly overview ? seat heating element	205
2.4	Assembly overview ? backrest heating element	206
2.5	Removing and installing the cover and upholstery for the seat pan	207
2.6	Removing and installing cover and backrest upholstery	209
2.7	Separating seat pan cover from seat pan padding	210
2.8	Separating backrest cover from backrest padding	212
2.9	Removing and installing seat heating element [ZX11]/[ZX13]	213
2.10	Removing and installing backrest heating element [Z116]/[Z117]	215
<b>3</b>	<b>Rear seat covers and padding</b>	<b>217</b>
3.1	Summary of components: rear cover and seat upholstery	217
3.2	Assembly overview ? rear seat backrest cover and padding	217
3.3	Removing and installing cover and padding of rear bench seat	218
3.4	Removing and installing cover and padding of rear seat backrest	219
3.5	Removing and installing intermediate padding, backrest with load-through hatch	222
3.6	Separating rear bench seat cover from padding	222
3.7	Separating rear seat backrest cover from padding	223