



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
3 Repair instructions	3
3.1 Bonding surfaces for self-adhesive components	3
50 - Body - front	5
1 Safety information and repair notes	5
1.1 Safety information	5
1.2 Repair instructions	5
2 Lock carrier	6
2.1 Summary of components: lock carrier	6
2.2 Removing and installing lock carrier	8
2.3 Adjusting and resetting the service position	8
2.4 Removing and installing the frequency link	10
2.5 Removing and installing lock carrier support	10
3 Wings	12
3.1 Summary of components: wing	12
3.2 Removing and installing the wing	12
3.3 Removing and installing end plate	13
3.4 Removing and installing wing strips	14
4 Bulkhead	16
4.1 Summary of components: water box cover	16
4.2 Assembly overview – bulkhead	16
4.3 Removing and installing the plenum chamber cover	17
4.4 Removing and installing front wall	19
55 - Bonnet, rear lid	21
1 Safety information and repair notes	21
1.1 Safety information	21
1.2 Repair instructions	21
2 Bonnet	22
2.1 Summary of components: Front flap	22
2.2 Summary of components: control cable	22
2.3 Removing and installing the front flap	23
2.4 Adjusting the front flap	24
2.5 Removing and installing front flap lock	27
2.6 Removing and installing the striker	27
2.7 Removing and installing the hinge	28
2.8 Removing and installing Bowden cable	28
2.9 Removing and installing bonnet stay	32
2.10 Removing and installing the operating lever for front flap lock	32
3 Rear lid	35
3.1 Removing and installing boot lid	35
3.2 Adjusting boot lid	36
3.3 Adjust adjustment buffer at bottom	37
3.4 Adjusting adjusting buffer at side	38
3.5 Adjusting the striker	38
3.6 Removing and installing Bowden cable for power latching system	39

3.7	Removing and installing power latching for rear lid [VX16]	41
3.8	Removing and installing rear lid handle [EX37]	43
3.9	Removing and installing fastening strip for operational handle (Enyaq Coupe)	45
3.10	Removing and installing adjusting buffer at bottom	45
3.11	Removing and installing adjusting buffer at side	46
3.12	Removing and installing stop for adjusting buffer	46
3.13	Removing and installing striker pin	47
3.14	Removing and installing tailgate seal	47
3.15	Removing and installing gas strut	48
3.16	Preparing gas strut for disposal	49
3.17	Removing and installing the drive unit of the tailgate - VX69/- VX77	50
3.18	Preparing rear lid drive unit [VX69]/rear lid drive unit 2 [VX77] for disposal	51
3.19	Rear lid control unit [J605]	52
3.20	Rear lid lock unit [VX25]	54
3.21	Rear lid power opening control unit [J938]	55
3.22	Summary of components - tailgate	57
4	Charging flap unit	59
4.1	Summary of components: Charging flap unit	59
4.2	Removing and installing charging flap unit:	59
4.3	Removing and installing charging flap	60
4.4	Removing and installing LED module for charging socket 1 [L263]	61
57	Front doors, door components, central locking	62
1	Safety information and repair notes	62
1.1	Repair instructions	62
1.2	Safety information	62
2	Door	63
2.1	Summary of components: door	63
2.2	Removing and installing inner door seal	65
2.3	Removing and installing the outside door seal	67
2.4	Removing and installing door	71
2.5	Adjust door, left-hand drive	74
2.6	Adjusting the locking clamp	76
2.7	Removing and installing door hinge	77
2.8	Removing and installing the door retaining strap	79
3	Door components	81
3.1	Summary of components: door internal parts	81
3.2	Assembly overview – assembly carrier	81
3.3	Summary of components: door handle and door lock	82
3.4	Removing and installing window regulator motor [V147]/[V148]	83
3.5	Removing and installing striker pin	85
3.6	Removing and installing outer door handle -EX6/-EX7	86
3.7	Removing and installing bearing bracket	87
3.8	Removing and installing the door lock	88
3.9	Removing and installing assembly carrier	89
3.10	Removing and installing window guide	90
3.11	Removing and installing window slot inner seal	92
3.12	Removing and installing the outer window channel strip	93
3.13	Removing and installing lock cylinder	94
3.14	Removing and installing Bowden cable for interior door handle	95
3.15	Removing and installing Bowden cable for exterior door handle	96
3.16	Removing and installing the cap on the door handle	97
4	Central locking	101
4.1	Removing and installing door control unit [J386]/[J387]	101
4.2	Removing and installing the battery for the ignition key	102



4.3	Removing and installing actuator for high-voltage charging flap lock [F496]	103
58	Rear doors, door components	105
1	Safety information and repair notes	105
1.1	Safety information	105
1.2	Repair instructions	105
2	Door	106
2.1	Summary of components: door	106
2.2	Removing and installing door	108
2.3	Door adjustment	111
2.4	Adjusting the locking clamp	112
2.5	Removing and installing door hinge	113
2.6	Removing and installing the door retaining strap	115
2.7	Removing and installing inner door seal	116
2.8	Removing and installing the outside door seal	117
3	Door components	122
3.1	Remove and install window lifter	122
3.2	Summary of components: door internal parts	123
3.3	Summary of components: assembly carrier	124
3.4	Summary of components: door handle and door lock	125
3.5	Removing and installing rear window regulator motor [V471]/[V472]	126
3.6	Removing and installing striker pin	128
3.7	Removing and installing outer door handle	129
3.8	Removing and installing bearing bracket	130
3.9	Removing and installing the door lock	131
3.10	Removing and installing assembly carrier	132
3.11	Removing and installing the outer window channel strip	134
3.12	Removing and installing inner window slot seal	135
3.13	Removing and installing the cap on the door handle	136
3.14	Removing and installing the window run	138
60	Sunroof	140
1	Safety information and repair notes	140
1.1	Safety information	140
1.2	Repair instructions	140
2	Sliding sunroof	141
2.1	Assembly overview - Enyaq Coupe glass panel	141
2.2	Assembly overview - sun blind	141
2.3	Assembly overview - Air deflector	143
2.4	Removing and installing frame with sun blind	144
2.5	Removing and installing the draft deflector	145
2.6	Removing and installing the front glass panel	146
2.7	Removing and installing the rear glass panel	148
2.8	Removing and installing sun blind	150
2.9	Removing and installing Enyaq Coupe glass cover	152
2.10	Removing and installing sliding sunroof adjustment control unit [J245]	158
2.11	Adapting sliding sunroof adjustment control unit [J245]	159
2.12	Removing and installing sunroof roller blind motor [V260]	160
2.13	Removing and installing sun blind cables	161
2.14	Manual operation	162
2.15	Minimum drying time for bonded glass panels	163
2.16	Installations instructions for bonded glass panels	163
2.17	Removing and installing sun roof frame	165
2.18	Adjusting the sliding sunroof cover	166
3	Water drain hoses	169



3.1	Summary of components: drain hoses	169
3.2	Removing and installing water drain hoses	169
3.3	Removing and installing front water drain hoses	171
3.4	Cleaning the water drain hoses	173
63	- Bumpers	175
1	Safety information and repair notes	175
1.1	Safety information	175
1.2	Repair instructions	175
2	Bumper, front	176
2.1	Assembly overview: bumper cover	176
2.2	Summary of components: Component parts	176
2.3	Removing and installing the bumper cover	178
2.4	Removing and installing bumper bracket	179
2.5	Removing and installing mounting parts	180
2.6	Repairing bumper cover	181
2.7	Assembly overview: bumper bracket	181
2.8	Install park steering assistant encoders	182
3	Bumper, rear	186
3.1	Assembly overview: bumper cover	186
3.2	Summary of components: Component parts	186
3.3	Removing and installing the bumper cover	187
3.4	Repairing bumper cover	189
3.5	Removing and installing bumper bracket	189
3.6	Install park steering assistant encoders	189
64	- Glazing	190
1	Safety information and repair notes	190
1.1	Safety information	190
1.2	Repair instructions	190
2	Repair notes	191
2.1	Minimum drying times for bonded windows	191
2.2	Window repairs	191
2.3	Installation instructions for bonded windows	191
2.4	Preparing undamaged windows for fitting	193
2.5	Preparing new windows for installing	194
2.6	Preparing body flange for installation	194
2.7	Removing broken window	196
2.8	Cleaning off excess adhesive	197
3	Windscreen	198
3.1	Assembly overview – windscreen	198
3.2	Removing and installing windscreen	198
3.3	Removing broken windscreen	205
4	Rear windscreen	206
4.1	Assembly overview – rear window	206
4.2	Removing and installing rear window	207
4.3	Removing broken rear window	210
5	Side windows	211
5.1	Assembly overview - rear side windows	211
5.2	Removing and installing rear side window	211
5.3	Removing broken rear side window	214
5.4	Removing broken rear side window	214
6	Door windows	215
6.1	Summary of components: front door window	215
6.2	Assembly overview ? fixed front door window	215

6.3	Summary of components: rear door window	216
6.4	Removing and installing front door window	217
6.5	Removing and installing the rear door window	219
6.6	Removing and installing fixed front door window	221
6.7	Removing and installing the rear fixed door window	223
66	- Exterior equipment	225
1	Safety information and repair notes	225
1.1	Safety information	225
1.2	Repair instructions	225
2	Spoiler	226
2.1	Summary of components: spoiler	226
2.2	Removing and installing spoiler	226
2.3	Removing and installing the side spoiler	227
3	Mouldings, trims, extensions	229
3.1	Assembly overview - sill panel trim	229
3.2	Assembly overview: Lower beam panelling	229
3.3	Assembly overview - water deflector strip	230
3.4	Removing and installing door sill panel	231
3.5	Removing and installing lower handle panel	233
3.6	Removing and installing water deflector strip	234
3.7	Removing and installing retaining strip	235
3.8	Removing and installing trim panel for A-pillar	236
3.9	Removing and installing B-pillar trim on door	237
3.10	Removal and installation of the door sill trim	239
3.11	Removing and installing the rear door sill trim	241
3.12	Summary of components: trims	243
4	Underfloor trim panel	247
4.1	Assembly overview – underbody cladding, 55, 62 kWh	247
4.2	Assembly overview – underbody cladding, 82 kWh	249
4.3	Assembly overview – underbody cladding, 82 kWh, GTX	251
4.4	Removing and installing high-voltage battery skid plate, 55, 62 kWh	253
4.5	Removing and installing high-voltage battery skid plate, 82 kWh	255
4.6	Removing and installing front underbody cladding	256
4.7	Removing and installing side underbody cladding, 55 kWh, 62 kWh	257
4.8	Removing and installing side underbody cladding, 82 kWh	257
4.9	Removing and installing centre underbody cladding	259
4.10	Removing and installing rear underbody cladding	259
4.11	Removing and installing skid plate	260
4.12	Removing and installing underbody towing eye	261
4.13	Removing and installing power unit skid plate	263
4.14	Removing and installing power unit skid plate	264
4.15	Removing and installing underbody cladding, rear centre	265
5	Roof moulding and roof railing	266
5.1	Summary of components: roof rack	266
5.2	Removing and installing roof rack	266
6	Exterior mirror	268
6.1	Assembly overview – exterior mirror	268
6.2	Removing and installing exterior mirror -VX4/-VX5.	271
6.3	Removing and installing mirror glass	272
6.4	Removing and installing mirror adjustment unit	273
6.5	Removing and installing upper mirror cover	274
6.6	Removing and installing mirror frame	275
6.7	Removing and installing lower mirror cover	277
7	Wheel housing liner	278



7.1	Assembly overview – front wheel housing liner	278
7.2	Assembly overview – rear wheel housing liner	278
7.3	Removing and installing front wheel housing liner	279
7.4	Removing and installing rear wheel housing liner	281
7.5	Removing and installing side member trim	282
8	Lettering and emblems	284
8.1	General information about replacing lettering and emblems	284
8.2	Removing and installing the front emblem	285
8.3	Dimensions - Letterings and emblems at rear of vehicle	285
8.4	Replacing letterings and emblems on rear of vehicle	287
8.5	Replacing letterings and emblems on the sides	288
9	Towing bracket	289
9.1	Removing and installing trailer detector control unit [J345]	289
9.2	Assembly overview: trailer hitch	290
9.3	Removing and installing hinged tow attachment ball head motor [V317]	291
9.4	Removing and installing hinged towing bracket [VX15]	292