

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Tools	2
2.1 Tools	2
3 Vehicle identification data	3
3.1 Vehicle identification data	3
4 Safety information	4
4.1 Safety information - body repairs	4
4.2 The following body repairs require the HV electrical system to be de-energised	4
4.3 When the high-voltage battery is removed, observe the following:	5
5 Body parts and materials	6
5.1 Galvanised body parts, high/ultra high-strength and hot-formed body panels	6
5.2 Moulded foam inserts, Enyaq	7
5.3 Moulded foam inserts, Enyaq Coupé	8
6 Technical data	9
6.1 Body dimensions	9
7 Alignment jig	21
7.1 Procedure for damage to the body structure	21
7.2 Straightening bench	21
7.3 Portal gauge	21
50 - Body - front	22
1 Safety information and repair notes	22
1.1 Safety information	22
1.2 Repair instructions	22
2 Overview of fitting locations	23
2.1 Overview of fitting locations - body, front	23
3 Longitudinal member cross panel	25
3.1 Assembly overview – front longitudinal member end plate	25
3.2 Replace end plate for front longitudinal member	25
4 Longitudinal member	28
4.1 Assembly overview – front left longitudinal member (part section)	28
4.2 Assembly overview – front left longitudinal member, part section (second separating cut)	28
4.3 Assembly overview – front right longitudinal member (part section)	29
4.4 Assembly overview – front right longitudinal member, part section (second separating cut)	30
4.5 Assembly overview: Top longitudinal member	31
4.6 Assembly overview: longitudinal member at the top inside	32
4.7 Replacing the front left longitudinal member, part	33
4.8 Replacing the front left longitudinal member, part - second separating cut	37
4.9 Replacing the front right longitudinal member, part section	44
4.10 Replacing the front right longitudinal member, part section - second separating cut	48
4.11 Replacing upper longitudinal member	55
4.12 Replacing the inner top longitudinal member	58
5 Battery tray	62
5.1 Assembly overview - battery tray	62
5.2 Replacing battery carrier	62
6 Front wheel housing	65
6.1 Assembly overview - front wheel housing	65
6.2 Assembly overview - front wheel housing (part section)	65



6.3	Replacing the front wheelhouse	66
6.4	Replace front wheel arch, section	72
51	- Body - centre	78
1	Safety information and repair notes	78
1.1	Safety information	78
1.2	Repair instructions	78
2	Overview of fitting locations	79
2.1	Overview of fitting locations - body, centre	79
3	Roof	81
3.1	Assembly overview, vehicle without glass panel	81
3.2	Assembly overview, vehicle with glass panel	81
3.3	Assembly overview - roof side member, Enyaq	82
3.4	Assembly overview - roof side member, Enyaq Coupé	83
3.5	Replace roof, vehicle without glass panel roof	84
3.6	Replace roof, vehicle with glass panel roof	92
3.7	Replacing the roof side member, Enyaq	99
3.8	Replacing the roof side member, Enyaq Coupé	102
4	A-pillar	106
4.1	Assembly overview – A-pillar	106
4.2	Assembly overview: A-pillar reinforcement	106
4.3	Replacing the A-pillar	107
4.4	Replacing reinforcement of A-pillar, part	112
5	B-pillar	116
5.1	Assembly overview: B-pillar	116
5.2	Assembly overview – B-pillar reinforcement	116
5.3	Replacing the B-pillar	117
5.4	Replacing reinforcement of B pillar	120
6	Side member	123
6.1	Assembly overview – outer side member	123
6.2	Assembly overview – side member reinforcement	123
6.3	Assembly overview - side panel reinforcement (crash bar)	124
6.4	Replacing the outside bottom side rail	125
6.5	Reinforcement for side rail	128
6.6	Replacing the side panel reinforcement (crash bar)	132
53	- Body - rear	136
1	Safety information and repair notes	136
1.1	Safety information	136
1.2	Repair instructions	136
2	Overview of fitting locations	137
2.1	Overview of installation locations: bodywork, rear	137
3	Side panel	138
3.1	Replacing the side panel, part section, Enyaq	138
3.2	Replacing the side panel, part section, Enyaq Coupé	141
4	Rear cross member	145
4.1	Replacing the rear cross member, Enyaq	145
4.2	Replacing the rear cross member, Enyaq Coupé	147
5	Rear cross panel	151
5.1	Replacing the rear cross panel, Enyaq	151
5.2	Replacing the rear cross panel, Enyaq Coupé	153
6	Luggage compartment floor	157
6.1	Assembly overview - floor panel reinforcement	157
6.2	Assembly overview - centre luggage compartment floor	157



6.3	Assembly overview - rear luggage compartment floor	158
6.4	Assembly overview - luggage compartment floor cross member	159
6.5	Replacing the reinforcement of the floor panel	160
6.6	Replacing the luggage compartment floor, centre	162
6.7	Replace rear boot floor	165
6.8	Replacing the cross member for the luggage compartment floor	168
7	Rear longitudinal member	172
7.1	Assembly overview - cover plate for longitudinal member	172
7.2	Assembly overview – rear longitudinal member, part section	172
7.3	Assembly overview – rear longitudinal member, part section (second separating cut)	173
7.4	Replacing the longitudinal member cover plate	174
7.5	Replacing rear longitudinal member, part	177
7.6	Replacing the rear longitudinal member, part section - second separating cut	182
8	Rear wheel housing	189
8.1	Replace rear wheel arch	189
9	Tail light mounting	192
9.1	Replacing the tail light mounting, Enyaq	192
9.2	Replacing the tail light mounting, Enyaq Coupé	194
10	Replacing the separation reinforcement	198
11	D-pillar	199
11.1	Replacing the D-pillar reinforcement, Enyaq	199
11.2	Replacing the D-pillar reinforcement, Enyaq Coupé	201
11.3	Replacing the D-pillar reinforcement, Enyaq	203
11.4	Replacing the D-pillar reinforcement, Enyaq Coupé	205