



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Technical data</b>	<b>3</b>
3.1 Allocation gearbox ? motor	3
3.2 Capacities	3
<b>34 - Controls, housing</b>	<b>4</b>
<b>1 Safety information and repair notes</b>	<b>4</b>
1.1 Safety information	4
1.2 Repair notes	4
<b>2 Shift mechanism</b>	<b>5</b>
2.1 Summary of components - controls for shift mechanism and cover	5
2.2 Removing and Installing the controls for the shift mechanism	5
<b>3 Removing and installing gearbox</b>	<b>7</b>
3.1 Removing gearbox	7
3.2 Installing gearbox	7
<b>4 Gearbox housing, clutch housing</b>	<b>8</b>
4.1 Assembly overview - gearbox housing	8
4.2 Removing and installing cap	8
<b>5 Gear oil</b>	<b>10</b>
5.1 Checking gear oil level	10
<b>39 - Final drive - differential</b>	<b>12</b>
<b>1 Safety information and repair notes</b>	<b>12</b>
1.1 Safety information	12
1.2 Repair notes	12
<b>2 Seals</b>	<b>13</b>
2.1 Assembly overview ? seals	13
2.2 Renewing left seal	13
2.3 Renewing right seal	15