

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	3
3.1 Allocation gearbox – motor	3
3.2 Capacities	3
34 - Controls, housing	4
1 Safety information and repair notes	4
1.1 Safety information	4
1.2 Repair instructions	4
2 Removing and installing gearbox	5
2.1 Removing gearbox	5
2.2 Installing gearbox	5
3 Gearbox housing, clutch housing	6
3.1 Assembly overview - gearbox housing	6
4 Gear oil	7
4.1 Checking gear oil level	7
4.2 Draining and filling gear oil	7
39 - Final drive - differential	10
1 Safety information and repair notes	10
1.1 Safety information	10
1.2 Repair instructions	10
2 Oil seals	11
2.1 Assembly overview – seals	11
2.2 Renewing left seal	11
2.3 Renewing right seal	12