

001 - Headlights , (8IT)	1-5
1. Headlights , (8IT)	1
2. Fuse holder A, Fuse holder B, Fuse holder C	2
3. Operating unit for lighting, Onboard supply control unit, Data bus diagnostic interface	3
4. Onboard supply control unit, Front left headlight	4
5. Front right headlight	5
002 - Headlights , (8IV)	6-11
1. Headlights , (8IV)	6
2. Fuse holder A, Fuse holder B, Fuse holder C	7
3. Operating unit for lighting, Rear left vehicle level sender, Onboard supply control unit, Data bus diagnostic interface	8
4. Onboard supply control unit, Front left headlight	9
5. Front right headlight	10
6.	11
003 - Tail light clusters , (8VG)	12-15
1. Tail light clusters , (8VG)	12
2. Onboard supply control unit, Left tail light cluster, Left tail light cluster 2	13
3. Onboard supply control unit, Right tail light cluster	14
4. Onboard supply control unit, High-level brake light bulb, Left number plate light, Right number plate light	15
004 - Tail light clusters , (8VP)	16-19
1. Tail light clusters , (8VP)	16
2. Onboard supply control unit, Left tail light cluster, Left tail light cluster 2	17
3. Onboard supply control unit, Right tail light cluster, Right tail light cluster 2	18
4. Onboard supply control unit, Data bus diagnostic interface, High-level brake light bulb, Left number plate light, Right number plate light	19
005 - Interior lights	20-28
1. Interior lights	20
2. Fuse holder A, Fuse holder C	21
3.	22
4. Onboard supply control unit, Front interior light, Automatic anti-dazzle interior mirror	23
5. Onboard supply control unit, Rear interior light	24
6. Onboard supply control unit, Rear left reading light, Rear right reading light	25
7. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Centre console rear storage compartment illumination bulb, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	26
8. Onboard supply control unit, Luggage compartment light, Left luggage compartment light, Right luggage compartment light	27
9. Onboard supply control unit, Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	28
006 - Electromechanical power steering	29-30
1. Electromechanical power steering	29
2. Power steering control unit, Data bus diagnostic interface, Fuse holder A	30
007 - Airbag systems	31-41
1. Airbag systems	31
2. Airbag control unit, Fuse holder A, Fuse holder C	32
3. High-voltage battery 1, Coil connector, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	33
4. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Front interior light	34
5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Igniter for central airbag for occupant collision protection, driver side	35
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	36
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	37
8. Airbag control unit, Front left seat belt, Driver seat belt tensioner igniter 1, Igniter for driver side seat belt tensioner 2	38
9. Airbag control unit, Front right seat belt, Front passenger seat belt tensioner igniter 1, Igniter for front passenger side seat belt tensioner 2	39
10. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	40
11. Airbag control unit, Onboard supply control unit, Emergency call module control unit and communication unit. Diagnostic connection	41

008 - Seat belt warning system , (9P4)	42-45
1. Seat belt warning system , (9P4)	42
2. Driver side belt switch, Seat occupied sensor on driver side, Airbag control unit, Fuse holder C	43
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	44
4. Twin belt buckle, Belt switch for seat row 2, right, Rear left seat occupied sensor, seat row 2, Rear right seat occupied sensor, seat row 2, Rear centre seat occupied sensor, seat row 2, Airbag control unit	45
009 - Anti-lock brake system (ABS)	46-55
1. Anti-lock brake system (ABS)	46
2. ABS control unit, Fuse holder B	47
3. ABS control unit	48
4. ABS control unit	49
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	50
6. Power and control electronics for electric drive, ABS control unit, Left parking brake motor, Right parking brake motor	51
7. Parking brake button, ABS control unit	52
8. ABS control unit, Engine/motor control unit	53
9. ABS control unit, Brake servo	54
10. Front right brake pad wear sender, ABS control unit, Onboard supply control unit, Data bus diagnostic interface	55
010 - Dynamic Chassis Control , (2I0)	56-60
1. Dynamic Chassis Control , (2I0)	56
2. Centre switch module in dash panel, Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder A, Fuse holder C	57
3. Front left vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve	58
4. Front right vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	59
5. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	60
011 - Window wash/wipe system, heated washer jets, headlight washer system	61-66
1. Window wash/wipe system, heated washer jets, headlight washer system	61
2. Fuse holder A, Fuse holder B, Fuse holder C	62
3. Rain and light sensor, Wiper motor control unit, Onboard supply control unit	63
4. Onboard supply control unit, Rear window wiper motor	64
5. Windscreen washer fluid level sender, Onboard supply control unit, Headlight washer system pump, Windscreen and rear window washer pump	65
6. Left washer jet heater element, Right washer jet heater element	66
012 - Heated rear window	67-68
1. Heated rear window	67
2. Heated rear window relay, Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Fuse holder A, Fuse holder C, Rear window	68
013 - Horn	69-70
1. Horn	69
2. Treble horn, Horn relay, Onboard supply control unit, Fuse holder A, Fuse holder B	70
014 - Anti-theft alarm system , (7AL)	71-72
1. Anti-theft alarm system , (7AL)	71
2. Bonnet contact switch, Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Data bus diagnostic interface, Fuse holder A, Fuse holder C	72
015 - Rear parking aid (PDC) , (7X1)	73-77
1. Rear parking aid (PDC) , (7X1)	73
2. Parking aid control unit, Fuse holder C	74
3. Rear left parking aid sender, Rear centre left parking aid sender, Parking aid control unit	75
4. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	76
5. Parking aid control unit, Data bus diagnostic interface	77
016 - Front and rear parking aid (PDC) , (7X2)	78-84
1. Front and rear parking aid (PDC) , (7X2)	78
2. Centre switch module in dash panel, Parking aid control unit, Onboard supply control unit, Fuse holder C	79
3. Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	80
4. Front right parking aid sender, Front centre right parking aid sender, Parking aid control unit	81
5. Rear left parking aid sender. Rear centre left parking aid sender. Parking aid control unit	82

6. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	83
7. Parking aid control unit, Data bus diagnostic interface	84
017 - Parking aid (PDC) with park assist steering (Park Assist) , (8A2),(8A5)	85-93
1. Parking aid (PDC) with park assist steering (Park Assist) , (8A2),(8A5)	85
2. Centre switch module in dash panel, Onboard supply control unit, Park assist steering control unit, Fuse holder C	86
3. Front centre left parking aid sender, Front left parking aid sender, Park assist steering control unit	87
4. Front right parking aid sender, Front centre right parking aid sender, Park assist steering control unit	88
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Park assist steering control unit	89
6. Rear left parking aid sender, Rear centre left parking aid sender, Park assist steering control unit	90
7. Rear centre right parking aid sender, Rear right parking aid sender, Park assist steering control unit	91
8. Rear left park assist steering sender, Rear right park assist steering sender, Park assist steering control unit	92
9. Power steering control unit, Data bus diagnostic interface, Park assist steering control unit	93
018 - Trailer coupling , (1D7),(1M6),(1M9)	94-97
1. Trailer coupling , (1D7),(1M6),(1M9)	94
2. Trailer detector control unit, Fuse holder A, Fuse holder C	95
3. Trailer detector control unit, Trailer towing coupling	96
4. Electric hinged tow coupling attachment button, Trailer detector control unit, Onboard supply control unit, Trailer towing coupling	97
019 - Steering column electronics , (2FD)	98-102
1. Steering column electronics , (2FD)	98
2. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder A, Fuse holder C	99
3. Left steering column switch, Steering column electronics control unit	100
4. Left steering column switch, Coil connector, Horn plate, Airbag control unit, Steering column electronics control unit, Engine/motor control unit	101
5. Right steering column switch, Steering column electronics control unit	102
020 - Multifunction steering wheel , (2FD),(2FT),(2PT)	103-106
1. Multifunction steering wheel , (2FD),(2FT),(2PT)	103
2. Coil connector, Horn plate, Steering column electronics control unit, Fuse holder A, Fuse holder C	104
3. Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Steering wheel, Heated steering wheel sender	105
4. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Steering wheel, Sensor module, Multifunction steering wheel control unit, Control unit for steering wheel contact detection	106
021 - Heated steering wheel , (2FT),(2PT)	107-111
1. Heated steering wheel , (2FT),(2PT)	107
2. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder A, Fuse holder C	108
3. Left steering column switch, Steering column electronics control unit	109
4. Left steering column switch, Coil connector, Airbag control unit, Steering column electronics control unit, Engine/motor control unit, Airbag igniter on driver side	110
5. Right steering column switch, Steering wheel, Coil connector, Horn plate, Steering column electronics control unit, Heated steering wheel	111
022 - 12 V sockets	112-113
1. 12 V sockets	112
2. Fuse holder A, Fuse holder C, 12 V socket	113
023 - USB charging sockets , (U9C)	114-115
1. USB charging sockets , (U9C)	114
2. Onboard supply control unit, Relay for power sockets, Fuse holder A, Fuse holder C, USB charging socket 1	115
024 - 230 V socket , (9Z3)	116-117
1. 230 V socket , (9Z3)	116
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Interior socket, 230 V, 110 V, DC/AC converter with socket, 12 V - 230 V	117
025 - Dash panel insert	118-120
1. Dash panel insert	118
2. Control unit with display unit for driver information system, Fuse holder A, Fuse holder C	119
3. Ambient temperature sensor. Onboard supply control unit. Data bus diagnostic interface. Control	120

unit 1 for information electronics, Control unit with display unit for driver information system	
026 - Head-up display , (KS3)	121-123
1. Head-up display , (KS3)	121
2. Control unit for head-up display, Fuse holder A, Fuse holder C	122
3. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for head-up display, Control unit with display unit for driver information system	123
027 - Data bus diagnostic interface and diagnostic connector	124-126
1. Data bus diagnostic interface and diagnostic connector	124
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Diagnostic connection	125
3. Airbag control unit, Data bus diagnostic interface, Diagnostic connection	126
028 - Convenience system , (4H3)	127-145
1. Convenience system , (4H3)	127
2. Fuse holder A, Fuse holder C	128
3. Driver door control unit	129
4. Driver door control unit, Driver door lock unit	130
5. Operating unit for window regulator in driver door, Driver door control unit	131
6. Driver door control unit, Driver side interior door handle illumination bulb, Driver door storage compartment illumination bulb, Driver side window regulator motor	132
7. Exterior mirror adjuster, Centre switch module in dash panel, Driver door control unit, Central locking SAFELOCK function warning lamp	133
8. Driver door control unit, Driver side exterior mirror	134
9. Front passenger door control unit	135
10. Front passenger door control unit, Front passenger door lock unit	136
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	137
12. Front passenger door control unit, Front passenger side interior door handle illumination bulb, Front passenger door storage compartment illumination bulb	138
13. Front passenger door control unit, Passenger side exterior mirror	139
14. Onboard supply control unit, Rear left interior door handle illumination bulb, Rear left door lock unit	140
15. Rear driver side window regulator button, Onboard supply control unit, Rear left window regulator motor	141
16. Onboard supply control unit, Rear right interior door handle illumination bulb, Rear right door lock unit	142
17. Rear passenger side window regulator button, Onboard supply control unit, Rear right window regulator motor	143
18. Onboard supply control unit	144
19. Rear lid handle release button, Actuator for high-voltage charging flap lock 1, Onboard supply control unit, Rear lid lock unit	145
029 - Convenience system , (4H5)	146-166
1. Convenience system , (4H5)	146
2. Fuse holder A, Fuse holder C	147
3. Driver door control unit	148
4. Driver door control unit, Driver door lock unit	149
5. Operating unit for window regulator in driver door, Driver door control unit	150
6. Driver door control unit, Driver side interior door handle illumination bulb, Driver door storage compartment illumination bulb, Driver side window regulator motor	151
7. Exterior mirror adjuster, Centre switch module in dash panel, Driver door control unit, Central locking SAFELOCK function warning lamp	152
8. Driver door control unit, Driver side exterior mirror	153
9. Front passenger door control unit	154
10. Front passenger door control unit, Front passenger door lock unit	155
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	156
12. Front passenger door control unit, Front passenger side interior door handle illumination bulb, Front passenger door storage compartment illumination bulb	157
13. Front passenger door control unit, Passenger side exterior mirror	158
14. Rear left door control unit	159
15. Rear left door control unit, Rear left interior door handle illumination bulb, Rear left door lock unit	160
16. Rear driver side window regulator button, Rear left door control unit, Rear left window regulator motor	161
17. Rear right door control unit	162
18. Rear right door control unit, Rear right interior door handle illumination bulb, Rear right door lock unit	163
19. Rear passenger side window regulator button. Rear right door control unit. Rear right window	164

regulator motor	
20. Onboard supply control unit	165
21. Rear lid handle release button, Actuator for high-voltage charging flap lock 1, Onboard supply control unit, Rear lid lock unit	166
030 - Electrically operated rear lid , (4E6),(4E7)	167-174
1. Electrically operated rear lid , (4E6),(4E7)	167
2. Rear lid control unit, Fuse holder A, Fuse holder C	168
3. Rear lid closure button, Rear lid warning buzzer, Rear lid control unit	169
4. Rear lid remote release switch, Driver door control unit, Rear lid control unit, Power latching for rear lid	170
5. Rear lid control unit, Rear lid drive unit	171
6. Rear lid control unit, Rear lid drive unit 2	172
7. Onboard supply control unit, Rear lid lock unit	173
8. Rear lid power opening sender, Rear lid power opening sender 2, Onboard supply control unit, Data bus diagnostic interface, Rear lid power opening control unit	174
031 - Entry and start authorisation , (4I6),(4I7)	175-178
1. Entry and start authorisation , (4I6),(4I7)	175
2. Interface for entry and start system, Fuse holder A, Fuse holder C	176
3. Starter button, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	177
4. Onboard supply control unit, Data bus diagnostic interface, Interface for entry and start system, Storage compartment with interface for mobile telephone	178
032 - Entry and start authorisation , (4K5),(4K6)	179-188
1. Entry and start authorisation , (4K5),(4K6)	179
2. Interface for entry and start system, Fuse holder A, Fuse holder C	180
3. Starter button, Control unit for electronic steering column lock, Interface for entry and start system	181
4. Driver exterior door handle, Interface for entry and start system, Driver side aerial for entry and start system	182
5. Front passenger exterior door handle, Interface for entry and start system, Passenger side aerial for entry and start system	183
6. Rear left exterior door handle, Rear right exterior door handle, Interface for entry and start system	184
7. Interface for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	185
8. Interface for entry and start system, Control unit for break-in protection, Control unit 2 for break-in protection	186
9. Interface for entry and start system, Control unit 3 for break-in protection, Control unit 4 for break-in protection	187
10. Onboard supply control unit, Data bus diagnostic interface, Interface for entry and start system, Storage compartment with interface for mobile telephone	188
033 - Multimedia system	189-198
1. Multimedia system	189
2. Control unit 1 for information electronics, Fuse holder A, Fuse holder C	190
3. Data bus diagnostic interface, Control unit 1 for information electronics	191
4. Control unit 1 for information electronics, Control unit for head-up display, Control unit with display unit for driver information system	192
5. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	193
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	194
7. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	195
8. Control unit 1 for information electronics, USB hub	196
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Front interior light	197
10. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	198
034 - Sound system , (9VS),(9VH)	199-204
1. Sound system , (9VS),(9VH)	199
2. Digital sound package control unit, Fuse holder A, Fuse holder C	200
3. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	201
4. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	202
5. Digital sound package control unit. Rear left treble loudspeaker. Rear left bass loudspeaker.	203

Rear right treble loudspeaker, Rear right bass loudspeaker	
6. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Subwoofer	204
035 - Emergency call module , (NZ2),(NZ4)	205-209
1. Emergency call module , (NZ2),(NZ4)	205
2. Emergency call module control unit and communication unit, Fuse holder A, Fuse holder C	206
3. Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Front interior light	207
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, LTE aerial 2	208
5. Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	209
036 - Internet access , (GW2)	210-212
1. Internet access , (GW2)	210
2. Data bus diagnostic interface, Internet access control unit, Fuse holder A, Fuse holder C	211
3. Internet access control unit, Roof aerial, Data transmission aerial	212
037 - Mobile telephone systems , (9IJ),(9ZV)	213-215
1. Mobile telephone systems , (9IJ),(9ZV)	213
2. Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Fuse holder A, Fuse holder C	214
3. Onboard supply control unit, Control unit 1 for information electronics, Interface for entry and start system, Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, LTE aerial 1	215
038 - Electric drive system, motor control unit , EBJA,EBJC,EBRA	216-222
1. Electric drive system, motor control unit , EBJA,EBJC,EBRA	216
2. Main relay, Fuse holder A, Fuse holder B	217
3. Fuse holder C	218
4. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	219
5. Temperature sensor, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	220
6. Engine/motor control unit, Brake servo, Radiator fan, Coolant pump for low-temperature circuit, Control motor for radiator roller blind	221
7. Selector mechanism	222
039 - Electric drive system for rear axle , EBJA,EBJC	223-226
1. Electric drive system for rear axle , EBJA,EBJC	223
2. Power and control electronics for electric drive, Fuse holder A, Fuse holder B, Fuse holder C	224
3. High-voltage battery 1, Power and control electronics for electric drive, ABS control unit, Data bus diagnostic interface	225
4. Power and control electronics for electric drive, Three-phase current drive	226
040 - High-voltage battery system , (J9B),(J9C),(J9D)	227-249
1. High-voltage battery system , (J9B),(J9C),(J9D)	227
2. Fuse holder A, Fuse holder B, Fuse holder C	228
3. Airbag control unit, Data bus diagnostic interface, PTC heater element 3	229
4. Voltage converter	230
5. Voltage converter, Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery	231
6. Charging unit 1 for high-voltage battery, High-voltage network wiring junction, High-voltage network wiring junction 2, High-voltage network wiring junction 3, High-voltage network wiring junction 4, Air conditioner compressor, High-voltage heater (PTC)	232
7. High-voltage battery 1	233
8. High-voltage battery 1	234
9. High-voltage battery 1, Power and control electronics for electric drive, High-voltage battery charging socket 1	235
10. High-voltage battery 1	236
11. High-voltage battery 1	237
12. High-voltage battery 1	238
13. High-voltage battery 1	239
14. High-voltage battery 1	240
15. High-voltage battery 1	241
16. High-voltage battery 1	242
17. High-voltage battery 1	243
18. High-voltage battery 1	244
19. High-voltage battery 1	245
20. High-voltage battery 1	246
21. High-voltage battery 1	247
22. High-voltage battery 1	248

23. High-voltage battery 1	249
041 - High-voltage battery charging , (ES7)	250-255
1. High-voltage battery charging , (ES7)	250
2. Charging unit 1 for high-voltage battery, Fuse holder A, Fuse holder B	251
3. High-voltage battery 1, Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1	252
4. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	253
5. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, High-voltage battery charging socket 1	254
6. Charging unit 1 for high-voltage battery, Data bus diagnostic interface, LED module for charging socket 1	255
042 - Thermal management , (9M0)	256-262
1. Thermal management , (9M0)	256
2. Air conditioning system relay, Fuse holder A, Fuse holder B	257
3. Fuse holder B, Fuse holder C	258
4. Heater and air conditioning system control unit	259
5. Refrigerant pressure and temperature sender, Pressure sender for refrigerant circuit, Engine/motor control unit, Refrigerant shut-off valve for heater and air conditioning unit	260
6. Air quality sensor, Vehicle interior temperature sensor, Refrigerant expansion valve 1, Air conditioner compressor	261
7. High-voltage battery 1, Coolant pump for low-temperature circuit, Coolant pump for high-voltage battery, Mixing valve for high-voltage battery pre-heating	262
043 - Thermal management , (9M3)	263-275
1. Thermal management , (9M3)	263
2. Air conditioning system relay, Fuse holder A, Fuse holder B	264
3. Fuse holder B, Fuse holder C	265
4. Heater and air conditioning system control unit	266
5. Engine/motor control unit	267
6. Air conditioner compressor	268
7. Refrigerant pressure and temperature sender, Refrigerant pressure and temperature sender 3, Vehicle interior temperature sensor	269
8. High-voltage battery 1, Coolant pump for low-temperature circuit, Coolant pump for high-voltage battery, Mixing valve for high-voltage battery pre-heating, Mixing valve 2 for high-voltage battery pre-heating	270
9. Sensor for interior carbon dioxide concentration, External air quality and air humidity sensor	271
10. Refrigerant expansion valve 1, Refrigerant expansion valve 2, Refrigerant expansion valve 3	272
11. Refrigerant shut-off valve 2, Refrigerant shut-off valve 3, Refrigerant shut-off valve 4	273
12. Refrigerant pressure and temperature sender 2, Refrigerant shut-off valve 5, Refrigerant shut-off valve 1	274
13. Refrigerant pressure and temperature sender 4, Refrigerant pressure and temperature sender 5	275
044 - Auxiliary air heater (PTC)	276-278
1. Auxiliary air heater (PTC)	276
2. Heater and air conditioning system control unit, Fuse holder C, High-voltage heater (PTC)	277
3. High-voltage battery 1	278
045 - High-voltage heater (PTC) for high-voltage battery system , (J9B),(J9C),(J9D)	279-281
1. High-voltage heater (PTC) for high-voltage battery system , (J9B),(J9C),(J9D)	279
2. Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B	280
3. High-voltage battery 1, Battery regulation control unit, PTC heater element 3	281
046 - Centre console switches	282-284
1. Centre console switches	282
2. Centre switch module in dash panel, Onboard supply control unit, Fuse holder A, Fuse holder C	283
3. Centre switch module in dash panel	284
047 - Fans for control units	285-286
1. Fans for control units	285
2. Onboard supply control unit, Fan for control unit	286
048 - Automatic anti-dazzle interior and exterior mirrors	287-288
1. Automatic anti-dazzle interior and exterior mirrors	287
2. Driver door control unit, Onboard supply control unit, Fuse holder C, Driver side exterior mirror, Front interior light, Automatic anti-dazzle interior mirror	288
049 - Radiator fan	289-291
1. Radiator fan	289
2. Main relay, Fuse holder A, Fuse holder B	290
3. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit, Radiator fan, Control motor for radiator roller blind	291
050 - Seat and mirror adjustment with memory function , (3PH),(3PN)	292-310
1. Seat and mirror adjustment with memory function . (3PH).(3PN)	292

2. Driver seat adjustment control unit, Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, Fuse holder A, Fuse holder C	293
3. Operating unit for front left seat adjustment, Driver seat adjustment control unit	294
4. Operating unit 2 for front left seat adjustment, Driver seat adjustment control unit	295
5. Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	296
6. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor, Driver seat rake adjustment motor	297
7. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	298
8. Exterior mirror adjuster, Driver door control unit	299
9. Driver door control unit, Driver side exterior mirror	300
10. Driver door control unit, Driver side exterior mirror	301
11. Front passenger door control unit, Passenger side exterior mirror	302
12. Front passenger door control unit, Passenger side exterior mirror	303
13. Front passenger seat adjustment control unit	304
14. Operating unit for front right seat adjustment, Front passenger seat adjustment control unit	305
15. Operating unit 2 for front right seat adjustment, Front passenger seat adjustment control unit	306
16. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment control unit	307
17. Front passenger seat adjustment control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor, Front passenger seat rake adjustment motor	308
18. Front passenger seat adjustment control unit, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	309
19. Onboard supply control unit	310
051 - Background lighting , (QQ8),(QQ9)	311-315
1. Background lighting , (QQ8),(QQ9)	311
2. Onboard supply control unit, Light 1 for dashboard background lighting, Light 3 for dashboard background lighting	312
3. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for dashboard background lighting	313
4. Onboard supply control unit, Light for driver door background lighting, Light for passenger door background lighting	314
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	315
052 - Seat heating , (4A3),(4A4)	316-321
1. Seat heating , (4A3),(4A4)	316
2. Fuse holder A, Fuse holder C	317
3. Heater and air conditioning system control unit, Seat heating (driver side)	318
4. Heater and air conditioning system control unit, Seat heating (front passenger side)	319
5. Operating and display unit for rear air conditioning system, Rear left seat heating, Heated backrest for rear left seat	320
6. Operating and display unit for rear air conditioning system, Rear right seat heating, Heated backrest for rear right seat	321
053 - Seat ventilation , (4D3)	322-325
1. Seat ventilation , (4D3)	322
2. Fuse holder A, Fuse holder C	323
3. Onboard supply control unit, Front left seat backrest fan 1, Front left seat cushion fan 1	324
4. Front right seat backrest fan 1, Front right seat cushion fan 1	325
054 - Climatronic , (KH4),(KH7)	326-339
1. Climatronic , (KH4),(KH7)	326
2. Air conditioning system relay, Fuse holder A, Fuse holder B	327
3. Heater and air conditioning system control unit, Fuse holder C	328
4. Operating and display unit for rear air conditioning system, Vehicle interior temperature sensor, Data bus diagnostic interface, Heater and air conditioning system control unit	329
5. Heater and air conditioning system control unit, Refrigerant shut-off valve for heater and air conditioning unit	330
6. Heater and air conditioning system control unit	331
7. Refrigerant pressure and temperature sender, Pressure sender for refrigerant circuit, Heater and air conditioning system control unit, High-voltage heater (PTC)	332
8. Air quality sensor, Left footwell vent temperature sender, Right footwell vent temperature sender, External air quality and air humidity sensor, Heater and air conditioning system control unit	333
9. Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Evaporator temperature sensor, Heater and air conditioning system control unit	334
10. Heater and air conditioning system control unit, Front left temperature flap, Defroster flap	335
11. Heater and air conditioning system control unit. Front right temperature flap. Front left air	336

distribution flap	
12. Heater and air conditioning system control unit, Front right air distribution flap, Rear temperature flap	337
13. Fresh air blower control unit, Fresh air and air recirculation flap	338
14. High-voltage battery 1, Air conditioner compressor	339
055 - Panoramic sliding sunroof , (3FU)	340-343
1. Panoramic sliding sunroof , (3FU)	340
2. Sliding sunroof adjustment control unit, Fuse holder A, Fuse holder C	341
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	342
4. Sliding sunroof adjustment control unit, Onboard supply control unit, Front interior light	343
056 - Engine sound generator	344-345
1. Engine sound generator	344
2. Data bus diagnostic interface, Engine sound generator module 1, Fuse holder A, Fuse holder B	345
057 - Heated windscreen , (4GW)	346-347
1. Heated windscreen , (4GW)	346
2. Heated windscreen relay, Heater and air conditioning system control unit, Fuse holder A, Fuse holder B, Heated windscreen	347
058 - Front camera for driver assist systems	348-349
1. Front camera for driver assist systems	348
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder A, Fuse holder C, Windscreen heater for front sensors	349
059 - Reversing camera (Rear Assist) , (KA2)	350-351
1. Reversing camera (Rear Assist) , (KA2)	350
2. Data bus diagnostic interface, Reversing camera system control unit, Fuse holder A, Fuse holder C	351
060 - Overhead view camera , (KA6)	352-355
1. Overhead view camera , (KA6)	352
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse holder A, Fuse holder C	353
3. Control unit for overhead view camera, Front overhead view camera, Rear overhead view camera	354
4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	355
061 - Adaptive cruise control , (8J3),(8J5)	356-358
1. Adaptive cruise control , (8J3),(8J5)	356
2. Adaptive cruise control unit, Fuse holder A, Fuse holder B	357
3. Adaptive cruise control unit, Data bus diagnostic interface	358
062 - Lane change assist , (7Y1)	359-362
1. Lane change assist , (7Y1)	359
2. Lane change assist control unit, Fuse holder A, Fuse holder C	360
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	361
4. Driver side exterior mirror, Passenger side exterior mirror	362