

Contents

1	General points	1
1.1	Vehicle identification number	1
1.2	Type plate	4
1.3	Vehicle data sticker	4
1.4	Storage of ŠKODA new vehicles	4
1.5	Vehicle handover from stock	4
1.6	Additional customer information regarding inspection and maintenance	5
2	Inspections	6
2.1	Pre-Delivery Inspection -PDI- (Export)	6
2.2	Pre-sales Inspection - domestic (Czech Republic)	7
2.3	Delivery Inspection (Export)	9
2.4	Inspection service (QG0) (every 12 months)	11
2.5	Oil change service (QG0)	14
2.6	Inspection Service (QG1, QG2)	15
2.7	Oil change service MY01 (QG1, QG2)	18
2.8	Countries with high sulphur content in the diesel fuel	19
2.9	Service tables	19
2.10	Service tables with variations for the individual markets	24
3	Engines	26
3.1	Engine overview	26
3.2	Engine fitted	30
3.3	Visual inspection of engine and parts in the engine compartment for leaks and damage	32
3.4	Replacing toothed belt for camshaft drive and tensioning pulley	32
3.5	Inspecting timing belt for camshaft drive for wear and running	32
3.6	Replacing toothed belt and guide pulley for camshaft drive (1.9 SDI diesel engine)	33
3.7	Inspecting engine oil level	33
3.8	Drain off or suction off engine oil; replace the oil filter and top up with engine oil	34
3.9	Replace engine oil filter	38
3.10	Inspecting antifreeze protection, replenishing coolant additive if necessary	38
3.11	Inspecting coolant level (volume)	44
3.12	V-ribbed belt: check condition	44
3.13	Routing of V-ribbed belt	45
3.14	Replace spark plugs	47
3.15	Replace air filter element	49
3.16	Replacing the fuel filter (diesel engines)	49
3.17	Drain away water from the fuel filter (1.9 SDI diesel engine)	49
3.18	Multiple-purpose additive for petrol engines	50
3.19	Replace fuel filter - petrol engines	51
4	Gearbox	52
4.1	Manual gearbox/final drive: check oil level and top up with oil if necessary	52
4.2	Check ATF level as well as ATF quality, if necessary top up or change	55
5	Chassis	61
5.1	Visual inspection	61
5.2	Inspecting thickness of front and rear brake pads/linings	61
5.3	Clean rear drum brake (noises, glue brake pad)	63
5.4	Inspecting brake system for leaks and damage	64
5.5	Change brake fluid	64
5.6	Inspecting the brake fluid level	70
5.7	Track rod ends: check play, fastening and sealing flanges	71
5.8	Inspecting tyres (including spare wheel)	71
5.9	Inspecting tyre tread depth (including spare wheel) and entering	72
5.10	Tightening wheel bolts to specific torque	73
5.11	Inspecting the tyre pressure (including spare wheel), if necessary correcting pressure	73



5.12	Breakdown kit	77
6	Electrical System	78
6.1	Power windows: check positioning	78
6.2	Electric consumers: check they are functioning	78
6.3	Checking battery	79
6.4	Test fuses for final torque	79
6.5	Inspecting proper operation of radio and navigation system	79
6.6	Setting clock	81
6.7	Connect diagnostic unit	81
6.8	Select language in the dash panel insert	82
6.9	Resetting service interval display (SID)	84
6.10	Changing the code of the service intervals	89
6.11	Inspecting headlight beam setting and adjusting if necessary	90
6.12	Replacing the own power supply of the alarm system	94
7	Body	95
7.1	Airbag: check for proper operation	95
7.2	Visual inspection of the airbag unit for external damage	95
7.3	Front passenger airbag: check "ON/OFF" is working and switch to "ON"	96
7.4	Check underbody protection and body paintwork for damage	96
7.5	Inspecting plenum chamber and water drain openings for dirt, cleaning if necessary	97
7.6	Windscreen wiper and washer system: check functioning properly	97
7.7	Sliding roof: clean and lubricate runners	99
7.8	Door locks, locking buttons and child lock: check functioning correctly	99
7.9	Lock cylinder: check proper operation	100
7.10	Replacing the dust and odour filter element	100
7.11	Affix vehicle data sticker	101
7.12	Stick the sticker Škoda Assistance	101
7.13	Inspect original trailer coupling device	102
7.14	Front flap lock: lubricate	103
8	Exhaust-emission analysis	104
8.1	Exhaust-Emission Analysis on Models with Petrol Engines	104
8.2	Exhaust-Emission Analysis on Models with Diesel Engines	109
9	Miscellaneous	113
9.1	Tow starting/Towing	113
9.2	Road test	115
9.3	Raise vehicle	116