



Contents

00 - Technical data	1
1 Brakes	1
1.1 Brake variants and their assignment	1
1.2 Adjusting values for the load-dependent brake-power regulator	12
1.3 Pressure value of the distributor valve	14
1.4 Brake fluid	16
45 - Anti-lock brake system	18
1 Antilock braking system (ABS)	18
1.1 Safety precautions, basic information on fault finding and on repairing	18
1.2 Instructions for repair work on Antilock braking system	18
1.3 Required technical information	21
2 Distinguishing features of the ABS systems	22
2.1 General Instructions	22
2.2 Distinguishing features	23
2.3 Fitting position of the ABS systems BOSCH 5.7 and 8.0	24
3 Self-diagnosis functions	25
3.1 General Instructions	25
3.2 Vehicle fitted with ABS/EDL/TCS or ABS/EDL/TCS/ESP BOSCH 5.7 does not have an EDL function	26
4 Vehicle diagnosis, measurement and information system VAS	27
4.1 Connect vehicle diagnosis, measurement and information system VAS and select function (ABS systems BOSCH 5.7 and BOSCH 8.0)	27
5 Performing self-diagnosis - ABS BOSCH 5.7 and BOSCH 8.0	29
5.1 Test conditions	29
5.2 Connect vehicle diagnosis tester V.A.G 1552 and select function	29
5.3 Interrogating control unit version	30
5.4 Overview of selectable functions	30
5.5 Interrogating fault memory	31
5.6 Erasing fault memory	31
5.7 Ending output	32
5.8 Automatic test sequence	32
6 Fault table - ABS systems BOSCH 5.7	33
7 Fault table - ABS systems BOSCH 8.0	47
8 Code control unit - ABS BOSCH 5.7	58
8.1 Table of codes	58
9 Code control unit - ABS BOSCH 8.0	63
9.1 Table of codes	63
10 Reading measured value block - BOSCH 5.7	72
10.1 Safety measures	72
10.2 Test sequence and test tables with measured values	72
11 Reading measured value block - BOSCH 8.0	80
11.1 Safety measures	80
11.2 Test sequence and test tables with measured values	80
12 Actuator diagnosis - ABS systems BOSCH 5.7 and BOSCH 8.0	92
12.1 Performing actuator diagnosis	92
13 Basic setting - ABS systems BOSCH 5.7	98
13.1 Bleeding the hydraulic unit (vehicles with ABS/EDL/TCS/ESP BOSCH 5.7)	98
13.2 Bleeding the hydraulic unit (vehicles with ABS/EDL/TCS/ESP BOSCH 5.7)	100
13.3 Perform null balance of the steering angle sender G85	102
13.4 Perform ESP road and system test (vehicles with ABS/EDL/TCS/ESP BOSCH 5.7)	103



14	Basic setting - ABS systems BOSCH 8.0	105
14.1	Bleeding the hydraulic unit (vehicles with ABS/TCS/ESP BOSCH 8.0)	105
14.2	Null balance of the steering angle sender G85 (vehicles with ABS/TCS/ESP BOSCH 8.0)	107
14.3	Performing ESP road and system test (vehicles with ABS/TCS/ESP BOSCH 8.0)	108
15	Electrical test - ABS systems BOSCH 5.7	111
15.1	Test conditions	111
15.2	Connecting test box V.A.G 1598A	111
15.3	Multi-pin plug connection with contact assignment	112
15.4	Overview of test steps	113
15.5	Test table	115
16	Electrical/electronic components and fitting locations - ABS/ESP systems BOSCH 5.7 and BOSCH 8.0	120
16.1	Summary of components - electrical/electronic components and fitting locations - ABS/ESP BOSCH 5.7	120
16.2	Summary of components - electrical/electronic components and fitting locations - ABS/ESP BOSCH 8.0	123
16.3	Indication of faults by means of warning lights	126
16.4	Setting, removing and installing the brake light switch F	129
16.5	Removing and installing steering angle sender G85 - vehicles with ABS/EDL/TCS/ESP BOSCH 5.7 or ABS/TCS/ESP BOSCH 8.0	130
16.6	Removing and installing lateral acceleration sender G200 and yaw rate sender G202 or ESP sensor unit G419 - vehicles with ABS/EDL/TCS/ESP BOSCH 5.7 or ABS/TCS/ESP BOSCH 8.0	133
17	Hydraulic control unit (ABS systems BOSCH 5.7), brake servo unit/master brake cylinder	136
17.1	Summary of Components of Hydraulic Control Unit, Brake Servo Unit/Master Brake Cylinder	136
17.2	Removing and installing the hydraulic control unit - LHD version	139
17.3	Removing and installing the hydraulic control unit - RHD version	144
17.4	Repairing the hydraulic control unit ABS and/or ABS/EDL/TCS BOSCH 5.7	149
17.5	Removing and installing brake pressure sender 1 G201 - vehicles with ABS/EDL/TCS/ESP BOSCH 5.7	155
18	Hydraulic control unit (ABS systems BOSCH 8.0), brake servo unit/master brake cylinder	158
18.1	Summary of Components of Hydraulic Control Unit, Brake Servo Unit/Master Brake Cylinder	158
18.2	Removing and installing the hydraulic control unit - LHD version	161
18.3	Removing and installing the hydraulic control unit - RHD version	166
18.4	Removing and installing bracket for the hydraulic control unit	170
18.5	Connect the brake lines	174
19	Removing and installing parts of the ABS System on the front and rear axle	176
19.1	Removing and installing wheel speed sensors on the front axle - Vehicles with ABS systems BOSCH 5.7 or BOSCH 8.0	176
19.2	Removing and installing front wheel speed sensor cables - Vehicles with ABS BOSCH 5.7	178
19.3	Removing and installing front wheel speed sensor cables - Vehicles with ABS BOSCH 8.0	180
19.4	Sensor ring for ABS on the front and rear axle	184
19.5	Removing and installing speed sensor on rear axle	184
19.6	Repairing rear wheel speed sensor cables - Vehicles with ABS systems BOSCH 5.7 or BOSCH 8.0	187
46	Brakes - mechanism	189
1	Repairing front wheel brake	189
1.1	Changing the brake pads of the front brake - Mounting instructions	189
1.2	Repairing front wheel brake, floating caliper disc brake FS-III	189
1.3	Removing and installing brake pads - Floating caliper disc brake FS-III	191

1.4	Repairing front wheel brake, brake caliper FS-II	196
1.5	Removing and installing brake pads - Brake caliper FS-II	198
1.6	Repairing front wheel brake, floating caliper disc brake C54	202
1.7	Removing and installing brake pads - floating caliper disc brake C54	205
2	Repairing rear brake	209
2.1	Removing and installing rear brake - Drum brake	209
2.2	Resetting brake	211
2.3	Repairing rear brake - Drum brake	212
2.4	Removing and installing brake shoe - Drum brake	214
2.5	Setting the hand-brake - drum brake	216
2.6	Changing the brake pads of the rear wheel disc brake - Mounting instructions	217
2.7	Removing and installing rear brake - Disc brake	218
2.8	Removing and installing brake pads - Disc brake	219
2.9	Setting the hand-brake - disc brake	224
3	Handbrake	225
3.1	Assembly overview of the handbrake	225
3.2	Removing and installing the hand-brake cable	226
4	Foot Controls, Brake Pedal	228
4.1	Assembly overview of the foot controls, brake pedal - LHD version	228
4.2	Separating the brake pedal from the brake servo unit and clipping onto brake servo unit	230
4.3	Removing and installing the foot controls - LHD version	230
4.4	Removing and installing the brake pedal - LHD version	233
4.5	Assembly overview of the foot controls, brake pedal - RHD version	236
4.6	Removing and installing the foot controls - RHD version	237
4.7	Removing and installing the brake pedal - RHD version	240
47 - Brakes - hydraulics		243
1	Repairing brake caliper	243
1.1	Summary of components of the brake caliper of the FS-III brake at the front	243
1.2	Removing and installing brake caliper piston of front FS-III brake	244
1.3	Summary of components of the brake caliper of the FS-III brake at the front	246
1.4	Removing and installing the brake calliper piston of the FS-II brake at the front	247
1.5	Summary of components of the brake caliper of the C54 brake at the front	247
1.6	Removing and installing brake caliper piston of front C54 brake	248
1.7	Summary of components of the brake caliper of the brake at the rear	248
1.8	Removing and installing brake caliper piston of rear brake	249
2	Brake Servo Unit, Master Brake Cylinder	252
2.1	Summary of Components of Brake Servo Unit, Master Brake Cylinder	252
2.2	Checking the master brake cylinder for tightness	254
2.3	Removing and installing the master brake cylinder - LHD version	257
2.4	Removing and installing the master brake cylinder - RHD version	261
2.5	Removing and installing the brake servo unit - LHD version	265
2.6	Removing and installing the brake servo unit - RHD version	269
2.7	Removing and installing the vacuum pump for the brake servo unit	272
2.8	Removing and installing tandem pump for fuel and vacuum supply	272
2.9	Checking the non-return valve	272
3	Checking vacuum system	273
3.1	Connecting vacuum gauge for brake servo VAS 6721	273
3.2	Checking vacuum generation	274
3.3	Checking for leaks	275
3.4	Vacuum generation with manual vacuum pump VAS 6213	276
4	Brake-power regulator, brake-pressure reducer	277
4.1	Summary of components of brake-power regulator	277
4.2	Inspecting and adjusting the brake-power regulator	278



4.3	Removing and installing brake-power regulator	280
4.4	Inspecting the brake-pressure reducer	282
4.5	Removing and installing the brake-pressure reducer	282
5	Bleeding brake system	285
5.1	Bleeding the brake system using the brake filling and bleeding device , e. g. VAS 5234 ..	285
5.2	Bleeding the brake system of air without using the brake filling and bleeding device	288
5.3	Change brake fluid	291