

## Contents

<b>40</b>	<b>Front suspension</b> .....	<b>1</b>
1	<b>Front axle - Overview</b> .....	1
1.1	Front axle - Overview of the repair chapter .....	1
1.2	Raise the wheel-bearing housing in the rebound state (unladen weight position) .....	1
2	<b>Repairing front axle</b> .....	4
2.1	I - Summary of components assembly carrier, console, axle link, anti-roll bar, coupling rod, bracket, pendulum support .....	4
2.2	Inspecting the steering joint .....	6
2.3	Removing and installing the steering joint .....	7
2.4	Release assembly carrier in the service position and align .....	11
2.5	Removing and installing the track control arm .....	16
2.6	Removing and installing the console .....	20
2.7	Disconnecting and assembling the track control arm and console .....	24
2.8	Rubber-metal bearing of the console - different versions and fitting positions .....	24
2.9	Replacing the rubber-metal bearing for console - removal version 1 .....	26
2.10	Replacing the rubber-metal bearing for console - removal version 2 .....	27
2.11	Removing and installing the anti-roll bar .....	30
2.12	Removing and installing assembly carrier .....	36
3	<b>Repairing front suspension strut</b> .....	40
3.1	II - Summary of components of suspension strut .....	40
3.2	Removing and installing the suspension strut .....	41
3.3	Repairing suspension strut .....	45
3.4	Inspect shock absorber .....	48
3.5	Disposing of the shock absorber .....	49
4	<b>Repairing wheel bearing</b> .....	51
4.1	III - Summary of components of the wheel bearing, suspension strut, drive shaft, brake FS-II .....	51
4.2	III - Summary of components of the wheel bearing, suspension strut, drive shaft, brake FS-III .....	53
4.3	III - Summary of components of the wheel bearing, suspension strut, drive shaft, brake C54 .....	56
4.4	Removing and installing wheel bearing housing .....	59
4.5	Removing and installing the wheel hub with wheel bearing with the wheel-bearing housing fitted .....	64
5	<b>Drive shafts with CV joints</b> .....	70
5.1	IV - Summary of components of drive shaft with CV joint .....	70
5.2	Removing and installing fixing nut of drive shaft .....	72
5.3	Removing and installing outer joint of drive shaft .....	75
5.4	Removing and installing a drive shaft .....	78
5.5	Repairing drive shaft with CV joint .....	81
5.6	Inspecting a CV joint .....	83
6	<b>Drive shafts with tripod joint</b> .....	87
6.1	V - Summary of components of drive shaft with AAR2000 tripod joint .....	87
6.2	Removing and installing a drive shaft .....	89
6.3	Repairing the drive shaft with AAR 2000 tripod joint .....	90
6.4	Inspecting outer CV joint .....	92
<b>42</b>	<b>Rear suspension</b> .....	<b>94</b>
1	<b>Rear axle - Overview</b> .....	94
1.1	Rear axle - Overview of the repair chapter .....	94
1.2	Raise the wheel-bearing of the rear axle in the rebound state (unladen weight position) ..	94
2	<b>Rear axle with drum brake</b> .....	96
2.1	Summary of components of rear axle with drum brake .....	96



2.2	Removing and installing rear axle with drum brake	99
<b>3</b>	<b>Repairing rear axle with drum brake</b>	<b>104</b>
3.1	Summary of components of shock absorber	104
3.2	Removing and installing shock absorber	105
3.3	Removing and installing coil spring	108
3.4	removing and installing rubber-metal bearing	109
<b>4</b>	<b>Rear axle with disc brake</b>	<b>123</b>
4.1	Summary of components of rear axle	123
4.2	Fitting location of the shock absorber on the rear axle	125
4.3	Removing and installing rear axle with rear disc brake	125
<b>5</b>	<b>Repairing rear axle with disc brake</b>	<b>131</b>
5.1	Summary of components of shock absorber	131
5.2	Removing and installing shock absorber	132
5.3	Removing and installing coil spring	135
5.4	removing and installing rubber-metal bearing	136
<b>6</b>	<b>Repairing wheel bearing</b>	<b>150</b>
6.1	Summary of components of wheel bearing - drum brake	150
6.2	Removing and installing the wheel hub with wheel bearing - drum brake	151
6.3	Summary of components of wheel bearing - disc brake	154
6.4	Removing and installing the wheel hub with wheel bearing - disc brake	154
6.5	Removing and installing axle studs	158
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>162</b>
<b>1</b>	<b>Chassis - Specified values</b>	<b>162</b>
1.1	Nominal values front axle	162
1.2	Nominal values rear axle	164
1.3	Vehicle data sticker and PR numbers	166
<b>2</b>	<b>Axle alignment</b>	<b>167</b>
2.1	General points	167
2.2	It is necessary to perform an axle alignment in the event of:	168
2.3	Test conditions	172
2.4	Measurement preliminaries	173
2.5	Checking the transversal inclination of the vehicle	174
2.6	Checking the camber on the front axle, if necessary take the mean	174
2.7	Checking the camber on the rear axle	176
2.8	Checking the track on the rear axle	176
2.9	Checking the track on the front axle, adjusting if necessary	176
2.10	Check position of steering wheel, align if necessary	178
2.11	Checking the left and right steering angle	180
2.12	Calculation of the misalignment on the rear axle	182
<b>48</b>	<b>- Steering</b>	<b>183</b>
<b>1</b>	<b>Steering</b>	<b>183</b>
1.1	Electro-hydraulic and mechanical steering	183
<b>2</b>	<b>Steering column</b>	<b>184</b>
2.1	Summary of components	184
<b>3</b>	<b>Inspecting steering column</b>	<b>186</b>
3.1	Visual inspection	186
3.2	Functional test	186
<b>4</b>	<b>Removing and installing steering column</b>	<b>187</b>
4.1	Removing the steering column - LHD version	187
4.2	Installing the steering column - LHD version	190
4.3	Removing the steering column - RHD version	194
4.4	Installing the steering column - RHD version	196

<b>5</b>	<b>Removing and installing steering lock</b>	<b>200</b>
<b>6</b>	<b>Frequency link, bracket</b>	<b>201</b>
6.1	Removing and installing the frequency link - LHD version	201
6.2	Removing and installing the frequency link - RHD version	203
6.3	Removing and installing bearing bracket	205
<b>7</b>	<b>Steering without servo unit (mechanical steering)</b>	<b>207</b>
7.1	Summary of components	207
<b>8</b>	<b>Removing and installing steering gear</b>	<b>208</b>
8.1	Removing steering gear	208
8.2	Installing steering gear	210
<b>9</b>	<b>Inspecting and adjusting mechanical steering gear</b>	<b>214</b>
9.1	Check the centre position of the gear rack of the steering gear, if necessary adjust	214
9.2	Adjusting the steering gear (adjusting the pressure plate clearance)	214
<b>10</b>	<b>Disassembling and assembling the steering gear</b>	<b>216</b>
<b>11</b>	<b>Track Rod Ends/Track Rods</b>	<b>218</b>
<b>12</b>	<b>Power-assisted steering</b>	<b>219</b>
12.1	Structure and function	219
12.2	Summary of components of power-assisted steering (TRW) - LHD version	220
12.3	Summary of components of power-assisted steering (KOYO) - LHD version	222
12.4	Summary of components of pressure line (hose) - power steering TRW or KOYO - LHD version	224
12.5	Summary of components of power-assisted steering (TRW) - RHD version	227
12.6	Summary of components of pressure line (hose) - power steering TRW - RHD version	228
<b>13</b>	<b>Removing and installing power-steering gear (TRW or KOYO)</b>	<b>232</b>
13.1	Removing the power-assisted steering gear - LHD version	233
13.2	installing the power-assisted steering gear - LHD version	236
13.3	Removing the power-assisted steering gear TRW - RHD version	243
13.4	Installing the power-assisted steering gear TRW - RHD version	246
<b>14</b>	<b>Power-assisted steering sensor G250 and the hydraulic line for power steering</b>	<b>252</b>
14.1	Check power-assisted steering sensor G250 (TRW or KOYO)	252
14.2	Removing and installing power-assisted steering sensor G250 (TRW or KOYO) - LHD version	252
14.3	Removing and installing power-assisted steering sensor G250 (TRW or KOYO) - RHD version	256
14.4	Removing and installing hydraulic lines (TRW or KOYO) - LHD version	259
14.5	Removing and installing the hydraulic lines TRW - RHD version	263
<b>15</b>	<b>Inspecting and adjusting the power-steering gear</b>	<b>267</b>
15.1	Check the centre position of the gear rack of the power-steering gear, if necessary adjust	267
15.2	Adjusting the power-steering gear (adjusting the pressure plate clearance)	267
<b>16</b>	<b>Disassembling and assembling the power-assisted steering gear</b>	<b>269</b>
16.1	Disassembling and assembling the power-assisted steering gear, TRW - LHD version	269
16.2	Disassembling and assembling the power-assisted steering gear, KOYO - LHD version	271
16.3	Disassembling and assembling the power-assisted steering gear, TRW - RHD version	273
<b>17</b>	<b>Track rod ends, track rods for power steering and mechanical steering</b>	<b>277</b>
17.1	Inspecting boots, play and correct attachment of track rod ends	277
17.2	Removing and installing track rod ends	277
17.3	Removing and installing track rods	280
<b>18</b>	<b>Disposing of the power-steering gear</b>	<b>283</b>
<b>19</b>	<b>Engine pump aggregate</b>	<b>284</b>
19.1	Summary of components of engine pump aggregate TRW	284
19.2	Summary of components of engine pump aggregate KOYO	286
<b>20</b>	<b>Inspecting engine pump aggregate</b>	<b>289</b>
20.1	Inspecting the operation of the engine pump aggregate	289



20.2	Checking the feed pressure of the engine pump aggregate	291
<b>21</b>	<b>Removing and installing as well as disposing of engine pump aggregate</b>	<b>297</b>
21.1	Removing and installing engine pump aggregate TRW	297
21.2	Removing and installing engine pump aggregate KOYO	302
21.3	Disposing of the engine pump aggregate	307
<b>22</b>	<b>Replace reservoir of engine pump aggregate</b>	<b>308</b>
22.1	Replace reservoir of engine pump aggregate TRW	308
22.2	Replace reservoir of engine pump aggregate KOYO	313
<b>23</b>	<b>Checking hydraulic oil level</b>	<b>317</b>
23.1	Inspecting hydraulic oil level, if necessary topping up	317
<b>24</b>	<b>Filling, bleeding and checking the power steering system for tightness</b>	<b>319</b>
24.1	Filling and bleeding the power steering system	319
24.2	Checking the power steering system for tightness	323
<b>25</b>	<b>Power steering noises</b>	<b>326</b>
25.1	Notes for eliminating the noises	326
<b>26</b>	<b>Self-diagnosis of the power-steering</b>	<b>330</b>
26.1	Indication of faults by means of warning light for Servotronic K92	330
26.2	Connect vehicle system tester V.A.G 1552 or fault read-out scan tool V.A.G 1551 and select functions.	331
26.3	Available functions when using the vehicle diagnosis tester V.A.G 1552	332
26.4	Interrogating and erasing fault memory	332
26.5	Fault table	334
26.6	Coding control unit	337
26.7	Reading measured value block	339
<b>27</b>	<b>Testing data bus lines</b>	<b>341</b>
<b>28</b>	<b>Electric/electronic components and fitting locations</b>	<b>342</b>