



Contents

44 - Wheels, tyres, vehicle geometry	1
1 General points for wheels/tyres	1
2 Technical conditions for changing wheel/tyre combinations	2
3 Technical data for tyres	3
3.1 Identification markings on the tyre sidewall	3
3.2 Speed ratings for tyres	7
3.3 Undulations	8
3.4 Tyre storage	8
3.5 Tyre ageing	9
3.6 Winter tyres	10
3.7 Snow chains	11
3.8 Tyre structure	11
4 EU tyre label	14
4.1 General points	14
4.2 Objectives	16
4.3 EU tyre label, categories	17
5 Tyre wear/mileage of the tyre	22
5.1 General points	22
5.2 Requirements to be met by tyres	23
5.3 Wear behaviour of high-speed tyres	24
5.4 Factors influencing the service life of a tyre	24
5.5 Driving style	25
5.6 Tyre maintenance	26
5.7 Evenly worn tyres	28
5.8 Measuring tread depth	29
5.9 Unilateral wear	31
5.10 Outside shoulder wear	34
5.11 Wear in middle of tyre	35
5.12 Diagonal washout	37
6 Tyre noise	38
6.1 General notes on tyre noise	38
6.2 Saw-tooth wear	39
6.3 Flat spots	41
7 Rough running due to wheels/tyres - causes	43
7.1 Causes of rough running	43
7.2 Balancing	44
7.3 Conducting a road test before balancing wheels	44
7.4 Balancing wheel on stationary wheel balancer	45
7.5 Finish balancer	46
7.6 Radial and lateral runout on wheels and tyres	48
7.7 Checking radial and lateral runout on wheels/tyres with tyre gauge	48
7.8 Checking radial and lateral runout on wheel rim	49
7.9 Match mounting	50
7.10 Flat spots on tyres	52
8 Vehicle pulls to one side	54
8.1 General points	54
8.2 Conicity	55
8.3 Remedies when vehicle pulls to one side	57
8.4 Strategic rotation of wheels for non-directional tyres	58
8.5 Strategic rotation of wheels having unidirectional tyres	60
9 Tyre damage	62



9.1	General Instructions	62
9.2	Impact damage	63
9.3	Cuts	65
9.4	Damage caused by foreign bodies	65
9.5	Loss of air from tyre	65
9.6	Tyre pressure	66
9.7	Tyre damage due to insufficient tyre pressure	67
9.8	Rising tyre temperature caused by insufficient tyre pressure	68
9.9	Tyre damage due to fitting error (fitting damage)	69
10	Rolling resistance optimised tyres	72
11	Rims - basic information	73
11.1	Structure of wheel rim	73
11.2	Data on wheel rims	75
11.3	Care and maintenance of alloy wheel rims	75
11.4	Restoring alloy wheels	76
11.5	The rubber valve	77
12	Fitting wheels	79
12.1	Rotating wheels	79
12.2	Instructions for changing or fitting wheels	79
12.3	Protecting wheel centring seat against corrosion	81
12.4	Notes on use of temporary spare wheels	83
13	Vehicles with breakdown set	84
13.1	Breakdown set	84
13.2	Tyre sealant	84
13.3	Tyre disassembly	85
13.4	Assembly of new tyres	85
13.5	Disposing of tyre sealant	86
14	Wheel-tyre combinations	87
14.1	Permissible wheel-tyre combinations	88
15	Wheels, Tyres	93
15.1	Wheels, Tyres - Instructions	93
15.2	Wheel with steel rim	94
15.3	Wheel with a light alloy rim 6J x 14	95
15.4	Wheel with a light alloy rim 6J x 15	96
15.5	Wheel with a light alloy rim 6.5J x 16	97
15.6	Spare wheel	99