

Contents

27	Starter, current supply, CCS	1
1	Battery	1
1.1	Basics	1
1.2	Warning instructions and safety precautions when working on the battery	1
1.3	Work sequence when disconnecting and connecting the battery	1
1.4	Checking battery	3
1.5	Charging battery	3
1.6	Removing and installing battery	3
1.7	Removing and installing battery tray	7
1.8	Removing and installing battery tray 06.05 ►	8
2	Starter	9
2.1	Removing and installing starter	9
3	AC generator	11
3.1	Removing and installing alternator	11
3.2	Checking the carbon brushes of the AC generator	14
3.3	Removing and installing voltage regulator	14
3.4	Removing and installing V-ribbed belt pulley on alternator	14
3.5	Removing and installing the V-ribbed belt pulley with free wheel	15
4	Cruise control system (CCS)	17
4.1	Removing and installing the cruise control (CC)	17
90	Gauges, instruments	18
1	Dash panel insert	18
1.1	Removing and installing the dash panel insert	18
1.2	Contact assignment of plug connection on the dash panel insert	20
1.3	Indicator light symbols in the dash panel insert	21
1.4	Service interval display	23
2	Self-diagnostic function of the dash panel insert I	25
2.1	General information	25
2.2	Initiating self-diagnosis of the dash panel insert	26
2.3	Connect vehicle diagnostic tester V.A.G 1552	26
2.4	Overview of selectable functions	28
2.5	Query event memory	28
2.6	Erase event memory	29
2.7	Ending output	29
3	Self-diagnostic function of the dash panel insert II	30
3.1	Fault table for dash panel insert	30
3.2	Final control diagnosis	33
3.3	Coding the dash panel insert	36
4	Self-diagnostic function of the dash panel insert III	39
4.1	Reading measured value block	39
4.2	Adaptation	44
4.3	Adjust the distance display	47
4.4	Adjust the service interval display when replacing the dash panel insert (QG0 - MJ 05 and 06)	48
4.5	Adjust the service interval display when replacing the dash panel insert (QG0 - MJ 07, QG1 and QG2)	50
4.6	Adaptation of the current fuel consumption display	51
4.7	Checking the fuel gauge (adapting)	52
4.8	Perform login procedure	53
5	Self-diagnosis of the on-board supply control unit I	55
5.1	Initiate self-diagnosis	55



5.2	Connect vehicle diagnostic tester V.A.G 1552	55
5.3	Overview of selectable functions	56
5.4	Query event memory	57
5.5	Erase event memory	57
5.6	Ending output	58
6	Self-diagnosis of the on-board supply control unit II	59
6.1	Fault table for the on-board supply control unit	59
6.2	Final control diagnosis	65
6.3	Coding onboard supply control unit	67
7	Self-diagnosis of the on-board supply control unit III	69
7.1	Reading measured value block	69
7.2	Adaptation	73
8	Self-diagnosis of the gateway	76
8.1	Initiate self-diagnosis	76
8.2	Connect vehicle diagnostic tester V.A.G 1552	76
8.3	Overview of selectable functions	77
8.4	Query event memory	78
8.5	Error table for the gateway	78
8.6	Erase event memory	81
8.7	Ending output	82
8.8	Coding control unit	82
8.9	Reading measured value block	82
9	Data bus/LIN bus	87
9.1	General description	87
9.2	Checking the CAN bus drive	87
9.3	Checking the CAN bus comfort	88
91	Radio, telephone, navigation	91
1	Radio systems I	91
1.1	General information	91
1.2	Overview of radio system	91
1.3	Removing and installing a radio	92
1.4	Removing and installing loudspeakers	93
1.5	Removing and installing roof antenna	95
1.6	Removing and installing hidden antenna for navigation system	98
1.7	Replacing antenna cables	98
1.8	Chamber assignment of the multi-pin plug connectors A, B, C on the back of the radio	99
2	Radio systems II	102
2.1	Connect vehicle diagnosis tester V.A.G 1552	102
2.2	Interrogating control unit version	102
2.3	Overview of self-diagnosis functions	103
2.4	Query event memory	103
2.5	Fault table	104
2.6	Erase event memory	106
2.7	Final control diagnosis	107
2.8	Code radio	108
2.9	Reading measured value block	109
2.10	Ending output	112
3	Navigation system I	113
3.1	General description	113
3.2	Self-diagnosis of the radio part in the RNS	113
3.3	Self-diagnosis of the navigation part in the RNS I	114
4	Radio Navigation System (RNS) II	120
4.1	Self-diagnosis of the navigation part in the RNS II	120
4.2	Electronic anti-theft coding	124



4.3	Plug connections on the radio navigation system	126
4.4	Removing and installing the navigation system	129
4.5	Control unit for traffic program J559 (TMC box)	130
5	Mobile phone pre-installation	132
5.1	General	132
5.2	Mobile phone pre-installation 1	132
5.3	Pin assignment (position 5)	132
5.4	Mobile phone pre-installation 2	133
5.5	Pin assignment of the plug	133
5.6	Assembly overview of mobile phone mount	134
5.7	Removing and installing the control unit for the mobile phone control electronics J412	134
5.8	Removing and installing the microphone	134
6	CD changer	136
6.1	General information	136
6.2	Removing and installing CD changer	136
92	Windscreen wash/wipe system	137
1	Windscreen washer system	137
1.1	Removing and installing the washer fluid reservoir	137
1.2	Removing and installing the spray nozzles for the windscreen washer system	137
1.3	Repairing washer fluid lines	138
2	Windscreen Wiper and Washer System	139
2.1	Removing and installing the windscreen washer system	139
2.2	Adjusting the windscreen wiper arm end position	140
2.3	Removing and installing the wiper rubber	140
3	Rear window wiper and washer system	142
3.1	Rear windscreen wiper system - assembly overview	142
3.2	Removing and installing rear window wiper	142
3.3	Replacing the spray nozzle FABIA	143
3.4	Replacing the spray nozzle FABIA Combi	144
4	Headlamp cleaning system	145
4.1	Summary of components	145
4.2	Adjusting spray jets	145
4.3	Removing and installing the spray nozzle holder	146
4.4	Removing and installing headlight cleaning system pump V11	146
4.5	Removing and installing the lift cylinder for the spray nozzles	147
4.6	Bleed the headlamp cleaning system	147
94	Lights, bulbs, switches - exterior	148
1	Headlights – halogen headlights	148
1.1	Summary of components	148
1.2	Removing and installing headlight	149
1.3	Adjust headlights and fog lights	149
1.4	Replacing light bulbs in headlights	150
1.5	Removing and installing fog light	152
1.6	Replacing bulb for fog lights	152
1.7	Removing and installing headlight range control motor	154
1.8	Unglueing the halogen headlight	154
1.9	Replace headlight fixing brackets	155
2	Side turn signal lights	156
2.1	Removing and installing side turn signal lights	156
3	Tail lights	157
3.1	Summary of components	157
3.2	Removing and installing bulb carrier	157
3.3	Removing and installing tail light	157



4	Registration number lighting	159
4.1	Removing and installing licence plate carrier	159
5	Additional brake light	160
5.1	Removing and installing the high-mounted brake light - FABIA	160
5.2	Removing and installing the high-mounted brake light - FABIA Sedan	160
5.3	Removing and installing the high-mounted brake light - FABIA Combi	161
6	Steering column switch	162
6.1	Removing and installing steering column switch	162
6.2	Removing and installing lock cylinder	163
6.3	Removing and installing ignition/starter switch	164
7	Warning system	166
7.1	Removing and installing the horn H12	166
7.2	Replacing the own power supply of the alarm system	166
7.3	Removing and installing the contact switch F120	166
8	Parking aid	168
8.1	General description	168
8.2	Removing and installing the parking aid warning buzzer H15	168
8.3	Removing and installing the parking aid control unit J446	169
8.4	Removing and installing parking aid senders	169
8.5	Self-diagnosis of the parking aid	170
9	Headlight - xenon headlight	178
9.1	A general overview	178
9.2	Summary of components	180
9.3	Removing and installing headlight	180
9.4	Setting the headlight beam	181
9.5	Replacing light bulbs in headlights	181
9.6	Removing and installing the high-voltage ignition unit	182
9.7	Removing and installing headlight range control motor	183
9.8	Removing and installing the rear sender with control unit	183
9.9	Adjusting the rear sender	183
9.10	Pin assignment for Xenon headlights	183
9.11	Switching over the inner headlight panel	184
9.12	Replace headlight fixing brackets	184
10	Self-diagnosis of Xenon headlights	185
10.1	Self-diagnosis of Xenon headlights with automatic control	185
10.2	Fault table	187
10.3	Final control diagnosis	188
10.4	Initiating basic setting	189
10.5	Erase event memory	190
10.6	Ending output	190
10.7	Coding control unit	190
10.8	Reading measured value block	191
96	Lights, bulbs, switches - interior	192
1	Self-diagnosis of the immobiliser	192
1.1	General description	192
1.2	Perform self-diagnosis of the immobiliser	192
1.3	Query event memory	194
1.4	Fault table for immobiliser	195
1.5	Erase event memory	196
1.6	Ending output	197
1.7	Reading measured value block	197
1.8	Adapting ignition key	200
1.9	Adapting the immobiliser after changing the dash panel insert	203
1.10	Adapting the immobiliser after changing the engine control unit	204

1.11	Adapting the immobiliser after inserting a used immobiliser control unit	206
2	Interior Lights	208
2.1	Removing and installing glove box light	208
2.2	Removing and installing door warning lamp	208
2.3	Removing and installing luggage compartment light	209
2.4	Removing and installing the electric sunroof and interior light switch	209
2.5	Removing and installing the interior light for the tail end of the vehicle (Combi, Sedan)	210
3	Switches in the dash panel and in the doors	211
3.1	Removing and installing switches in centre console	211
3.2	Removing and installing light switch	211
3.3	Removing and installing the headlight range control adjuster	211
3.4	Removing and installing hazard warning lights button	212
3.5	Removing and installing the mirror adjustment switch	212
3.6	Removing and installing the switch for the power window lifter	212
4	Horn	214
4.1	Removing and installing horn	214
4.2	Removing and installing the double horn	214
5	Interior monitoring sensor G273	215
5.1	Removing and installing the sensor	215
5.2	Check function	215
5.3	Controlling sensitivity	216
97 - Wiring		217
1	Fuse holder and relay carrier	217
1.1	Removing and installing the fuse holder	217
1.2	Potential distributor	217
1.3	A-pillar coupling station	218
1.4	B-pillar coupling station	218
1.5	Main fuse box	219
1.6	Removing and installing main fuse box 06.05 ►	219
1.7	Disconnecting and assembling main fuse box / fuse holder 06.05 ►	221
1.8	Multi-pin plug connection on the front wall (variant 1)	221
1.9	Multi-pin plug connection on the front wall (variant 2)	222
2	Onboard supply control unit	226
2.1	Removing and installing onboard supply control unit	226