



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Vehicle identification data | 1 |
| 01 - Self-diagnosis | 3 |
| 1 Self-diagnosis for convenience system | 3 |
| 1.1 Notes on self-diagnosis for comfort system | 3 |
| 1.2 Types and description of comfort system | 3 |
| 1.3 Overview of the selectable functions of the comfort system diagnostics | 5 |
| 1.4 Connect vehicle diagnostics tester V.A.G 1552 | 5 |
| 1.5 Interrogating control unit version | 7 |
| 1.6 Query event memory | 8 |
| 1.7 Final control diagnosis | 8 |
| 1.8 Erase event memory | 9 |
| 1.9 Ending output | 10 |
| 1.10 Coding control unit | 10 |
| 2 Self-diagnosis for comfort system with CAN data bus | 12 |
| 2.1 Overview of the selectable functions of the self-diagnosis for comfort system with CAN data bus | 12 |
| 2.2 Overview of the comfort system control units with CAN data bus line | 12 |
| 2.3 Code the control unit with CAN data bus line | 14 |
| 2.4 Fault table comfort system with CAN data bus | 15 |
| 2.5 Read measured value block for comfort system with CAN data bus | 25 |
| 2.6 Test table for comfort system with CAN data bus | 26 |
| 3 Self-diagnosis for comfort system with LIN data bus | 33 |
| 3.1 Overview of the selectable functions of the self-diagnosis for comfort system with LIN data bus | 33 |
| 3.2 Overview of the comfort system control units with LIN data bus line | 33 |
| 3.3 Code the control unit with LIN data bus line | 33 |
| 3.4 Fault table control unit for comfort system with LIN data bus | 34 |
| 3.5 Fault table LIN data bus/control units for window operation in the individual doors | 39 |
| 3.6 Read measured value block with LIN data bus line | 41 |
| 3.7 Check table with LIN data bus line | 42 |
| 4 Change comfort system (for all convenience system types) | 48 |
| 4.1 Adaptation | 48 |
| 5 Self-diagnosis function of the airbag system I | 54 |
| 5.1 Description of the airbag system | 54 |
| 5.2 Connect vehicle diagnostics tester V.A.G 1552 and select address word "Airbag" | 56 |
| 5.3 Overview of selectable functions | 58 |
| 5.4 Interrogating control unit version | 58 |
| 5.5 Query event memory | 60 |
| 5.6 Final control diagnosis | 60 |
| 5.7 Erase event memory | 61 |
| 5.8 Ending output | 61 |
| 5.9 Coding airbag control unit | 62 |
| 6 Self-diagnosis for airbag system II | 64 |
| 6.1 Fault table | 65 |
| 6.2 Reading measured value block | 69 |
| 6.3 Test table | 70 |
| 6.4 Parts inspection with test box VAS 5056 | 74 |
| 7 Deactivating and activating airbag units (adaptation) | 77 |
| 7.1 Deactivating and activating passenger-side airbag units (adaptation) | 77 |



| | |
|---|------------|
| 50 - Body - front | 83 |
| 1 Front body | 83 |
| 1.1 Removing and installing lock carrier with component parts | 83 |
| 2 Front wing | 85 |
| 2.1 Removing and installing the front wing | 85 |
| 55 - Bonnet, rear lid | 86 |
| 1 Front flap | 86 |
| 1.1 Front flap - Summary of components | 86 |
| 1.2 Removing and installing flap lock | 88 |
| 1.3 Removing and installing the front flap lock | 89 |
| 1.4 Radiator grill - Assembly overview | 89 |
| 1.5 Disassembling and assembling radiator grill | 90 |
| 1.6 Removing and "installing ŠKODA" marks | 91 |
| 1.7 Stick on "RS" sign | 92 |
| 1.8 Adjusting the bonnet | 93 |
| 2 Tailgate | 94 |
| 2.1 Removing and installing boot lid | 94 |
| 2.2 Removing the pressurized gas strut | 94 |
| 2.3 Degassing the pressurized gas strut | 95 |
| 2.4 Summary of components of boot lid lock | 95 |
| 2.5 Assembly overview Remote unlocking | 97 |
| 2.6 Removing and installing boot lid contact switches (Sedan) | 97 |
| 2.7 Adjusting boot lid | 98 |
| 3 Fuel tank lid unit | 99 |
| 3.1 Summary of components of the fuel-tank lid unit | 99 |
| 57 - Front doors, door components, central locking | 100 |
| 1 Front door | 100 |
| 1.1 Summary of components | 100 |
| 1.2 Removing and installing the door | 101 |
| 1.3 Door adjustment | 102 |
| 1.4 Removing and installing assembly carrier | 102 |
| 1.5 Removing and installing door window | 103 |
| 1.6 Removing and installing window lifter motor | 104 |
| 1.7 Door handle and door lock - Summary of components | 104 |
| 1.8 Removing and installing the lock cylinder housing | 106 |
| 1.9 Removing and installing the door handle | 106 |
| 1.10 Removing and installing the door lock | 107 |
| 1.11 Removing and installing locking button for locking bar | 109 |
| 1.12 Summary of components of front door seals | 110 |
| 1.13 Central locking | 110 |
| 58 - Rear doors, door components | 112 |
| 1 Rear door | 112 |
| 1.1 Summary of components | 112 |
| 1.2 Removing and installing the door | 113 |
| 1.3 Door adjustment | 113 |
| 1.4 Door handle and door lock - Summary of components | 114 |
| 1.5 Removing and installing the door handle | 114 |
| 1.6 Removing and installing the door lock | 116 |
| 1.7 Removing and installing assembly carrier | 117 |
| 1.8 Removing and installing door window | 119 |
| 1.9 Summary of components of door seals | 120 |



| | | |
|-----------|--|------------|
| 2 | Rear door (Praktik) | 121 |
| 2.1 | Summary of components of rear door | 121 |
| 2.2 | Removing and installing the door lock | 122 |
| 60 | - Sunroof | 123 |
| 1 | Sliding/tilting roof with glass panel | 123 |
| 1.1 | Summary of components of sliding/tilting roof with glass panel | 123 |
| 1.2 | Removing and installing the glass roof | 124 |
| 1.3 | Removing and installing the sun visor | 127 |
| 1.4 | Removing and installing E-drive | 127 |
| 1.5 | Setting E-drive (0 position) | 128 |
| 1.6 | Adapting drive | 129 |
| 1.7 | Check parallel running | 129 |
| 1.8 | Setting the parallel running | 129 |
| 1.9 | Removing and installing assembly unit | 130 |
| 1.10 | Cleaning the water drain hoses | 131 |
| 63 | - Bumpers | 132 |
| 1 | Front bumper | 132 |
| 1.1 | Assembly overview – Bumper | 132 |
| 1.2 | Assembly overview bumper (RS) | 133 |
| 1.3 | Removing and installing bumper bracket | 134 |
| 2 | Rear bumper | 135 |
| 2.1 | Summary of components of rear bumper | 135 |
| 2.2 | Removing and installing bumper bracket | 136 |
| 2.3 | Removing and installing rear apron (RS) | 136 |
| 64 | - Glazing | 138 |
| 1 | Glued windows | 138 |
| 1.1 | Special tools needed | 138 |
| 1.2 | Materials | 139 |
| 1.3 | Window repairs | 140 |
| 1.4 | Windscreen - Summary of components | 140 |
| 1.5 | Removing and installing windscreen | 141 |
| 1.6 | Rear window - Summary of components | 144 |
| 1.7 | Rear apron (combi) - Summary of components | 146 |
| 1.8 | Rear apron (Sedan) - Summary of components | 147 |
| 1.9 | Removing and installing the rear window | 147 |
| 1.10 | Side window (combi) - Summary of components | 148 |
| 1.11 | Removing and installing side window (Combi) | 149 |
| 1.12 | Prepare new window for fitting | 150 |
| 1.13 | Prepare flange for fitting | 151 |
| 1.14 | Gluing | 153 |
| 1.15 | Minimum hardening time for glued windows | 154 |
| 1.16 | Eliminating paint damage | 154 |
| 1.17 | Remove adhesive sealant and clean | 154 |
| 66 | - Exterior equipment | 156 |
| 1 | Wheelhouse liner | 156 |
| 1.1 | Removing and installing the front wheelhouse liner | 156 |
| 1.2 | Removing and installing the rear wheelhouse liner | 156 |
| 2 | Exterior mirrors | 157 |
| 2.1 | Summary of components of exterior mirror | 157 |
| 3 | Plenum chamber cover | 158 |
| 3.1 | Removing and installing the plenum chamber cover | 158 |



| | | |
|-----------|--|------------|
| 4 | Roof drip moulding | 159 |
| 4.1 | Removing and installing roof drip moulding | 159 |
| 5 | Protective strips | 160 |
| 5.1 | Removing and installing protective side strips | 160 |
| 6 | Trailer coupling | 162 |
| 6.1 | Summary of components trailer coupling | 162 |
| 7 | Roof rack (Combi) | 163 |
| 7.1 | Removing and installing roof rack | 163 |
| 8 | Rear spoiler | 164 |
| 8.1 | Assembly overview - full rear spoiler Combi | 164 |
| 8.2 | Removing and installing complete rear spoiler (Combi) | 164 |
| 8.3 | Assembly overview – complete rear spoiler (RS) | 164 |
| 8.4 | Removing and installing complete rear spoiler (RS) | 165 |
| 9 | Mouldings (Combi) | 166 |
| 9.1 | Removing and installing decorative strips | 166 |
| 68 | - Interior equipment | 167 |
| 1 | Interior rear-view mirror | 167 |
| 1.1 | Removing and installing the interior rear-view mirror | 167 |
| 1.2 | Repairing with glue | 167 |
| 2 | Covers, storage areas and trim panels | 169 |
| 2.1 | Summary of components of centre console | 169 |
| 2.2 | Removing and installing front cup holder | 170 |
| 2.3 | Removing and installing the sun visor | 170 |
| 2.4 | Removing and installing the sun visor | 171 |
| 2.5 | Removing and installing the moulded headliner (Praktik) | 171 |
| 2.6 | Removing and installing the moulded headliner storage area (Praktik) | 171 |
| 3 | Recessed roof handle | 172 |
| 3.1 | Removing and installing the recessed handles of the roof | 172 |
| 4 | Additional partition panel and protective grating (Praktik) | 173 |
| 4.1 | Summary of components of net partition panel | 173 |
| 4.2 | Removing and installing the protective grating for boot lid | 174 |
| 5 | Dividing floor (Praktik) | 175 |
| 5.1 | Removing and installing bottom plate at the front | 175 |
| 5.2 | Removing and installing bottom plate at the rear | 175 |
| 6 | Door sill panels front (RS) | 176 |
| 6.1 | Removing and installing door sill panels at the front | 176 |
| 69 | - Passenger protection | 177 |
| 1 | Seat belts | 177 |
| 1.1 | Safety instructions for work on seat belt tensioners | 177 |
| 1.2 | Summary of components of front seat belts | 177 |
| 1.3 | Removing and installing the rear seat belts | 179 |
| 1.4 | Summary of components - rear middle three-point seat belt | 180 |
| 1.5 | Removing and installing the middle belt retractor | 180 |
| 2 | Inspect seat belts | 181 |
| 2.1 | Checks | 181 |
| 3 | Airbag | 184 |
| 3.1 | Airbag system | 184 |
| 3.2 | Regulations concerning safety precautions when working on the airbag | 185 |
| 3.3 | Replacing parts of the airbag system | 186 |
| 3.4 | Removing and installing driver's side airbag unit ► 07.04 | 187 |
| 3.5 | Removing and installing driver's side airbag unit 08.04 ► | 188 |



| | | |
|-----------|--|------------|
| 3.6 | Four spoke steering wheel assembly overview ► 07.04 | 188 |
| 3.7 | Four spoke steering wheel - Assembly overview 08.04 ► | 190 |
| 3.8 | Three-spoke steering wheel - Assembly overview | 191 |
| 3.9 | Removing and installing restoring ring with slip ring | 191 |
| 3.10 | Removing and installing airbag unit on the passenger side | 192 |
| 3.11 | Removing and installing the side airbag crash sensor | 193 |
| 3.12 | Removing and installing side airbag units | 194 |
| 3.13 | Removing and installing the airbag control unit J234 | 196 |
| 3.14 | Removing and installing front passenger airbag key switch | 196 |
| 4 | Disposal of pyrotechnical parts before scrapping the vehicle | 198 |
| 4.1 | Dispose of the airbag units before scrapping the vehicle | 198 |
| 70 | Trim, insulation | 200 |
| 1 | Dash panel | 200 |
| 1.1 | Removing and installing the dash panel | 200 |
| 1.2 | Removing and installing bottom dash panel | 203 |
| 1.3 | Removing and installing passenger glove compartment | 205 |
| 1.4 | Removing and installing middle dash panel | 205 |
| 1.5 | Removing and installing the central tube/dash panel | 207 |
| 1.6 | Removing and installing the convenience system central control unit | 208 |
| 2 | Door trim panels | 209 |
| 2.1 | Summary of components - Front door trim panel | 209 |
| 2.2 | Removing and installing the front door trim panel | 209 |
| 2.3 | Summary of components of rear door trim panel | 210 |
| 2.4 | Removing and installing the rear door trim panel | 211 |
| 2.5 | Removing and installing window crank | 212 |
| 2.6 | Removing and installing the rear door trim panel (Praktik) | 212 |
| 3 | Door and side trim panels | 214 |
| 3.1 | Removing and installing top trim panel of pillar A | 214 |
| 3.2 | Removing and installing bottom trim panel of A-pillar | 214 |
| 3.3 | Assembly overview B-pillar panels | 214 |
| 3.4 | Removing and installing bottom B-pillar trim panel | 215 |
| 3.5 | Removing and installing the C pillar trim | 216 |
| 3.6 | Removing and installing bottom C-pillar trim panel | 216 |
| 3.7 | Removing and installing the C pillar trim (Fabia Combi) | 217 |
| 3.8 | Removing and installing top D-pillar trim panel | 218 |
| 3.9 | Removing and installing shelf (notchback) | 218 |
| 3.10 | Summary of components - scuff plate | 218 |
| 3.11 | Removing and installing the tailgate/luggage compartment cover (Praktik) | 220 |
| 4 | Luggage compartment trim panels | 221 |
| 4.1 | Assembly overview Pad for boot cover | 221 |
| 4.2 | Assembly overview side boot lining | 222 |
| 4.3 | Removing and installing the trim panel for the luggage compartment floor | 222 |
| 4.4 | Assembly overview, boot loading sill covers | 223 |
| 4.5 | Assembly overview Tailgate covers | 224 |
| 4.6 | Removing and installing holder for luggage compartment cover (Combi) | 225 |
| 4.7 | Removing and installing luggage compartment side trim panel (Combi) | 225 |
| 4.8 | Removing and installing the boot lid trim panel (Praltik) | 226 |
| 4.9 | Removing and installing the boot lid trim panel (Praltik) | 226 |
| 4.10 | Removing and installing the finishing strip | 227 |
| 5 | Moulded headliner | 228 |
| 5.1 | Removing and installing moulded headliner | 228 |
| 5.2 | Removing and installing the moulded headliner (Praktik) | 229 |
| 5.3 | Assembly overview of moulded headliner sound insulation (Fabia Combi II) | 230 |



| | |
|---|------------|
| 72 - Seat frames | 232 |
| 1 Front seats | 232 |
| 1.1 Removing and installing front seats | 232 |
| 1.2 Removing and installing the grip for the seat height adjuster | 233 |
| 1.3 Removing and installing the backrest rack for the seat rack | 233 |
| 1.4 Removing and installing seat height adjustment | 235 |
| 2 Rear seats | 236 |
| 2.1 Removing and installing seat bench and backrest | 236 |
| 2.2 Removing and installing the rear armrests | 237 |
| 74 - Seat - padding, covers | 238 |
| 1 Covers and upholstery of the front seats | 238 |
| 1.1 Summary of components of covers and seat upholstery | 238 |
| 1.2 Summary of components of cover and backrest upholstery | 239 |
| 2 Rear covers and seat upholstery | 242 |
| 2.1 Summary of components of covers and seat upholstery | 242 |
| 2.2 Summary of components of cover and rear backrest upholstery | 243 |