

Contents

00 - Technical data	1
1 Identification of the gearbox	1
1.1 Identification characters, aggregate assignment, ratios, capacities	1
2 Overview of Transmission System	4
2.1 Designation of components and transmission ratio	4
3 General Repair Information	5
30 - Clutch	8
1 Clutch control	8
1.1 Summary of components - Foot controls	8
1.2 removing and installing, setting angular clutch pedal switch F36	10
1.3 removing and installing, setting cylindrical clutch pedal switch F36	11
1.4 Removing and installing the over-centre helper spring	11
1.5 Removing and installing the clutch pedal	13
1.6 Removing and installing bracket	14
1.7 Summary of components - Hydraulics	16
1.8 Removing and installing the master cylinder	18
1.9 Removing and installing the slave cylinder	20
1.10 Bleeding the clutch system	22
2 Repairing the clutch control	24
3 Repairing the clutch	26
34 - Control, housing	29
1 Shift mechanism	29
1.1 Fitting location of shift mechanism	29
2 I - Gearshift knob and cover - Summary of components	31
2.1 Separating collar from gearshift lever	32
3 II - Shift lever and shift housing - Summary of components	33
3.1 Shift lever and shift housing up to 05.06	33
3.2 Shift lever and shift housing as of 06.06	35
4 III - Control cables - Summary of components	37
4.1 Control cables up to 05.06	37
4.2 Control cables as of 06.06	39
4.3 Plastic relay lever	41
5 Removing and Installing Shift Mechanism	43
5.1 Removing	43
5.2 Install	45
6 Setting the shift mechanism	48
6.1 Operation	50
7 Removing and installing the gearbox	51
7.1 Removing	51
7.2 Install	58
8 Inspecting gear oil	61
9 Disassembling and assembling the gearbox	62
9.1 Gearbox overview	62
9.2 Summary of components	63
9.3 I - Disassembling and assembling gearbox housing cover and 5th gear	64
9.4 II - Disassembling and assembling gearbox housing and gearshift mechanism	64
9.5 III - Removing and installing the drive shaft, output shaft, differential and gearshift forks	66
9.6 Mounting sequence	66
10 Repairing the gearbox housing and clutch housing	77



11	Repairing the gearshift mechanism	82
12	Disassembling and assembling the gearshift forks	84
35	- Wheels, shafts	87
1	Drive shaft	87
1.1	Disassembling and assembling the drive shaft	87
1.2	Setting drive shaft	93
2	Output shaft	97
2.1	Disassembling and assembling the output shaft	97
2.2	Setting output shaft	108
3	Reverse shaft	110
3.1	Disassembling and assembling the reverse shaft	110
39	- Final drive, differential	112
1	Replacing the flange shaft gasket rings (gearbox assembled)	112
1.1	Replacing the left flange shaft gasket ring	112
1.2	Difference between the gasket rings with right flange	114
1.3	Replace gasket ring in separated version for right flange shaft	114
1.4	Replace gasket ring in single version (together with bushing) for right flange shaft	115
2	Differential	118
2.1	Disassembling and assembling the differential	118
2.2	Adjusting the differential gear	124
3	Setting overview	127