



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification of the gearbox</b> .....	<b>1</b>
1.1 Identification characters, aggregate assignment, ratios, capacities .....	1
<b>2 Overview of Transmission System</b> .....	<b>9</b>
2.1 Designation of components and transmission ratio .....	9
<b>3 General Repair Information</b> .....	<b>10</b>
<b>30 - Clutch</b> .....	<b>13</b>
<b>1 Clutch control</b> .....	<b>13</b>
1.1 Test of hydraulic clutch control .....	13
1.2 Summary of components - Foot controls .....	14
1.3 Difference between clutch pedal switches F36 .....	16
1.4 Removing and installing, adjusting clutch pedal switch F36 with angular housing .....	16
1.5 Removing and installing, adjusting clutch pedal switch F36 with round housing .....	17
1.6 Removing and installing the over-centre helper spring .....	17
1.7 Removing and installing the clutch pedal .....	18
1.8 Removing and installing bracket .....	19
1.9 Summary of components - Hydraulics .....	21
1.10 Removing and installing the master cylinder .....	23
1.11 Removing and installing the slave cylinder .....	25
1.12 Bleeding the clutch system .....	26
<b>2 Repairing the clutch control</b> .....	<b>28</b>
<b>3 Repairing the clutch</b> .....	<b>30</b>
3.1 Fault finding power transmission - problems with the clutch and clutch control .....	30
3.2 Repairing the clutch - summary of components .....	35
3.3 Removing and installing clutch on vehicles with 1.2 ltr and 1.4 ltr engines .....	37
3.4 Removing and installing clutch on vehicles with 1.9 ltr and 2.0 ltr engines .....	38
<b>34 - Control, housing</b> .....	<b>39</b>
<b>1 Shift mechanism</b> .....	<b>39</b>
1.1 Fitting location of shift mechanism .....	39
<b>2 I - Gearshift knob and cover - Summary of components</b> .....	<b>41</b>
2.1 Remove and install gearshift knob with collar of gearshift lever .....	42
<b>3 II - Shift lever and shift housing - Summary of components</b> .....	<b>43</b>
3.1 Shift lever and shift housing up to 05.06 .....	43
3.2 Shift lever and shift housing as of 06.06 .....	45
<b>4 III - Control cables - Summary of components</b> .....	<b>47</b>
4.1 Control cables up to 05.06 .....	47
4.2 Control cables as of 06.06 .....	49
4.3 Plastic relay lever .....	51
<b>5 Removing and Installing Shift Mechanism</b> .....	<b>53</b>
5.1 Removing .....	53
5.2 Install .....	55
<b>6 Setting the shift mechanism</b> .....	<b>58</b>
6.1 Operation .....	60
<b>7 Removing and installing the gearbox</b> .....	<b>61</b>
7.1 Removing the gearbox .....	61
7.2 Installing the gearbox .....	67
<b>8 Inspecting gear oil</b> .....	<b>71</b>
<b>9 Disassembling and assembling the gearbox</b> .....	<b>72</b>
9.1 Gearbox overview .....	72



9.2	Summary of components .....	73
9.3	I - Disassembling and assembling gearbox housing cover and 5th gear .....	74
9.4	II - Disassembling and assembling clutch housing .....	75
9.5	III - Disassembling and assembling the drive shaft, output shaft, differential and gearshift forks .....	76
9.6	Mounting sequence .....	77
<b>10</b>	<b>Repairing the gearbox housing and clutch housing .....</b>	<b>84</b>
<b>11</b>	<b>Repairing gearshift unit (gearshift shaft with cover) .....</b>	<b>89</b>
<b>12</b>	<b>Disassembling and assembling the gearshift forks .....</b>	<b>92</b>
<b>35 -</b>	<b>Wheels, shafts .....</b>	<b>96</b>
<b>1</b>	<b>Drive shaft .....</b>	<b>96</b>
1.1	Disassembling and assembling the drive shaft .....	96
<b>2</b>	<b>Output shaft .....</b>	<b>105</b>
2.1	Disassembling and assembling the output shaft .....	105
<b>39 -</b>	<b>Final drive, differential .....</b>	<b>112</b>
<b>1</b>	<b>Replacing the flange shaft gasket rings (gearbox assembled) .....</b>	<b>112</b>
1.1	Replacing the left flange shaft gasket ring .....	112
1.2	Replacing the right flange shaft seal ring .....	113
<b>2</b>	<b>Differential .....</b>	<b>115</b>
2.1	Disassembling and assembling the differential .....	115
2.2	Install stop disc compound and tapered-roller bearing for differential as of gearbox manufacturing date 06 05 2. ....	120
2.3	Adjusting the differential gear .....	122