



Contents

1	General points	1
1.1	Vehicle identification number	1
1.2	Type plate	3
1.3	Storage of ŠKODA new vehicles	3
1.4	Vehicle handover from stock	3
1.5	Additional customer information regarding inspection and maintenance	3
1.6	Determine the age of the vehicle	5
1.7	Checking the vehicle log book	5
2	Inspections	6
2.1	Pre-Delivery Inspection -PDI- (Export)	6
2.2	Pre-sales Inspection - domestic (Czech Republic)	8
2.3	Delivery Inspection (Export)	12
2.4	Inspection	16
2.5	Oil change service	20
2.6	Country allocation due to fuel quality, dust content and temperature	22
2.7	service intervals	28
3	Engines	30
3.1	Engine overview	30
3.2	Engine fitted	33
3.3	Visual inspection of engine and parts in the engine compartment for leaks and damage	34
3.4	Replacing toothed belt for camshaft drive and tensioning pulley	35
3.5	Replacing the V-ribbed belt	35
3.6	Replacing toothed belt for coolant pump	35
3.7	Engine oil	35
3.8	Cooling system: check	41
3.9	V-ribbed belt: check condition	45
3.10	Routing of V-ribbed belt	46
3.11	Replace spark plugs	47
3.12	Replace air filter element	57
3.13	Multi-purpose additive for petrol engines	61
3.14	Replace fuel filter - petrol engines	62
4	Gearbox	63
4.1	Check final drive and joint boots for leaks and damage	63
4.2	6-speed automatic gearbox 09G: check ATF level and quality, refill or replace ATF	63
5	Chassis	69
5.1	Inspecting thickness of front and rear brake pads/linings	69
5.2	Clean rear drum brake (noises, glue brake pad)	73
5.3	Inspecting brake system for leaks and damage	74
5.4	Change brake fluid	74
5.5	Brake fluid level: check.	81
5.6	Front and rear axles: check	81
5.7	Tyres: check	82
5.8	Tightening wheel bolts to specific torque	88
5.9	Tyre pressure monitoring indicator: calibration	88
5.10	Transport lock: remove the front axle locking components	89
5.11	Breakdown kit: check	90
6	Electrical System	92
6.1	Electric consumers: check they are functioning	92
6.2	Front and rear exterior lighting: check	93
6.3	Interior lights: check	93
6.4	Checking battery	93
6.5	Check the function of the Infotainment	93
6.6	Setting clock	94



6.7	Connect diagnostic unit	95
6.8	Check language version of driver's instructions	95
6.9	Climatology: set the temperature to 22 °C	96
6.10	Resetting service interval display (SID)	96
6.11	Changing the code of the service intervals	97
6.12	Inspecting the headlight beam setting	98
6.13	Checking the operation of the fog lights with the "Corner" function (static cornering light)	103
6.14	Carrying out diagnostic step: delivery inspection, overall delivery inspection	104
6.15	Time-delayed locking mechanism after closing the tailgate - activate/deactivate	104
6.16	Replace OCU control unit (control unit for emergency call module and communication unit J949)	105
6.17	Škoda Connect services	105
6.18	Check that the emergency call system is ready	105
6.19	Update software in infotainment and check the digital instructions	108
7	Body	111
7.1	Airbag: check for proper operation	111
7.2	Front passenger airbag: check "ON/OFF" is working and switch to "ON"	111
7.3	Inspecting underbody protection for damage	113
7.4	Checking body paintwork and underbody protection for damage (before sale)	113
7.5	Check for corrosion	113
7.6	Inspecting plenum chamber and water drain openings for dirt, cleaning if necessary	114
7.7	Windscreen wash/wipe system: check	114
7.8	Door locks, locking buttons and child lock: check functioning correctly	117
7.9	Replacing the dust and odour filter	118
7.10	Stick the sticker Škoda Assistance	118
7.11	Inspect original trailer coupling device	118
7.12	Front flap lock: lubricate	119
8	Exhaust-emission analysis	120
8.1	Exhaust-Emission Analysis on Models with Petrol Engines	120
9	Miscellaneous	124
9.1	Tow starting/Towing	124
9.2	Road test	125
9.3	Raise vehicle	126
10	PTI - Periodic Technical Inspection	128
10.1	PTI - Periodic Technical Inspection	128
10.2	General description of the electromechanical parking brake	138
10.3	Electronic vehicle interface	139
10.4	Check steering system	139