



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety instructions</b>	<b>1</b>
1.1 Safety precautions when working on air Conditioning systems	1
1.2 Safety precautions when working on vehicles with a start/stop system	1
1.3 Safety precautions when working on cooling system	1
<b>2 General points</b>	<b>2</b>
2.1 Identification plates	2
2.2 Notes concerning odours in air conditioned vehicles	2
<b>3 Repair instructions</b>	<b>4</b>
3.1 Working on refrigerant circuit	4
3.2 Cable routing and securing	4
3.3 Seals, sealing rings	5
<b>4 Technical data</b>	<b>6</b>
4.1 Filling capacities for refrigerant	6
4.2 Filling capacities for refrigerant oil	6
<b>80 - Heating</b>	<b>8</b>
<b>1 Fitting location overview - heating</b>	<b>8</b>
1.1 Fitting location overview - components outside of passenger compartment	8
1.2 Fitting location overview - components inside of passenger compartment	8
<b>2 Heating and air conditioning unit</b>	<b>10</b>
2.1 Removing and installing heater unit	10
<b>3 Control and display unit</b>	<b>11</b>
3.1 Removing and installing control and display unit	11
<b>4 Other control components</b>	<b>12</b>
4.1 removing and installing ambient temperature sensor G17	12
<b>87 - Air conditioning system</b>	<b>13</b>
<b>1 Fitting location overview - air conditioning system</b>	<b>13</b>
1.1 Fitting location overview - components outside of passenger compartment	13
1.2 Fitting location overview - components inside of passenger compartment	15
<b>2 Refrigerant circuit</b>	<b>20</b>
2.1 System overview - refrigerant circuit	20
2.2 Removing and installing the pressure sender for refrigerant circuit G805	22
2.3 Removing and installing the expansion valve	23
2.4 Removing and installing the capacitor	25
2.5 Disconnecting and connecting the refrigerant lines of the condenser	26
2.6 Reasons for replacing the desiccator cartridge	27
2.7 Removing and installing desiccator bag/desiccator cartridge	27
2.8 Removing and installing suction and filling valve, low and high pressure side	32
2.9 Commissioning of air conditioning system after filling refrigerant circuit	34
2.10 Clean the refrigerant circuit	34
<b>3 AC compressor</b>	<b>36</b>
3.1 Summary of components - AC compressor	36
3.2 Assembly overview - belt pulley	40
3.3 Removing and installing the refrigerant lines at the AC compressor	42
3.4 Removing and installing AC compressor	43
3.5 Removing and installing air conditioning system magnetic clutch N25	45
3.6 Inspecting the pressure relief valve on the AC compressor	48
<b>4 Control motors</b>	<b>49</b>
4.1 Installation overview - front control motors	49



4.2	Removing and installing the defroster flap control motor V107 .....	54
4.3	Removing and installing the front air distribution actuator V145 .....	55
4.4	Removing and installing control motor of fresh air flap and re-circulating air flap V154 ..	56
4.5	Removing and installing the left control motor for temperature flap V158 .....	58
4.6	Removing and installing right control motor for temperature flap V159 .....	60
4.7	Removing and installing the control motor for fresh air and re-circulating air/air flow flap V425 .....	62
4.8	Remove and install adjustment unit for air distribution flap .....	65
4.9	Removing and installing the actuator for temperature flap .....	67
<b>5</b>	<b>Heater and air conditioning unit, front .....</b>	<b>70</b>
5.1	Summary of components - Heating and air conditioning unit .....	70
5.2	Summary of components - parts of the heating and air conditioning units and air intake box .....	81
5.3	Summary of components - evaporator housing .....	84
5.4	Removing and installing evaporator .....	85
5.5	Removing and installing heater and air conditioning unit .....	86
5.6	Removing and installing dust pollen filter .....	89
5.7	Removing and installing the fresh air blower V2 .....	91
5.8	Removing and installing fresh air blower control unit J126 .....	92
5.9	Removing and installing heat exchanger .....	92
5.10	Removing and installing coolant pipes on the heat exchanger .....	95
5.11	Removing and installing condensate water drain .....	96
5.12	Check condensation water drain .....	98
5.13	Removing and installing series resistor for fresh air blower with overheating fuse N24 ..	99
<b>6</b>	<b>Air duct .....</b>	<b>100</b>
6.1	Summary of components - air duct and air distribution in passenger compartment .....	100
6.2	Removing and installing the footwell vent on the driver's side .....	103
6.3	Removing and installing the footwell vent on the front passenger side .....	104
6.4	Removing and installing the rear footwell vent .....	105
6.5	Removing and installing air duct for rear centre console air vent .....	106
6.6	Removing and installing exhaust ventilation for passenger compartment .....	106
6.7	Checking exhaust ventilation for passenger compartment .....	107
6.8	Removing and installing fresh air intake .....	108
6.9	Remove and install air intake duct from air intake box .....	109
6.10	Removing and installing air guide for defroster air vent .....	109
6.11	Removing and installing air duct for the dash panel vents in the centre .....	110
<b>7</b>	<b>Control and display unit .....</b>	<b>111</b>
7.1	Removing and installing front control and display unit .....	111
<b>8</b>	<b>Other control components .....</b>	<b>114</b>
8.1	Removing and installing sunlight penetration photosensor G107 .....	114
8.2	removing and installing ambient temperature sensor G17 .....	114
8.3	Removing and installing the ambient humidity sensor for air conditioning system G355 ..	115
8.4	Removing and installing the left vent temperature sender G150 .....	115
8.5	Removing and installing the right vent temperature sender G151 .....	116
8.6	Removing and installing the Footwell vent temperature sender G192 .....	116
8.7	Removing and installing evaporator temperature sensor G308 .....	117