



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Engine identification	2
2.2 Engine characteristics	3
3 Electrical components	5
3.1 Access to diagnoses	5
4 Technical data	7
4.1 Test and adjustment values	7
10 - Removing and installing engine	12
1 Safety and repair instructions	12
1.1 Safety information	12
1.2 Repair instructions	12
2 Removing and installing engine	13
2.1 Removing engine	13
2.2 Disconnecting engine and gearbox	24
2.3 Securing engine on engine and gearbox support	27
2.4 Installing engine	30
3 Assembly bracket	34
3.1 Summary of components: assembly mounting, Octavia IV, Fabia IV, Scala, Kamiq, Karoq	34
3.2 Removing and installing engine mounting	37
3.3 Demontáž a montáž uložení převodovky, Octavia IV, Karoq	38
3.4 Removing and installing gearbox mount, Fabia IV, Scala, Kamiq	39
3.5 Removing and installing pendulum support	41
3.6 Supporting the engine in its installed position, Octavia IV	42
3.7 Supporting the engine in its installed position, Karoq	46
3.8 Supporting the engine in its installed position, Fabia IV, Scala, Kamiq	51
3.9 Checking and adjusting assembly mountings	55
13 - Crankshaft group	59
1 Safety and repair instructions	59
1.1 Safety information	59
1.2 Repair instructions	59
2 Cylinder block (pulley end)	60
2.1 Overview of components: V-ribbed belt drive	60
2.2 Removing and installing V-ribbed belt	61
2.3 Removing and installing V-ribbed belt tensioning device	65
2.4 Removing and installing vibration damper	67
2.5 Removing and installing engine support	70
2.6 Renewing crankshaft oil seal for pulley end	71
2.7 Removing and installing sealing flange, pulley end	74
3 Cylinder block, gearbox end	77
3.1 Assembly overview – cylinder block, gearbox end	77
3.2 Removing and installing flywheel	79
3.3 Removing and installing sealing flange (gearbox end)	83
4 Crankshaft	95
4.1 Renewing needle bearing in crankshaft	95
4.2 Measuring axial clearance of crankshaft	96



5	Pistons and conrods	98
5.1	Assembly overview – pistons and conrods	98
5.2	Removing and installing pistons	99
5.3	Checking pistons and cylinder bores	101
5.4	Separating new conrod	103
5.5	Checking radial clearance of conrods	104
5.6	Removing and installing oil spray jets	106
5.7	Setting piston to TDC (top dead centre)	107
15	- Cylinder head, valve gear	112
1	Safety and repair instructions	112
1.1	Safety information	112
1.2	Repair instructions	112
2	Cylinder head	113
2.1	Assembly overview – cylinder head	113
2.2	Assembly overview – camshaft housing	114
2.3	Removing and installing cylinder head	116
2.4	Removing and installing camshaft housing	120
2.5	Checking compression	124
2.6	Checking cylinder head for distortion	125
3	Toothed belt drive	127
3.1	Assembly overview – toothed belt cover	127
3.2	Assembly overview - toothed belt	127
3.3	Removing and installing toothed belt guard	129
3.4	Removing and installing toothed belt	131
3.5	Preassembling and assembling test tool VAS 611 007	137
3.6	Checking valve timing	145
3.7	Adjusting valve timing	147
4	Valve gear	159
4.1	Assembly overview – valve gear	159
4.2	Removing and installing camshaft gasket ring	159
4.3	Removing and installing camshaft control	167
4.4	Removing and installing inlet camshaft control valve 1 [N727]	174
4.5	Removing and installing exhaust camshaft control valve 1 [N318]	175
4.6	Removing and installing valve stem seal	176
4.7	Removing and installing holder for oil seal	187
4.8	Checking control valve	189
4.9	Removing and installing inlet camshaft control valve 1 [N727]	190
5	Inlet and exhaust valves	194
5.1	Checking valve guides	194
5.2	Checking valves	195
17	- Lubrication	196
1	Safety and repair instructions	196
1.1	Safety information	196
1.2	Repair instructions	196
2	Sump, oil pump	197
2.1	Assembly overview – sump/oil pump	197
2.2	Engine oil:	200
2.3	Removing and installing oil sump	200
2.4	Removing and installing oil pump	204
2.5	Removing and installing oil level and oil temperature sender [G266]	206
3	Engine oil cooler	208
3.1	Assembly overview – engine oil cooler	208
3.2	Removing and installing engine oil cooler	208



4	Crankcase ventilation	210
4.1	Assembly overview – crankcase breather system	210
4.2	Removing and installing oil separator	211
5	Oil filter, oil pressure switch	214
5.1	Assembly overview – oil filter/oil pressure switch	214
5.2	Removing and installing oil pressure sender [G10]	214
5.3	Checking oil pressure and oil pressure switch	216
5.4	Removing and installing oil filter	216
5.5	Removing and installing oil pressure regulating valve [N428]	217
5.6	Removing and installing piston cooling jet control valve [N522]	218
19	- Cooling	219
1	Safety and repair instructions	219
1.1	Safety information	219
1.2	Repair instructions	219
2	Cooling system, coolant	220
2.1	Connection diagram - coolant hoses	220
2.2	Checking cooling system for leaks	222
2.3	Checking filling quality of cooling system	225
2.4	Removing and installing coolant expansion tank	228
2.5	Draining coolant	230
2.6	Filling cooling system	231
2.7	Checking coolant level and topping up	234
3	Coolant pump, regulation of cooling system	237
3.1	Assembly overview –coolant pump, thermostat	237
3.2	Assembly overview – electric coolant pump	238
3.3	Assembly overview – coolant temperature sender	238
3.4	Removing and installing electric coolant pump	239
3.5	Removing and installing coolant pump	241
3.6	Removing and installing toothed belt pulley for coolant pump	247
3.7	Removing and installing coolant temperature sender [G62]	249
3.8	Removing and installing radiator outlet coolant temperature sender [G83]	252
3.9	Removing and installing engine outlet coolant temperature sender [G82]	253
3.10	Removing and installing engine temperature regulation module [GX33]	256
3.11	Checking coolant pump	259
4	Coolant pipes	264
4.1	Assembly overview – coolant pipes	264
4.2	Removing and installing coolant pipes	264
5	Radiator, radiator fan	268
5.1	Summary of components: radiator, Octavia IV, Scala, Kamig, Karoq	268
5.2	Summary of components: radiator, Fabia IV	269
5.3	Assembly overview – radiator cowl and radiator fan	270
5.4	Assembly overview – radiator blind	271
5.5	Removing and installing radiator, Octavia IV, Scala, Kamig, Karoq	274
5.6	Removing and installing radiator, Fabia IV	278
5.7	Removing and installing radiator cowl	283
5.8	Removing and installing radiator fan VX57	285
5.9	Removing and installing radiator blind	286
5.10	Removing and installing radiator blind control motor [V544]	288
21	- Turbocharging/supercharging	294
1	Safety and repair instructions	294
1.1	Safety information	294
1.2	Repair instructions	294
2	Exhaust gas turbocharger	295



2.1	Overview of components: exhaust gas turbocharger	295
2.2	Removing and installing turbocharger	298
2.3	Removing and installing charge pressure control module [GX34]	304
2.4	Removing and installing connection for turbocharger	304
3	Charging system	307
3.1	Assembly overview – charge air system	307
3.2	Removing and installing charge air cooler	309
3.3	Removing and installing charge pressure sender [GX26]	310
3.4	Checking charge air system for leaks	311
3.5	Removing and installing air intake pipe	314
24	Mixture preparation - injection	318
1	Safety and repair instructions	318
1.1	Safety information	318
1.2	Repair instructions	318
2	Injection system	319
2.1	Installation location overview: injection system	319
3	Vacuum system	323
3.1	Assembly overview – vacuum system	323
3.2	Removing and installing vacuum line	323
4	Injection valves	326
4.1	Assembly overview – fuel rail with injectors	326
4.2	Removing and installing fuel rail	328
4.3	Removing and installing injectors	329
4.4	Renewing seals on injectors	332
5	Air filter	336
5.1	Assembly overview - air filter housing	336
5.2	Removing and installing air filter housing	338
5.3	Removing and installing the air guide on the lock carrier	340
6	Intake manifold	343
6.1	Assembly overview – intake manifold	343
6.2	Removing and installing intake manifold	345
6.3	Removing and installing throttle valve module [GX3]	347
6.4	Cleaning throttle valve module [GX3]	347
7	Senders and sensors	349
7.1	Removing and installing fuel pressure sender [G247]	349
7.2	Checking fuel pressure sender G247	350
7.3	Removing and installing intake manifold sender [GX9]	352
7.4	Removing and installing exhaust gas pressure sensor 1 [G450]	352
8	Engine control unit	355
8.1	Assembly overview - engine/motor control unit	355
8.2	Removing and installing engine control unit -J623	355
9	High pressure pump	361
9.1	Assembly overview - high-pressure pump	361
9.2	Removing and installing high-pressure pump	362
9.3	Removing and installing high-pressure pipe	365
10	Lambda probe	367
10.1	Assembly overview – lambda probe	367
10.2	Removing and installing Lambda probe	367
26	Exhaust system	371
1	Safety and repair instructions	371
1.1	Safety information	371
1.2	Repair instructions	371



2	Exhaust pipes/silencers	372
2.1	Summary of components: silencer, Octavia IV	372
2.2	Summary of components: Silencer, Scala, Kamiq, Fabia IV	372
2.3	Summary of components: silencer, Karoq	374
2.4	Separating exhaust pipes from silencers	374
2.5	Removing and installing front silencer	376
2.6	Removing and installing the silencer, Octavia IV	377
2.7	Removing and installing rear silencer, Fabia IV, Scala, Kamiq	380
2.8	Removing and installing rear silencer, Karoq	381
2.9	Aligning exhaust system free of stress	383
2.10	Checking exhaust system for leaks	384
2.11	Installation position of clamp	384
3	Cleansing exhaust emissions	387
3.1	Assembly overview – emission control	387
3.2	Removing and installing catalytic converter	390
3.3	Removing and installing particulate filter	394
3.4	Removing and installing bracket of catalytic converter/front exhaust pipe	394
28	Ignition system	398
1	Safety and repair instructions	398
1.1	Safety information	398
1.2	Repair instructions	398
2	Ignition system	399
2.1	Assembly overview – ignition system	399
2.2	Removing and installing ignition coil with output stage	401
2.3	Removing and installing knock sensor 1 [G61]	404
2.4	Removing and installing engine speed sender [G28]	405
2.5	Removing and installing inlet camshaft position sender [G1002]	407
2.6	Removing and installing exhaust camshaft position sender [G1003]	408