



Contents

00 - Technical data	1
1 Denomination	1
1.1 Engine number, engine data	1
2 Safety instructions	4
2.1 Safety precautions when working on fuel supply system	4
2.2 Safety precautions when working on vehicles with a start/stop system	5
2.3 Safety precautions during road tests in which testing and measuring equipment is used	5
3 General points	6
3.1 Cleanliness rules when working on the parking/auxiliary heater and fuel system	6
4 Repair notes	7
4.1 General repair instructions	7
4.2 Contact corrosion	7
4.3 Cable routing and securing	7
20 - Fuel supply system	8
1 Fuel tank	8
1.1 Assembly overview - fuel tank	8
1.2 Removing and installing the fuel tank	14
1.3 Drain the fuel tank	37
2 Fuel delivery unit, fuel gauge sender	48
2.1 Assembly overview - fuel delivery unit, fuel gauge sender	48
2.2 Removing and installing fuel delivery unit, fuel gauge sender	56
2.3 Removing and installing the fuel gauge sender G	68
2.4 Removing and installing fuel gauge sender 2 G169	70
3 Quick couplings	72
3.1 Separating push-on couplings	72
4 Fuel filter	76
5 Activated charcoal filter system	77
5.1 Connection diagram - Activated charcoal filter system	77
5.2 Assembly overview - activated charcoal filter system	81
5.3 Removing and installing activated charcoal filter	84
5.4 Checking the fuel tank venting	86
6 Accelerator control	99
6.1 Assembly overview - accelerator module	99
6.2 Removing and installing accelerator pedal module GX2	100
7 Fuel pump	102
7.1 Checking the fuel system pressurisation pump G6	102
7.2 Removing and installing fuel pump control unit J538	118
7.3 Removing and installing suction jet pump	118
8 Connected fuel hoses	120
8.1 Removing and installing fuel line for auxiliary heating	120
8.2 Removing and installing fuel lines	121