



Contents

1	General points	1
1.1	Vehicle identification number	1
1.2	Type plate	3
1.3	Storage of ŠKODA new vehicles	3
1.4	Vehicle handover from stock	4
1.5	Additional customer information regarding inspection and maintenance	4
1.6	Determine the age of the vehicle	5
1.7	Checking the vehicle log book	5
2	Inspections	6
2.1	Pre-Delivery Inspection -PDI- (Export)	6
2.2	Pre-sales Inspection - domestic (Czech Republic)	8
2.3	Delivery Inspection (Export)	12
2.4	Inspection	16
2.5	Oil change service	31
2.6	Country allocation due to fuel quality, dust content and temperature	33
2.7	service intervals	40
3	Engines	46
3.1	Engine overview	46
3.2	Engine fitted	52
3.3	Visual inspection of engine and parts in the engine compartment for leaks and damage	53
3.4	Replace engine oil filter	54
3.5	Replacing toothed belt for camshaft drive and tensioning pulley	60
3.6	Replacing toothed belt for coolant pump drive	60
3.7	Inspecting engine oil level	61
3.8	Drain off or suction off engine oil; top up engine oil	62
3.9	VW engine oil standards, oil filling quantity	67
3.10	Cooling system: check	73
3.11	V-ribbed belt: check condition	77
3.12	Replacing the V-ribbed belt	78
3.13	Routing of V-ribbed belt	78
3.14	Replace spark plugs	79
3.15	Replace air filter element	92
3.16	Replacing the fuel filter (diesel engines)	100
3.17	Drain fuel filter	103
3.18	Checking particle filter	103
3.19	Reduction agent (AdBlue®): fill, replace	105
3.20	Multi-purpose additive for petrol engines	117
3.21	Multi-purpose additive for diesel engines	119
4	Gearbox	121
4.1	Check final drive and joint boots for leaks and damage	121
4.2	Changing the oil in the four-wheel drive clutch	121
4.3	6-speed dual-clutch gearbox (DSG) 0D9: change oil, replace filter	124
4.4	Change gear oil: dual-clutch gearbox (DSG) 0GC	130
4.5	Replace ATF - automatic 6-speed gearbox 09G	136
4.6	Replace ATF - automatic 8-speed gearbox 09S	140
5	Chassis	145
5.1	Inspecting thickness of front and rear brake pads/linings	145
5.2	Inspecting brake system for leaks and damage	149
5.3	Change brake fluid	149
5.4	Brake fluid level: check.	155
5.5	Front and rear axles: check	156
5.6	Tyres: check	157
5.7	Tightening wheel bolts to specific torque	166



5.8	Tyre pressure monitoring indicator: calibration	166
5.9	Breakdown kit: check	167
6	Electrical System	168
6.1	Electric consumers: check they are functioning	168
6.2	Front and rear exterior lighting: check	169
6.3	Interior lights: check	169
6.4	Checking battery	170
6.5	Check the function of the Infotainment	170
6.6	Setting clock	171
6.7	Connect diagnostic unit	171
6.8	Check language version of driver's instructions	171
6.9	Climatology: set the temperature to 22 °C	172
6.10	Resetting service interval display (SID)	173
6.11	Changing the code of the service intervals	175
6.12	Inspecting headlight beam setting and adjusting if necessary	176
6.13	Checking the operation of the fog lights with the Corner function (static cornering light)	193
6.14	Check for proper operation of automatic light	193
6.15	Check operation of adaptive front headlights, LED headlights	194
6.16	Checking the function of the daylight driving light	194
6.17	Carrying out diagnostic step: delivery inspection, overall delivery inspection	195
6.18	Time-delayed locking mechanism after closing the tailgate - activate/deactivate	195
6.19	Replace OCU control unit (control unit for emergency call module and communication unit J949)	195
6.20	ERA Glonass: check that the emergency call system is ready	196
6.21	ERA Glonass: run system test	198
6.22	Check that the emergency call system is ready	198
6.23	Škoda Connect services	201
6.24	Check the digital instructions in Infotainment	202
7	Body	204
7.1	Airbag: check for proper operation	204
7.2	Front passenger airbag: check "ON/OFF" is working and switch to "ON"	204
7.3	Inspecting underbody protection for damage	206
7.4	Checking body paintwork and underbody protection for damage (before sale)	206
7.5	Check for corrosion	206
7.6	Inspecting plenum chamber and water drain openings for dirt, cleaning if necessary	207
7.7	Windscreen wash/wipe system: check	207
7.8	Door locks, locking buttons and child lock: check functioning correctly	212
7.9	Replacing the dust and odour filter	213
7.10	Stick the sticker Škoda Assistance	214
7.11	Panoramic tilting/sliding sunroof: check function, clean and grease runners	214
7.12	Sliding roof drains: check flow, clean if necessary	217
7.13	Front flap lock: lubricate	218
7.14	Attaching the "ŠKODA CONNECT" mirror tag	218
8	Exhaust-emission analysis	219
8.1	Exhaust-Emission Analysis on Models with Petrol Engines	219
8.2	Exhaust-Emission Analysis on Models with Diesel Engines	222
8.3	Emissions test for diesel engines - particle number, PN	227
9	Miscellaneous	233
9.1	Tow starting/Towing	234
9.2	Road test	236
9.3	Raise vehicle	237
10	PTI - Periodic Technical Inspection	238
10.1	PTI - Periodic Technical Inspection	238
10.2	General description of the electromechanical parking brake	248
10.3	Electronic vehicle interface	249



10.4	Check steering system	249
------	-----------------------------	-----