



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
40 - Front suspension	4
1 Safety and repair instructions	4
1.1 Safety information	4
1.2 Repair instructions	4
2 Subframe	5
2.1 Assembly overview – subframe, steel	5
2.2 Assembly overview – subframe, Aluminium	5
2.3 Removing and installing subframe without steering rack	6
2.4 Removing and installing subframe with steering rack	9
2.5 Servicing subframe	11
2.6 Repairing thread in longitudinal member	16
2.7 Fixing subframe in position	16
2.8 Lowering subframe	18
2.9 Preparing foot pump	21
3 Suspension strut, upper suspension link	23
3.1 Assembly overview - suspension strut, upper suspension links	23
3.2 Removing and installing suspension strut	24
3.3 Removing and installing spring	28
4 Lower suspension link, swivel joint	32
4.1 Assembly overview - lower suspension links, swivel joint	32
4.2 Removing and installing lower suspension link, manual gearbox or dual clutch gearbox 0CW	34
4.3 Removing and installing lower suspension link, dual clutch gearbox 0GC	35
4.4 Checking swivel joint	36
4.5 Removing and installing swivel joint	37
4.6 Renewing bonded rubber bush for lower suspension link	39
4.7 Removing and installing stone deflector for suspension link	43
5 Wheel bearing	45
5.1 Assembly overview – wheel bearing	45
5.2 Removing and installing wheel bearing housing	45
5.3 Removing and installing wheel bearing unit	48
6 Drive shaft	50
6.1 Overview – drive shaft	50
6.2 Assembly overview – drive shaft, constant velocity joint	50
6.3 Loosening and tightening threaded connections of drive shaft	58
6.4 Removing and installing drive shaft	61
6.5 Tensioning clamp for boot	65
6.6 Pressing out drive shaft of wheel bearing housing	66
6.7 Removing and installing heat shield for drive shaft	67
6.8 Dismantling and assembling drive shaft, outer constant velocity joint	68
6.9 Dismantling and assembling drive shaft, inner constant velocity joint	70
6.10 Checking outer constant velocity joint	84
6.11 Checking inner constant velocity joint	85
7 Anti-roll bar	88
7.1 Assembly overview – anti-roll bar	88



7.2	Removing and installing anti-roll bar	88
7.3	Removing and installing coupling rod	89
42	Rear suspension	91
1	Safety and repair instructions	91
1.1	Safety information	91
1.2	Repair instructions	91
2	Rear axle	92
2.1	Securing vehicle to support arms of lifting platform	92
2.2	Removing and installing rear axle, torsion beam axle	93
2.3	Removing and installing rear axle, multi-link suspension, front-wheel drive	96
2.4	Removing and installing rear axle, multi-link suspension, four-wheel drive	98
3	Axle beam	101
3.1	Assembly overview – axle beam	101
3.2	Assembly overview – attachments for torsion beam axle	101
3.3	Renewing bonded rubber bushes for axle beam	102
3.4	Removing and installing outer trim of torsion beam axle	107
3.5	Removing and installing centre cladding of torsion beam axle	108
4	Subframe	109
4.1	Assembly overview – subframe, multi-link suspension, front-wheel drive	109
4.2	Assembly overview – subframe, multi-link suspension, four-wheel drive	109
4.3	Assembly overview – subframe attachments	110
4.4	Preparing fastening device	111
4.5	Fixing position of subframe, multi-link suspension, front-wheel drive	115
4.6	Fixing subframe in position, multi-link suspension, four-wheel drive	115
4.7	Repairing subframe	116
5	Anti-roll bar	122
5.1	Summary of components: anti-roll bar, multi-link suspension, front-wheel drive	122
5.2	Assembly overview – anti-roll bar, multi-link suspension, four-wheel drive	123
5.3	Removing and installing anti-roll bar	123
5.4	Removing and installing coupling rod	124
6	Suspension link, track rod	126
6.1	Assembly overview – transverse link, multi-link suspension, four-wheel drive	126
6.2	Assembly overview – transverse links, vehicles with multi-link suspension and front-wheel drive	128
6.3	Assembly overview – track rod, multi-link suspension, four-wheel drive	130
6.4	Assembly overview – track rod, vehicles with multi-link suspension and front-wheel drive	131
6.5	Removing and installing upper transverse links	131
6.6	Removing and installing lower transverse link	133
6.7	Removing and installing coupling rod	134
6.8	Removing and installing trim of lower transverse link	135
7	Suspension strut, shock absorber, spring	136
7.1	Assembly overview – suspension strut, shock absorber, spring, torsion beam axle	136
7.2	Assembly overview – suspension strut, shock absorber, spring, multi-link suspension	137
7.3	Removing and installing shock absorber, torsion beam axle	137
7.4	Removing and installing shock absorbers, multi-link suspension	139
7.5	Renewing shock absorber	142
7.6	Removing and installing spring, torsion beam axle	145
7.7	Removing and installing spring, multi-link suspension	147
8	Wheel bearing, trailing arm, torsion beam axle	151
8.1	Assembly overview – wheel bearing assembly	151
8.2	Removing and installing wheel bearing unit	151
9	Wheel bearing, trailing arm, multi-link suspension	154
9.1	Assembly overview – wheel bearing, front-wheel drive	154
9.2	Assembly overview – wheel bearing, all-wheel drive	156



9.3	Assembly overview - trailing arm	156
9.4	Removing and installing wheel bearing housing	157
9.5	Removing and installing wheel bearing unit, front-wheel drive	161
9.6	Removing and installing wheel bearing unit, all-wheel drive	163
9.7	Renewing bonded rubber bushes for wheel bearing housing	164
9.8	Removing and installing trailing arm with mounting bracket	166
9.9	Servicing trailing arm, bonded rubber bush	168
9.10	Servicing trailing arm, hydro-bush	172
10	Drive shaft	176
10.1	Assembly overview – bolted drive shaft	176
10.2	Assembly overview – push-fit drive shaft	178
10.3	Removing and installing bolted drive shaft	179
10.4	Removing and installing push-fit drive shaft	181
10.5	Dismantling and assembling drive shaft, outer constant velocity joint	181
10.6	Dismantling and assembling drive shaft, inner constant velocity joint	184
10.7	Pressing out drive shaft of wheel bearing housing	187
10.8	Loosening and tightening threaded connections of drive shaft	188
10.9	Checking outer constant velocity joint	189
10.10	Checking inner constant velocity joint	191
43	Self-levelling suspension	194
1	Safety and repair instructions	194
1.1	Safety information	194
1.2	Repair instructions	194
2	Electronic damping control	195
2.1	Assembly overview – electronically controlled damping	195
2.2	Removing and installing electronically controlled damping control unit [J250]	195
2.3	Removing and installing front body acceleration senders [G341]/[G342]	197
2.4	Removing and installing rear body acceleration sender [G343]	198
3	Vehicle level sender	200
3.1	Assembly overview – front vehicle level senders	200
3.2	Assembly overview – rear vehicle level senders	200
3.3	Assembly overview – rear vehicle level senders	201
3.4	Removing and installing front vehicle level senders [G78]/[G289]	202
3.5	Removing and installing rear vehicle level senders [G76]/[G77]	204
3.6	Removing and installing rear vehicle level senders [G76]/[G77]	206
44	Wheels, tyres, vehicle geometry	207
1	Wheel alignment	207
1.1	Notes on wheel alignment	207
1.2	Conditions for testing	207
1.3	Preparations for testing	207
1.4	Setting vehicle to initial position for wheel alignment	208
1.5	Necessity of wheel alignment	208
1.6	Adjusting camber at front wheels	209
1.7	Adjusting camber at rear axle, torsion beam axle	210
1.8	Adjusting camber at rear axle, multi-link suspension	210
1.9	Adjusting toe at rear axle, torsion beam axle	211
1.10	Adjusting toe on rear axle, multi-link suspension	211
1.11	Adjusting front axle toe	212
1.12	Checking full steering lock	213
1.13	Setpoints for wheel alignment, four-wheel drive, vehicles with multi-link rear suspension (G01)	213
1.14	Setpoints for wheel alignment, front drive, vehicles with torsion beam axle (G02)	215
1.15	Setpoints for wheel alignment, four-wheel drive, vehicles with multi-link rear suspension, DCC, (G03)	216



1.16	Setpoints for wheel alignment, front drive, vehicles with torsion beam axle, DCC (GO3) . . .	217
2	Wheels, tyres	219
2.1	Assembly overview - wheel	219
2.2	Removing and installing wheel	221
2.3	Cleaning contact surfaces on rim	222
2.4	Positioning anti-theft wheel bolts - steel wheels	223
48 - Steering	224
1	Safety and repair instructions	224
1.1	Safety information	224
1.2	Repair instructions	224
2	Steering wheel	225
2.1	Overview of components - Steering wheel	225
2.2	Removing and installing the steering wheel	225
3	Steering column	228
3.1	Assembly overview – steering column, version 1	228
3.2	Assembly overview – steering column, version 2	229
3.3	Removing and installing steering column, version 1	230
3.4	Removing and installing steering column, version 2	236
3.5	Removing and installing control unit for electronic steering column lock [J764], variant 1 . . .	241
3.6	Removing and installing control unit for electronic steering column lock [J764], variant 2 . . .	243
4	Steering rack	245
4.1	Assembly overview – steering rack	245
4.2	Assembly overview – track rods	247
4.3	Removing and installing steering rack	248
4.4	Removing and installing boot	250
4.5	Removing and installing track rod	252
4.6	Removing and installing track rod ball joint	253
4.7	Repairing steering rack	254