



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
98 - Assist systems	3
1 Safety information and repair notes	3
1.1 Safety information	3
1.2 Repair instructions	3
2 Fitting locations	4
2.1 Installation location overview: senders, sensors and control units in the front part of the vehicle	4
2.2 Installation location overview: senders, sensors and control units in the middle part of the vehicle	5
2.3 Overview of fitting locations – senders, sensors and control units in rear section of vehicle	5
3 Adaptive cruise control	7
3.1 Adjusting/calibrating adaptive cruise control unit	7
3.2 Calibration required	10
3.3 Removing and installing the J428 adaptive cruise control unit	12
4 Front camera for driver assistance systems	14
4.1 Calibrating front camera for driver assist systems [R242]	14
4.2 Removing and installing front camera for driver assistance system R242	21
4.3 Removing and installing window heater for front sensor Z113	23
5 Surround-view camera	24
5.1 Removing and installing rear overhead view camera [R246]	24
5.2 Removing and installing the J928 surround-view camera control unit	24
5.3 Removing and installing front surround-view camera R243	25
5.4 Removing and left/right-view camera R244/R245	26
5.5 Calibrating overhead view camera system	27
6 Parking assistance/parking assistant/autonomous parking	30
6.1 Removing and installing front parking aid senders [G252]/[G253]/[G254]/[G255]	30
6.2 Removing and installing rear parking aid senders [G203]/[G204]/[G205]/[G206]	31
6.3 Removing and installing front park assist steering senders [G568]/[G569]	33
6.4 Removing and installing rear park assist steering senders [G716]/[G717]	34
6.5 Removing and installing parking aid control unit [J446]	35
6.6 Removing and installing the rear parking aid warning buzzer H15	37
6.7 Removing and installing front parking aid warning buzzer [H22]	38
7 Lane change assist	40
7.1 Removing and installing J769/J770 lane change assist (SmartGate)	40
7.2 Removing and installing the warning light for lane change assistant in the exterior mirror	41
8 Reversing camera system	42
8.1 Calibrate reversing camera R189	42
8.2 Removing and installing reversing camera [R189]	46