

Contents

00 - Technical data	1
1 Identification	1
2 Electrical components	2
2.1 Access to diagnoses	2
3 Technical data	3
68 - Interior equipment	4
1 Safety information and repair notes	4
1.1 Safety information	4
1.2 Repair notes	4
2 Equipment	5
2.1 Summary of components: sun visors	5
2.2 Removing and installing the sun visor	5
2.3 Removing and installing the recessed handles of the roof	7
3 Centre console	8
3.1 Removing and installing front centre console trim	8
3.2 Removing and installing the bracket for the centre console	8
3.3 Removing and installing centre console	9
3.4 Summary of components - Centre console	10
4 Front centre armrest	13
4.1 Removing and installing front armrest	13
4.2 Removing and installing the upper part of the central arm rest	13
5 Interior mirror	15
5.1 Assembly overview – interior mirror	15
5.2 Removing and installing interior mirror	17
6 Shelves/covers	23
6.1 Removing and installing the steering column trim panel	23
6.2 Removing and installing the steering column trim panel	23
6.3 Removing and installing glove box in the dash panel	24
69 - Passenger protection	27
1 Safety information and repair notes	27
1.1 Safety information	27
1.2 Repair notes	27
2 Seat belts	28
2.1 Overview of fitting locations – seat belts and anchorage points	28
2.2 Summary of components - three-point seatbelt front	30
2.3 Summary of components: rear outer three-point seat belt	30
2.4 Summary of components - rear middle three-point seat belt	31
2.5 Removing and installing the front three-point seat belt	32
2.6 Removing and installing rear three-point seat belt	35
2.7 Removing and installing front belt guide	36
2.8 Removing and installing the front seat belt buckle	37
2.9 Removing and installing rear belt buckle	38
3 Airbag system	39
3.1 Installation location overview: airbag system	39
4 Airbag control unit	42
4.1 Removing and installing airbag control unit J234	42
4.2 After replacement, configure the control unit	43
5 Front airbag, driver side	44
5.1 Assembly overview: Driver airbag	44



5.2	Removing and installing airbag unit with igniter	44
5.3	Removing and installing restoring ring with slip ring (coil spring)	46
6	Front passenger airbag	47
6.1	Assembly overview: Passenger airbag	47
6.2	Removing and installing airbag unit on front passenger side with igniter	47
6.3	Removing and installing key-operated switch for deactivating the front passenger side airbag - E224	49
7	Side airbags	50
7.1	Summary of components - front side airbag	50
7.2	Summary of components - side airbag rear	50
7.3	Removing and installing front side airbag with igniter	51
7.4	Removing and installing rear side airbag with igniter	53
8	Knee airbags	54
8.1	Summary of components - knee airbag	54
8.2	Removing and installing airbag unit with igniter	54
9	Curtain airbags	57
9.1	Summary of components: head airbag	57
9.2	Removing and installing head airbag with igniter	57
10	Airbag crash sensors	62
10.1	Summary of components: crash sensors for airbag	62
10.2	Removing and installing the crash sensor for front airbag driver side -G283	63
10.3	Removing and installing the crash sensor for front side airbag G179/G180	63
10.4	Removing and installing the crash sensor for rear side airbag -G256/-G257	65
10.5	Removing and installing seat occupancy detection	66
70	Trim, insulation	68
1	Safety information and repair notes	68
1.1	Safety information	68
1.2	Repair notes	68
2	Front door trims	69
2.1	Summary of components: front door trim panel	69
2.2	Removing and installing the front door trim panel	69
3	Rear door trims	71
3.1	Summary of components: rear door trim panel	71
3.2	Removing and installing the rear door trim panel	71
4	Dash panel	73
4.1	Summary of components: dash panel	73
4.2	Removing and installing the decorative trim of the dash panel	73
4.3	Removing and installing dash panel vent	75
4.4	Removing and installing the dash panel	77
5	Central tube for dash panel	84
5.1	Summary of components: cross member for dash panel	84
5.2	Removing and installing the cross member for the dash panel	85
5.3	Removing and installing crash strut	86
6	Interior trims	89
6.1	Removing and installing the door sill trim	89
6.2	Removing and installing trim panel of pillar C	90
6.3	Removing and installing foot rest	90
6.4	Removing and installing A-pillar trim panel	92
6.5	Removing and installing B-pillar trim panel	95
7	Luggage compartment trims	98
7.1	Summary of components: luggage compartment side trim panel	98
7.2	Summary of components: lower tailgate trim	98
7.3	Summary of components: upper tailgate trim panel	99

7.4	Removing and installing lower tailgate trim	100
7.5	Removing and installing the upper tailgate trim panel	101
7.6	Removing and installing lock carrier trim	102
7.7	Removing and installing luggage compartment side trim panel	102
8	Roof trims	106
8.1	Summary of components: moulded headliner	106
8.2	Removing and installing moulded headliner	107
72 -	Seat frames	109
1	Safety information and repair notes	109
1.1	Safety information	109
1.2	Repair notes	109
2	Front seats	110
2.1	Removing and installing front seat	110
2.2	Removing and installing the handle for the seat height adjuster	111
2.3	Removing and installing seat height adjustment	113
2.4	Removing and installing the seat trim panel	114
2.5	Removing and installing lumbar support setting	114
2.6	Removing and installing the headrest	115
2.7	Removing and installing the headrest guide	115
2.8	Removing and installing the front backrest	116
2.9	Removing and installing lumbar support	117
3	Rear seats	118
3.1	Summary of components - Seat bench / individual seats	118
3.2	Removing and installing the rear seat bench / individual seats	121
3.3	Removing and installing backrests	124
74 -	Seat - padding, covers	127
1	Safety information and repair notes	127
1.1	Safety information	127
1.2	Repair notes	127
2	Front seat covers and padding	128
2.1	Removing and installing the cover and upholstery for the seat pan	128
2.2	Removing and installing cover and backrest upholstery	130
2.3	Removing and installing seating heating elements	132
2.4	Removing and installing backrest heating elements	133
2.5	Removing and installing the control unit for the seat heating	134
3	Rear seat covers and padding	135
3.1	Removing and installing seating heating elements	135
3.2	Removing and installing backrest heating elements	136
3.3	Removing and installing the cover and the upholstery	136