

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 General information	2
2.1 Starting conditions for auxiliary/supplementary heater	2
2.2 Type plates	2
3 Electrical components	4
3.1 Access to diagnoses	4
82 - Supplementary heating	6
1 Safety and repair instructions	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Overview of fitting locations – auxiliary/supplementary heater	7
2.1 Installation location overview: auxiliary heating system	7
3 Auxiliary/supplementary heater	9
3.1 Assembly overview - auxiliary/supplementary heater attachments	9
3.2 Assembly overview – auxiliary/supplementary heater, interior	10
3.3 Removing and installing auxiliary/supplementary heater	12
3.4 Dismantling and assembling auxiliary/supplementary heater	15
3.5 Removing and installing air intake silencer	16
3.6 Removing and installing circulation pump V55	17
3.7 Removing and installing exhaust system	18
3.8 Removing and installing bracket for auxiliary/supplementary heater	19
3.9 Removing and installing cover	21
3.10 Removing and installing glow plug with flame monitoring [Q8]	23
3.11 Removing and installing temperature sensor [G18] and overheating sensor [G189]	24
3.12 Dismantling and assembling combustion chamber insert	25
3.13 Removing and installing auxiliary heater control unit [J364] with combustion air blower [V6]	26
4 Coolant circuit with auxiliary/supplementary heater	27
4.1 Connection diagram - coolant hoses	27
4.2 Removing and installing coolant pipes for auxiliary heater	27
5 Fuel supply system	30
5.1 Overview of fitting locations - fuel supply system	30
5.2 Checking fuel delivery rate	31
5.3 Removing and installing metering pump V54	31
5.4 Bleeding fuel line to metering pump [V54] (filling with fuel)	33
6 Other controlling and regulating components	35
6.1 Removing and installing remote control receiver for auxiliary coolant heater [R149]	35
6.2 Adapting remote control for auxiliary/supplementary heater	35