

Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety precautions when working on vehicles with a start/stop system	1
1.2 Safety precautions during road tests in which testing and measuring equipment is used	1
1.3 Safety precautions when working on cooling system	1
1.4 Safety measures during towing/tow-starting	2
1.5 General safety instructions	2
2 Identification	3
2.1 Gearbox identification	3
2.2 Torque converter identification	3
3 Repair instructions	5
3.1 Rules of cleanliness	5
3.2 General points	5
3.3 General repair instructions	7
3.4 Contact corrosion	10
3.5 Seals and sealing rings	10
3.6 Screws, nuts	10
4 Technical data	12
4.1 Filling capacity	12
4.2 Allocation gearbox - engine	12
32 - Torque converter	14
1 Torque converter	14
1.1 Summary of components - torque converter	14
1.2 Removing and installing torque converter	14
1.3 Draining the torque converter	16
1.4 Checking the torque converter	16
1.5 Removing and installing gasket ring for torque converter	17
37 - Controls, housing	19
1 ATF circuit	19
1.1 Summary of components - ATF circuit	19
1.2 Removing and installing ATF radiator	19
2 ATF	23
2.1 Inspecting ATF level	23
2.2 Draining and filling ATF	28
3 Removing and installing the gearbox	33
3.1 Tightening torques for gearbox	33
3.2 Removing the gearbox	38
3.3 Installing the gearbox	100
4 Transporting the gearbox	113
5 Attachment at engine and gearbox mount	114
6 Shift mechanism	116
6.1 Fitting position overview - switching operation	116
6.2 Summary of components - Gearshift mechanism	118
6.3 Inspecting the gearshift mechanism	126
6.4 Emergency release out of P position	130
6.5 Removing and installing selector mechanism	139
6.6 Removing and installing selector lever handle	163
6.7 Installing the lock button at the selector lever handle	180
6.8 Removing and installing the selector lever control cable	182
6.9 Setting the shift mechanism	187



6.10	Inspecting and adjusting the selector lever control cable	195
6.11	Removing and installing the multi-function switch	200
6.12	Setting the multi-function switch	207
6.13	Replacing cable adjusting element	210
6.14	Replacing the sealing ring for the gearshift shaft	213
38	- Gears, control	214
1	Slide valve body	214
1.1	Summary of components - slide valve body	214
1.2	Remove and install wiring harness of encoders and solenoid valves	217
1.3	Removing and installing the slide valve body	220
1.4	Removing and installing oil pan	223
1.5	Removing and installing the oil filter	225
1.6	Removing and installing the gearbox input rpm sender G182 and the transmitter for the Gearbox output speed sender G195	226
39	- Final drive - differential	228
1	Sealing rings	228
1.1	Replacing left sealing ring	228
1.2	Replacing right sealing ring	230
2	Gearbox control system	234
2.1	Removing and installing gearbox control unit	234