

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
3 Identification	4
3.1 Gearbox identification	4
4 Technical data	5
4.1 Capacities	5
30 - Clutch	6
1 Safety information and repair notes	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Clutch mechanism	7
2.1 Assembly overview – clutch engagement mechanism	7
2.2 Removing and installing clutch engagement mechanism	9
2.3 Adjusting clutch engagement mechanism	11
2.4 Removing and installing ball-head pin	19
3 Clutch	20
3.1 Assembly overview – dual clutch	20
3.2 Removing dual clutch	20
3.3 Installing dual clutch	23
3.4 Renewing input shaft seal	26
3.5 Renewing oil seal for inner input shaft	27
34 - Controls, housing	29
1 Safety information and repair notes	29
1.1 Safety information	29
1.2 Repair instructions	29
2 Mechatronic unit	30
2.1 Assembly overview – mechatronic unit	30
2.2 Removing and installing mechatronic unit	31
2.3 Renewing clutch actuator piston	36
3 Selector mechanism	40
3.1 Summary of components - selector mechanism, Karoq	40
3.2 Summary of components - Gearshift mechanism, Octavia IV	42
3.3 Summary of components - gearstick mechanism, Superb IV	44
3.4 Emergency release out of P position, Karoq	46
3.5 Emergency release out of P position, Octavia IV	46
3.6 Emergency release out of P position - Superb IV	49
3.7 Removing and installing shifting mechanism, Karoq	50
3.8 Removing and installing gearshift mechanism, Octavia IV, Superb IV	54
3.9 Check shift operation, Karoq	58
3.10 Check shift mechanism, Octavia IV, Superb IV	62
3.11 Removing and installing the selector lever control cable	66
3.12 Inspecting and adjusting the selector lever control cable, Karoq	69
3.13 Inspecting and adjusting the selector lever control cable, Octavia IV, Superb IV	72
3.14 Removing and installing selector lever handle	74
3.15 Installing the lock button at the selector lever handle	77
3.16 Renewing selector shaft seal	78



4	Removing and installing gearbox	80
4.1	Specified torques for gearbox	80
4.2	Removing gearbox	80
4.3	Installing gearbox	84
5	Assembly mountings	87
5.1	Assembly overview - assembly mountings	87
6	Gearbox transport	88
6.1	Transporting gearbox	88
7	Securing to engine and gearbox support	89
7.1	Secure gearbox on engine and gearbox support	89
8	Gear oil	90
8.1	Assembly overview – oil drain and inspection plugs	90
8.2	Draining and filling gear oil	90
8.3	Draining and filling hydraulic fluid for mechatronic unit	91
35 - Gears, shafts		93
1	Safety information and repair notes	93
1.1	Safety information	93
1.2	Repair instructions	93
2	Parking lock	94
2.1	Assembly overview – parking lock	94
2.2	Removing and installing the trim for the parking lock	94
2.3	Removing and installing parking lock	96
39 - Final drive - differential		98
1	Safety information and repair notes	98
1.1	Safety information	98
1.2	Repair instructions	98
2	Seals	99
2.1	Assembly overview – seals	99
2.2	Renewing seal	99
3	Differential	102
3.1	Removing and installing flange shaft	102
3.2	Removing and installing stub shaft	103