

Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Access to diagnoses	2
3 Identification	4
3.1 Gearbox identification	4
4 Technical data	5
4.1 Capacities	5
30 - Clutch	6
1 Safety and repair instructions	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Clutch	7
2.1 Assembly overview - dual clutch	7
2.2 Removing and installing clutch end cover	7
2.3 Removing dual clutch	11
2.4 Installing dual clutch	13
34 - Controls, housing	22
1 Safety and repair instructions	22
1.1 Safety information	22
1.2 Repair instructions	22
2 Mechatronic unit	23
2.1 Assembly overview – mechatronic unit	23
2.2 Removing and installing oil pan	24
2.3 Removing and installing mechatronic unit	25
3 Angle gearbox	29
3.1 Assembly overview - bevel box	29
3.2 Removing bevel box	30
3.3 Installing bevel box	33
4 Selector mechanism	35
4.1 Summary of components: selector mechanism, Karoq	35
4.2 Summary of components: Gearshift mechanism, Octavia IV	37
4.3 Summary of components - gearstick mechanism, Superb IV, Kodiahq II	39
4.4 Emergency release out of P position, Karoq	41
4.5 Emergency release out of P position, Octavia IV	41
4.6 Emergency release out of P position - Superb IV, Kodiahq II	44
4.7 Removing and installing shifting mechanism, Karoq	45
4.8 Removing and installing gearstick mechanism, Octavia IV, Superb IV, Kodiahq II	49
4.9 Check shift operation, Karoq	53
4.10 Check gearshift mechanism, Octavia IV, Superb IV, Kodiahq II	57
4.11 Removing and installing the selector lever control cable	61
4.12 Inspecting and adjusting the selector lever control cable, Karoq	64
4.13 Inspecting and adjusting the selector lever control cable, Octavia IV, Superb IV, Kodiahq II	67
4.14 Removing and installing selector lever handle	69
4.15 Installing the lock button at the selector lever handle	72
4.16 Renewing selector shaft seal	73
5 Removing and installing gearbox	76
5.1 Specified torques for gearbox	76



5.2	Removing gearbox, vehicles with diesel engine	76
5.3	Removing gearbox, vehicles with petrol engine	83
5.4	Installing gearbox	89
6	Assembly mountings	93
6.1	Assembly overview - assembly mountings	93
7	Gearbox transport	94
7.1	Transporting gearbox	94
8	Securing to engine and gearbox support	95
8.1	Secure gearbox on engine and gearbox support	95
8.2	Securing bevel box/front differential lock to engine and gearbox support	95
9	Gear oil circuit	97
9.1	Assembly overview – gear oil circuit	97
9.2	Removing and installing gear oil cooler	97
9.3	Removing and installing gear oil filter	100
9.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil [V475]	101
10	Gear oil	104
10.1	Assembly overview – oil drain and inspection plugs	104
10.2	Checking gear oil level	104
10.3	Draining and filling gear oil	107
11	Front axle differential lock	110
11.1	Assembly overview - front differential lock	110
11.2	Removing front differential lock	110
11.3	Installing front differential lock	113
11.4	Removing and installing axle differential lock control unit J647	115
35	Gears, shafts	117
1	Safety and repair instructions	117
1.1	Safety information	117
1.2	Repair instructions	117
2	Dismantling and assembling gears and shafts	118
2.1	Currently, there are no approved repairs for gears and shafts. In the event of damage, renew the entire component.	118
39	Final drive - differential	119
1	Safety and repair instructions	119
1.1	Safety information	119
1.2	Repair instructions	119
2	Gear oil	120
2.1	Checking gear oil level	120
2.2	Draining and filling gear oil	121
3	Differential	124
3.1	Removing and installing right flange shaft	124
3.2	Renewing needle bearing for right flange shaft	125
3.3	Renewing ball bearing for flange shaft	126
4	Bevel gear components	128
4.1	Assembly overview: bevel gear components	128
4.2	Renewing oil seal for bevel box	134
4.3	Removing and installing output flange	135
5	Seals	139
5.1	Overview of fitting locations - oil seals	139
5.2	Renewing left seal	139
5.3	Renewing right seal	141
6	Components of front differential lock	144
6.1	Assembly overview - components of front differential lock	144

6.2	Removing and installing coupling for front differential lock	146
6.3	Removing and installing pump for front differential lock	146
6.4	Checking function	147
6.5	Checking oil level for front differential lock	147
6.6	Draining and filling oil for front differential lock	148
6.7	Renewing seals for front differential lock	150