

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	4
2.1 Safety precautions when working on fuel supply system	4
2.2 Safety precautions when working on vehicles with a start/stop system	4
2.3 Safety precautions during road tests in which testing and measuring equipment is used	5
2.4 Safety precautions when working on cooling system	5
2.5 Safety precautions when working on ignition system	5
2.6 General safety instructions	5
3 Repair instructions	7
3.1 Rules of cleanliness	7
3.2 General repair instructions	7
3.3 Foreign bodies in the engine	8
3.4 Contact corrosion	8
3.5 Cable routing and securing	8
3.6 Assembly of radiators and condensers	8
3.7 Checking the vacuum system	8
3.8 General repair instructions	9
10 - Removing and installing engine	12
1 Removing and installing engine	12
1.1 Removing engine	12
1.2 Disconnecting engine and gearbox	56
1.3 Attach engine attached to engine and gearbox mount	57
1.4 Installing engine	59
2 Assembly bracket	66
2.1 Assembly overview - assembly mountings	66
2.2 Removing and installing engine mount	71
2.3 Removing and installing gearbox mount	74
2.4 Support the engine in its installed position	79
2.5 Removing and installing pendulum support	86
13 - Crankshaft group	88
1 Cylinder block (pulley end)	88
1.1 Summary of components - V-ribbed belt drive	88
1.2 Removing and installing V-ribbed belt	92
1.3 Removing and installing tensioning pulley for V-ribbed belt	95
1.4 Removing and installing vibration dampener	95
1.5 Removing and installing engine support	98
1.6 Replacing crankshaft sealing ring on the belt pulley side	102
2 Cylinder block on gearbox side	105
2.1 Summary of components - cylinder block on gearbox side	105
2.2 Removing and installing flywheel	107
2.3 Removing and installing sealing flange on gearbox side	109
3 Crankshaft	117
3.1 Crankshaft dimensions	117
3.2 Replace the needle bearing in the crankshaft	117
4 Pistons and conrods	120
4.1 Summary of components - piston and conrod	120
4.2 Removing and installing the piston	122
4.3 Check piston and cylinder bore	124



4.4	Separating new connecting rod	125
4.5	Check radial clearance of connecting rods	126
4.6	Removing and installing oil injection nozzles	126
4.7	Position piston to TDC	127
15	Cylinder head, valve gear	131
1	Cylinder head	131
1.1	Summary of components - cylinder head	131
1.2	Summary of components - camshaft housing	133
1.3	Removing and installing cylinder head	135
1.4	Removing and installing camshaft housing	141
1.5	Checking compression	143
1.6	Checking the combustion chamber for tightness	145
2	Toothed belt drive	147
2.1	Summary of components - toothed belt guard	147
2.2	Summary of components - toothed belt	148
2.3	Overview of components - Timing tool	150
2.4	Removing and installing toothed belt	158
2.5	Checking valve timing	166
2.6	Setting the timing	171
2.7	Remove the toothed belt from the camshaft	183
3	Valve gear	189
3.1	Summary of components - valve gear	189
3.2	Measuring axial play of camshaft	191
3.3	Removing and installing gasket ring for camshaft	191
3.4	Removing and installing camshaft control	197
3.5	Removing and installing camshaft control valve 1 N205	205
3.6	Removing and installing camshaft control valve 1 in the exhaust N318	205
3.7	Removing and installing valve stem seals	206
4	Inlet and exhaust valves	216
4.1	inspecting valve guides	216
4.2	Testing valves	216
4.3	Valve dimensions	217
17	Lubrication	218
1	Sump, oil pump	218
1.1	Summary of components - pan/oil pump	218
1.2	Engine oil	224
1.3	Removing and installing oil pan	225
1.4	Removing and installing oil pump	234
1.5	Removing and installing oil level and oil temperature sender G266	236
2	Engine oil cooler	238
2.1	Summary of components - engine oil cooler	238
2.2	Removing and installing engine oil cooler	238
3	Crankcase ventilation	240
3.1	Summary of components - crankcase ventilation	240
3.2	Removing and installing oil separator	241
4	Oil filter, oil pressure switch	245
4.1	Summary of components - oil filter/oil pressure switch	245
4.2	Testing oil pressure and oil pressure switch	247
4.3	Removing and installing oil filter housing	247
4.4	Removing and installing valve for oil pressure control N428	248
4.5	Removing and installing oil pressure sender G10	249
19	Cooling	251

1	Cooling system, coolant	251
1.1	Connection diagram - coolant hoses	251
1.2	Check cooling system for leaks	252
1.3	Draining and filling coolant	254
2	Coolant pump, regulation of cooling system	261
2.1	Summary of components - coolant pump/thermostat	261
2.2	Summary of components - electric coolant pump	264
2.3	Summary of components - coolant temperature transmitter	265
2.4	Removing and installing electric coolant pump	266
2.5	Removing and installing coolant pump	268
2.6	Removing and installing coolant regulator	271
2.7	Removing and installing toothed belt pulley for coolant pump	274
2.8	Removing and installing coolant temperature transmitter G62	275
2.9	Removing and installing coolant temperature sender at radiator outlet G83	277
3	Coolant pipes	279
3.1	Summary of components - coolant pipe	279
3.2	Removing and installing coolant pipes	279
4	Radiator, radiator fan	281
4.1	Summary of components - radiator/radiator fan	281
4.2	Summary of components - fan shroud and radiator fan	285
4.3	Summary of components - radiator blind	286
4.4	Removing and installing radiator cowling with radiator fan	289
4.5	Removing and installing radiator fan V7	291
4.6	Removing and installing radiator	292
4.7	Removing and installing radiator blind	297
4.8	Removing and installing the radiator blind control motor V544	299
21	Turbocharging/supercharging	304
1	Exhaust gas turbocharger	304
1.1	Summary of components - exhaust gas turbocharger	304
1.2	Removing and installing exhaust gas turbocharger	308
1.3	Removing and installing charge pressure regulator V465	310
1.4	Removing and installing the exhaust gas turbocharger connection fitting	311
2	Charge-air system	316
2.1	Summary of components - charge air system	316
2.2	Removing and installing charge air cooler	318
2.3	Removing and installing charge pressure sender GX26	320
2.4	Checking the charge-air system for leak-tightness	320
2.5	Installing and removing the air guide pipe	322
24	Mixture preparation - injection	324
1	Injection system	324
1.1	Installation location overview - fuel injection system	324
1.2	Reduce fuel pressure	333
2	Injection valves	335
2.1	Summary of components - fuel distributor with injectors	335
2.2	Removing and installing the fuel distributor	339
2.3	Removing and installing injectors	341
2.4	Clean injectors	351
3	Air filter	353
3.1	Summary of components - air filter housing	353
3.2	Removing and installing air filter housing	356
4	Intake manifold	358
4.1	Summary of components - intake manifold	358



4.2	Removing and installing intake manifold	360
4.3	Removing and installing the throttle valve control unit GX3	363
4.4	Cleaning throttle valve control unit GX3	364
5	Senders and sensors	366
5.1	Removing and installing fuel pressure sender G247	366
5.2	Check fuel pressure sender G247	367
5.3	Removing and installing intake manifold pressure sender GX9	371
5.4	Removing and installing pressure sensor for exhaust gas 1 G450	371
6	Engine control unit	373
6.1	Removing and installing engine control unit J623	373
6.2	Removing and installing engine control unit J623 with protective housing	374
7	High pressure pump	381
7.1	Summary of components - high pressure pump	381
7.2	Removing and installing the high pressure pump	383
7.3	Removing and installing high pressure pipe	384
8	Lambda probe	386
8.1	Summary of components - lambda probe	386
8.2	Removing and installing Lambda probe	387
26 - Exhaust system		392
1	Exhaust pipes/silencers	392
1.1	Summary of components - silencers	392
1.2	Separating exhaust pipes/silencers	396
1.3	Removing and installing silencers	398
1.4	Align exhaust system free of stress	402
1.5	Inspecting the exhaust system for leaks	403
2	Cleansing exhaust emissions	404
2.1	Summary of components - exhaust gas cleaning	404
2.2	Removing and installing catalytic converter	410
28 - Ignition system		421
1	Ignition system	421
1.1	Summary of components - ignition system	421
1.2	Removing and installing ignition coil with output stage	423
1.3	Removing and installing knock sensor 1 G61	425
1.4	Removing and installing Hall sender	427
1.5	Removing and installing the engine speed transmitter G28	427