



Contents

00 - Technical data	1
1 Denomination	1
1.1 Engine number, engine data	1
2 Safety instructions	3
2.1 Safety precautions when working on fuel supply system	3
2.2 Safety precautions when working on vehicles with a start/stop system	3
2.3 Safety precautions during road tests in which testing and measuring equipment is used	4
2.4 Safety precautions when working on cooling system	4
2.5 Safety precautions when working on ignition system	4
2.6 General safety instructions	4
2.7 Safety precautions when working on the exhaust system	5
3 Repair instructions	6
3.1 Rules of cleanliness	6
3.2 Foreign bodies in the engine	6
3.3 Contact corrosion	6
3.4 Cable routing and securing	6
3.5 Assembly of radiators and condensers	7
3.6 Checking the vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Disconnecting engine and gearbox	20
1.3 Attach engine attached to engine and gearbox mount	26
1.4 Installing engine	28
2 Assembly bracket	32
2.1 Assembly overview - assembly mountings	32
2.2 Removing and installing engine mount	34
2.3 Removing and installing gearbox mount	35
2.4 Removing and installing pendulum support	37
2.5 Support the engine in its installed position	38
2.6 Adjusting the unit mounting	48
2.7 Check assembly bracket setting	50
3 Engine trim panel	51
3.1 Removing and installing engine trim panel	51
13 - Crankshaft group	52
1 Cylinder block (pulley end)	52
1.1 Summary of components - V-ribbed belt drive	52
1.2 Removing and installing V-ribbed belt	55
1.3 Removing and installing tensioning pulley for V-ribbed belt	56
1.4 Removing and installing vibration dampener	57
1.5 Removing and installing bracket for auxiliary units	64
1.6 Removing and installing engine support	67
1.7 Replacing crankshaft sealing ring on the belt pulley side	68
2 Cylinder block on gearbox side	71
2.1 Summary of components - cylinder block on gearbox side	71
2.2 Removing and installing flywheel	72
2.3 Removing and installing sealing flange on gearbox side	74
3 Crankshaft	78
3.1 Summary of components - crankshaft	78
3.2 Crankshaft dimensions	81



3.3	Assignment of crankshaft bearing shells	81
3.4	Replace the needle bearing in the crankshaft	83
3.5	Measuring axial play of crankshaft	85
3.6	Removing and installing sensor rotor	86
4	Balancing shaft	88
4.1	Summary of components - balancing shaft	88
4.2	removing and installing balancing shaft	90
5	Pistons and conrods	98
5.1	Summary of components - piston and conrod	98
5.2	Removing and installing the piston	102
5.3	Check piston and cylinder bore	104
5.4	Separating new connecting rod	106
5.5	Removing and installing oil injection nozzles	107
15	- Cylinder head, valve gear	111
1	Cylinder head	111
1.1	Summary of components - cylinder head	111
1.2	Removing and installing cylinder head	114
1.3	Exploded view – vacuum pump	123
1.4	Removing and installing the vacuum pump	124
1.5	Checking compression	126
2	Cover for timing chain	130
2.1	Summary of components - cover for timing chain	130
2.2	Removing and installing the cover for timing chain	133
3	Chain drive	142
3.1	Summary of components - timing chains for camshafts	142
3.2	Summary of components - drive chain for balancing shaft	146
3.3	Removing and installing the camshaft timing chain	149
3.4	Removing and installing drive chain for balancing shaft	173
3.5	Checking valve timing	177
3.6	Check timing chain	179
4	Valve gear	181
4.1	Summary of components - valve gear	181
4.2	Removing and installing camshaft	188
4.3	Removing and installing camshaft control	215
4.4	Removing and installing camshaft control valve 1 N205	216
4.5	Removing and installing camshaft control valve 1 in the exhaust N318	217
4.6	Removing and installing valve stem seals	218
5	Inlet and exhaust valves	229
5.1	inspecting valve guides	229
5.2	Testing valves	229
5.3	Valve dimensions	230
17	- Lubrication	231
1	Sump, oil pump	231
1.1	Summary of components - pan/oil pump	231
1.2	Removing and installing the bottom part of the oil sump	234
1.3	Removing and installing top part of the oil sump	235
1.4	Removing and installing oil pump	240
1.5	Removing and installing oil level and oil temperature sender G266	243
2	Engine oil cooler	245
2.1	Summary of components - engine oil cooler	245
2.2	Removing and installing engine oil cooler	245
3	Crankcase ventilation	248



3.1	Summary of components - crankcase ventilation	248
3.2	Removing and installing oil separator	249
4	Oil filter, oil pressure switch	253
4.1	Summary of components - oil filter/oil pressure switch	253
4.2	Summary of components - oil pressure switch/oil pressure control	253
4.3	Removing and installing oil pressure switch F1	255
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	256
4.5	Testing oil pressure	258
4.6	Removing and installing valve for oil pressure control N428	261
19	Cooling	264
1	Cooling system, coolant	264
1.1	Connection diagram - coolant hoses	264
1.2	Check cooling system for leaks	268
1.3	Draining and filling coolant	271
1.4	Flushing the cooling system	277
2	Coolant pump, regulation of cooling system	294
2.1	Summary of components - coolant pump/thermostat	294
2.2	Summary of components - electric coolant pump	296
2.3	Summary of components - coolant temperature transmitter	298
2.4	Summary of components - Coolant valves	299
2.5	Removing and installing electric coolant pump	302
2.6	Removing and installing coolant pump	304
2.7	Removing and installing toothed belt for coolant pump	305
2.8	Removing and installing coolant temperature transmitter G62	308
2.9	Removing and installing coolant temperature sender at radiator outlet G83	309
2.10	Removing and installing coolant valves	310
2.11	Removing and installing positioning element for engine temperature control	314
3	Coolant pipes	318
3.1	Summary of components - coolant pipe	318
3.2	Removing and installing bottom coolant pipes	318
3.3	Removing and installing top coolant pipes	320
4	Radiator, radiator fan	322
4.1	Summary of components - radiator/radiator fan	322
4.2	Summary of components - additional radiator	324
4.3	Summary of components - fan shroud and radiator fan	326
4.4	Summary of components - radiator blind	328
4.5	Removing and installing radiator	331
4.6	Removing and installing radiator cowling with radiator fan	337
4.7	Removing and installing radiator fan V7	341
4.8	Installing and removing additional radiator	342
4.9	Removing and installing radiator blind	346
4.10	Removing and installing the radiator blind control motor V544	347
21	Turbocharging/supercharging	353
1	Exhaust gas turbocharger	353
1.1	Summary of components - exhaust gas turbocharger	353
1.2	Removing and installing exhaust gas turbocharger	357
2	Charge-air system	370
2.1	Summary of components - charge air system	370
2.2	Summary of components - hose connections of the charge air system	371
2.3	Removing and installing charge air cooler	372
2.4	Removing and installing charge pressure sender G31	377
2.5	Checking the charge-air system for leak-tightness	377
2.6	Installing and removing the air guide pipe	379



24 - Mixture preparation - injection	381
1 Injection system	381
1.1 Installation location overview - fuel injection system	381
1.2 Reduce fuel pressure	396
2 Injection valves	398
2.1 Summary of components - fuel distributor with injectors	398
2.2 Removing and installing the fuel distributor	401
2.3 Removing and installing injectors	402
2.4 Replacing sealing rings on injector	408
2.5 Clean injectors	412
3 Air filter	414
3.1 Summary of components - air filter housing	414
3.2 Removing and installing air filter housing	416
4 Intake manifold	418
4.1 Summary of components - intake manifold	418
4.2 Removing and installing intake manifold	420
4.3 Removing and installing the throttle valve control unit GX3	425
4.4 Cleaning throttle valve control unit GX3	428
4.5 Test intake manifold changeover	429
5 Senders and sensors	432
5.1 Removing and installing fuel pressure sender G247	432
5.2 Check fuel pressure sender G247	434
5.3 Removing and installing air flow mass meter G70	438
5.4 Removing and installing fuel pressure sender for low-pressure G410	440
5.5 Removing and installing intake manifold pressure sender GX9	442
5.6 Removing and installing pressure sensor for exhaust gas 1 G450	442
6 Engine control unit	444
6.1 Removing and installing engine control unit J623	444
6.2 Removing and installing engine control unit J623 with protective housing	445
7 High pressure pump	449
7.1 Summary of components - high pressure pump	449
7.2 Removing and installing the high pressure pump	451
7.3 Removing and installing high pressure pipe	453
8 Lambda probe	457
8.1 Summary of components - lambda probe	457
8.2 Removing and installing Lambda probe	458
26 - Exhaust system	462
1 Exhaust pipes/silencers	462
1.1 Summary of components - silencers	462
1.2 Separating exhaust pipes/silencers	468
1.3 Removing and installing silencers	472
1.4 Align exhaust system free of stress	480
1.5 Inspecting the exhaust system for leaks	481
2 Cleansing exhaust emissions	482
2.1 Summary of components - exhaust gas cleaning	482
2.2 Removing and installing catalytic converter	491
2.3 Removing and installing the exhaust flap control unit J883	504
3 Exhaust temperature regulation	506
3.1 Summary of components - exhaust temperature regulation	506
3.2 Removing and installing parts of the exhaust gas temperature control system	507
28 - Ignition system	512



1	Ignition system	512
1.1	Summary of components - ignition system	512
1.2	Removing and installing ignition coils with output stage	514
1.3	Removing and installing knock sensor 1 G61	516
1.4	Removing and installing Hall sender	517
1.5	Removing and installing the engine speed transmitter G28	518