



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Engine identification	2
2.2 Engine characteristics	2
3 Technical data	4
3.1 Test and adjustment values	4
4 Electrical components	8
4.1 Access to diagnoses	8
10 - Removing and installing engine	9
1 Safety and repair instructions	9
1.1 Safety information	9
1.2 Repair instructions	9
2 Removing and installing engine	10
2.1 Removing engine	10
2.2 Disconnecting engine and gearbox	21
2.3 Securing engine on engine and gearbox support	24
2.4 Installing engine	27
3 Assembly bracket	31
3.1 Assembly overview – assembly mountings	31
3.2 Removing and installing engine mounting	34
3.3 Removing and installing gearbox mounting	35
3.4 Removing and installing pendulum support	36
3.5 Supporting the engine in its installed position, Octavia IV	37
3.6 Supporting the engine in its installed position, Kodiaq	40
3.7 Supporting the engine in installation position, Superb III	42
3.8 Supporting the engine in its installed position, Karoq	45
3.9 Supporting the engine in installation position, Superb IV	46
3.10 Checking and adjusting assembly mountings	49
4 Engine trim panel	53
4.1 Removing and installing engine cover panel	53
13 - Crankshaft group	54
1 Safety and repair instructions	54
1.1 Safety information	54
1.2 Repair instructions	54
2 Cylinder block (pulley end)	55
2.1 Assembly overview - cylinder block (pulley end)	55
2.2 Removing and installing poly-V belt	57
2.3 Removing and installing tensioner for poly V-belt	58
2.4 Removing and installing vibration damper	59
2.5 Renewing seal for vibration damper	65
2.6 Removing and installing bracket for ancillaries	67
2.7 Removing and installing engine support	69
3 Cylinder block on gearbox side	72
3.1 Assembly overview - cylinder block, gearbox end	72
3.2 Removing and installing flywheel	73
3.3 Removing and installing sealing flange on gearbox side	77



4	Crankshaft	81
4.1	Assembly overview - crankshaft	81
4.2	Allocation of main bearing shells	83
4.3	Renewing needle bearing in crankshaft	84
4.4	Measuring axial clearance of crankshaft	86
4.5	Measuring radial clearance of crankshaft	86
4.6	Removing and installing crankshaft	87
4.7	Removing and installing sender wheel	89
5	Balancing shaft	91
5.1	Assembly overview - balance shaft	91
5.2	removing and installing balancing shaft	91
6	Pistons and conrods	100
6.1	Assembly overview - pistons and conrods	100
6.2	Removing and installing pistons	101
6.3	Removing and installing oil spray jets	106
6.4	Checking pistons and cylinder bores	108
6.5	Separating new conrod	110
6.6	Checking radial clearance of conrods	111
15	Cylinder head, valve gear	113
1	Safety and repair instructions	113
1.1	Safety information	113
1.2	Repair instructions	113
2	Cylinder head	114
2.1	Assembly overview - cylinder head	114
2.2	Assembly overview – vacuum pump, 2.0 l petrol engine	116
2.3	Removing and installing cylinder head	117
2.4	Removing and installing vacuum pump, 2.0 l petrol engine	125
2.5	Checking compression	126
2.6	Checking cylinder head for distortion	127
3	Cover for timing chain	129
3.1	Assembly overview - cover for timing chain	129
3.2	Removing and installing the cover for timing chain	131
4	Chain drive	137
4.1	Assembly overview - camshaft timing chains	137
4.2	Assembly overview - drive chain for balance shaft	138
4.3	Removing and installing camshaft timing chain	140
4.4	Removing and installing bearing saddle	150
4.5	Check timing chain	154
4.6	Removing and installing drive chain for balance shaft	155
5	Valve gear	160
5.1	Summary of components: valve gear	160
5.2	Summary of components: valve train, DNNA	162
5.3	Removing and installing camshaft, DNPA, DNPB, DNFE	164
5.4	Removing and installing camshaft, DNNA	174
5.5	Removing and installing cam actuators	183
5.6	Removing and installing camshaft control valves [N205]/[N318]	184
5.7	Removing and installing valve stem seal	185
5.8	Checking control valve	195
6	Inlet and exhaust valves	197
6.1	Checking valve guides	197
6.2	Checking valves	197
17	Lubrication	199

1	Safety and repair instructions	199
1.1	Safety information	199
1.2	Repair instructions	199
2	Sump, oil pump	200
2.1	Assembly overview - sump/oil pump	200
2.2	Engine oil:	202
2.3	Removing and installing lower part of sump	202
2.4	Removing and installing upper part of sump	206
2.5	Removing and installing oil pump	210
2.6	Removing and installing oil level and oil temperature sender [G266]	212
3	Engine oil cooler	214
3.1	Assembly overview - engine oil cooler	214
3.2	Removing and installing engine oil cooler	214
4	Crankcase ventilation	216
4.1	Assembly overview - crankcase breather system	216
4.2	Removing and installing oil separator	217
4.3	Removing and installing crankcase pressure sensor [G1068]	218
5	Oil filter, oil pressure switch	219
5.1	Assembly overview - oil filter	219
5.2	Assembly overview - oil pressure switches/oil pressure control	219
5.3	Removing and installing oil pressure switch [F22]	220
5.4	Removing and installing oil pressure switch for reduced oil pressure [F378]	221
5.5	Removing and installing stage 2 oil pressure switch [F446]	222
5.6	Removing and installing oil pressure regulating valve [N428]	223
5.7	Removing and installing piston cooling jet control valve [N522]	223
5.8	Testing oil pressure	224
6	Oil circuit	227
6.1	Removing and installing oil return line for turbocharger	227
6.2	Removing and installing oil supply line	228
19 - Cooling		230
1	Safety and repair instructions	230
1.1	Safety information	230
1.2	Repair instructions	230
2	Cooling system, coolant	231
2.1	Connection diagram - coolant hoses	231
2.2	Checking cooling system for leaks	233
2.3	Checking filling quality of cooling system	236
2.4	Removing and installing coolant expansion tank	238
2.5	Draining coolant	240
2.6	Filling cooling system	241
2.7	Checking coolant level and topping up	243
3	Coolant pump, regulation of cooling system	246
3.1	Assembly overview - coolant pump, thermostat	246
3.2	Assembly overview - electric coolant pump	248
3.3	Assembly overview - coolant valves	249
3.4	Assembly overview - coolant temperature sender	250
3.5	Removing and installing electric coolant pump	251
3.6	Removing and installing coolant pump	253
3.7	Removing and installing toothed belt for coolant pump	254
3.8	Removing and installing actuator for engine temperature regulation [N493]	256
3.9	Removing and installing coolant temperature sender [G62]	258
3.10	Removing and installing radiator outlet coolant temperature sender [G83]	259
3.11	Removing and installing coolant valves	260



4	Coolant pipes	262
4.1	Assembly overview – coolant pipes	262
4.2	Removing and installing coolant pipes	264
5	Radiator, radiator fan	268
5.1	Summary of components: radiator	268
5.2	Assembly overview - auxiliary radiator	268
5.3	Assembly overview - radiator cowl and radiator fan	269
5.4	Removing and installing radiator	270
5.5	Removing and installing fan shroud	273
5.6	Removing and installing radiator fan	275
5.7	Removing and installing auxiliary radiator	276
21	- Turbocharging/supercharging	278
1	Safety and repair instructions	278
1.1	Safety information	278
1.2	Repair instructions	278
2	Exhaust gas turbocharger	279
2.1	Summary of components: exhaust gas turbocharger, DNFE	279
2.2	Summary of components: exhaust gas turbocharger, DNPA, DNPB, DNNA	282
2.3	Removing and installing exhaust gas turbocharger, DNFE	286
2.4	Removing and installing exhaust gas turbocharger, DNPA, DNPB, DNNA	292
2.5	Removing and installing charge pressure control module [GX34]	298
2.6	Removing and installing exhaust gas turbocharger speed encoder 1 G688, DNFE	300
3	Charging system	302
3.1	Summary of components: charging system, DNFE	302
3.2	Summary of components: charging system, engine codes DNPA, DNPB, DNNA	304
3.3	Removing and installing charge air cooler	306
3.4	Removing and installing charge pressure sender [GX26]	308
3.5	Checking charge air system for leaks	309
3.6	Installing and removing air guide pipe, DNFE	311
3.7	Installing and removing air guide pipe, DNPA, DNPB, DNNA	313
3.8	Removing and installing air recirculation valve for turbocharger N249, DNFE	316
3.9	Removing and installing air recirculation valve for turbocharger N249, DNPA, DNPB, DNNA	317
3.10	Charge air hose connections	318
24	- Mixture preparation - injection	319
1	Safety and repair instructions	319
1.1	Safety information	319
1.2	Repair instructions	319
2	Injection system	320
2.1	Installation location overview: injection system	320
2.2	Installation location overview: engine from above, DNNA	324
2.3	Installation location overview: engine from above, DNFE, DNPA, DNPB	326
3	Injection valves	329
3.1	Assembly overview - fuel rail with injectors	329
3.2	Removing and installing fuel rail	330
3.3	Removing and installing injectors	331
3.4	Cleaning injectors	334
3.5	Renewing seals on injectors	335
4	Air filter	339
4.1	Assembly overview - air filter housing	339
4.2	Removing and installing air filter housing	341
4.3	Removing and installing the air guide on the lock carrier	342
5	Intake manifold	344



5.1	Assembly overview - intake manifold	344
5.2	Removing and installing intake manifold	346
5.3	Removing and installing throttle valve module [GX3]	349
5.4	Cleaning throttle valve module [GX3]	350
5.5	Removing and installing intake manifold flap valve [N316]	351
5.6	Checking intake manifold change-over	352
6	Senders and sensors	354
6.1	Actuator for structure-borne sound and control unit for structure-borne sound, Octavia IV, Kodiaq	354
6.2	Removing and installing intake manifold pressure sender [GX9]	357
6.3	Removing and installing fuel pressure sender [G247]	357
6.4	Checking fuel pressure sender [G247]	359
6.5	Removing and installing intake manifold flap potentiometer [G336]	360
7	Engine control unit	362
7.1	Assembly overview - engine control unit	362
7.2	Removing and installing engine control unit J623	362
8	High pressure pump	367
8.1	Assembly overview - high-pressure pump	367
8.2	Removing and installing high-pressure pump	368
8.3	Removing and installing high-pressure pipe	370
9	Lambda probe	372
9.1	Assembly overview - Lambda probe	372
9.2	Removing and installing Lambda probe	374
10	Vacuum system	377
10.1	Connection diagram – vacuum system	377
26	Exhaust system	378
1	Safety and repair instructions	378
1.1	Safety information	378
1.2	Repair instructions	378
2	Exhaust pipes/silencers	379
2.1	Summary of components: silencer, DNFE, DNPB, Superb III, Superb IV.	379
2.2	Summary of components - silencer, DNPA, DNNA, Octavia IV, Superb III	381
2.3	Summary of components - silencer, DNNA Octavia IV	383
2.4	Summary of components - silencer, DNNA, Karoq	385
2.5	Summary of components - silencer, DNNA, Kodiaq	385
2.6	Removing and installing silencers, DNFE, DNPA, DNPB, DNNA, Octavia IV, Superb III, Superb IV	386
2.7	Removing and installing silencers, DNPA, DNNA, Kodiaq	388
2.8	Removing and installing silencers, DNNA, Karoq	389
2.9	Separating exhaust pipes from silencers	390
2.10	Aligning exhaust system free of stress	391
2.11	Checking exhaust system for leaks	392
2.12	Installation position of clamp	392
3	Cleansing exhaust emissions	394
3.1	Summary of components: exhaust gas cleaning, front-wheel drive	394
3.2	Summary of components: exhaust gas cleaning, vehicles with four-wheel drive	396
3.3	Assembly overview - bracket and pipes for pressure differential sender for particulate filter	399
3.4	Removing and installing bracket for catalytic converter/front exhaust pipe	399
3.5	Removing and installing catalytic converter, front-wheel drive	403
3.6	Removing and installing catalytic converter, four-wheel drive	408
3.7	Removing and installing exhaust flap control unit	413
3.8	Removing and installing pressure differential sender for particulate filter [G1037]	414
4	Exhaust temperature regulation	416
4.1	Summary of components: exhaust gas temperature control system, front-wheel drive	416



4.2	Summary of components: exhaust gas temperature control system, four-wheel drive	416
4.3	Removing and installing exhaust gas temperature sender, four-wheel drive	417
4.4	Removing and installing exhaust gas temperature sender, front-wheel drive	419
28	- Ignition system	422
1	Safety and repair instructions	422
1.1	Safety information	422
1.2	Repair instructions	422
2	Ignition system	423
2.1	Assembly overview - ignition system	423
2.2	Removing and installing ignition coil with output stage	425
2.3	Removing and installing knock sensor 1 [G61]	428
2.4	Removing and installing Hall sender	429
2.5	Removing and installing engine speed sender [G28]	430