

Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Technical data	2
2.1 Testing and setting values	2
3 Electrical components	3
3.1 Access to diagnoses	3
20 - Fuel supply system	4
1 Safety information and repair notes	4
1.1 Safety information	4
1.2 Repair instructions	4
2 Fuel tank, front-wheel drive	5
2.1 Summary of components: fuel tank, torsion beam axle	5
2.2 Summary of components: fuel tank, multi-link rear axle, Octavia IV	7
2.3 Summary of components: fuel tank, Superb IV	9
2.4 Summary of components: fuel tank, Kodiaq II	11
2.5 Emptying fuel tank	13
2.6 Removing and installing fuel tank, torsion beam axle	22
2.7 Removing and installing fuel tank, multi-link rear suspension, Octavia IV	28
2.8 Removing and installing fuel tank, Superb IV	35
2.9 Removing and installing fuel tank, Kodiaq II	42
2.10 Renewing seal for cap	49
2.11 Checking earth cable on filler neck of fuel tank	50
3 Fuel tank, all-wheel drive	52
3.1 Assembly overview - fuel tank	52
3.2 Emptying fuel tank	54
3.3 Removing and installing fuel tank	63
3.4 Renewing seal for cap	70
3.5 Checking earth cable on filler neck of fuel tank	71
4 Fuel delivery unit/fuel gauge sender	73
4.1 Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive	73
4.2 Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive	74
4.3 Removing and installing fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive	76
4.4 Removing and installing fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive	81
4.5 Removing and installing fuel gauge sender [G]	88
4.6 Removing and installing fuel gauge sender 2 [G169]	91
4.7 Removing and installing assembly opening cover	94
5 Plug-in connectors	96
5.1 Disconnecting plug-in connectors	96
6 Activated charcoal filter system	101
6.1 Connection diagram – activated charcoal filter system	101
6.2 Assembly overview – activated charcoal filter system	104
6.3 Removing and installing activated charcoal filter	105
6.4 Checking fuel tank breather	107
7 Accelerator mechanism	114
7.1 Assembly overview – accelerator pedal module	114
7.2 Removing and installing accelerator pedal module [GX2]	115
8 Fuel pump	116



8.1	Checking fuel system pressurisation pump [G6], EA888evo4	116
8.2	Checking fuel system pressurisation pump [G6], EA211, EA888	120
8.3	Connecting test instrument adapter for voltage measurement at fuel delivery unit	131
8.4	Connecting remote control	132
8.5	Removing and installing fuel pump control unit [J538]	134
8.6	Checking suction-jet pump	135
9	Connected fuel hoses	137
9.1	Removing and installing fuel line for auxiliary/supplementary heater	137
9.2	Removing and installing fuel lines	139