



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Technical data</b>	<b>2</b>
2.1 Testing and setting values	2
<b>3 Electrical components</b>	<b>3</b>
3.1 Access to diagnoses	3
<b>20 - Fuel supply system</b>	<b>4</b>
<b>1 Procedure in case of misfuelling</b>	<b>4</b>
1.1 Procedure in event of misfuelling	4
<b>2 Fuel tank, Superb IV</b>	<b>9</b>
2.1 Assembly overview – fuel tank, front-wheel drive	9
2.2 Removing and installing fuel tank, front-wheel drive	10
2.3 Assembly overview – fuel tank, all-wheel drive	15
2.4 Removing and installing fuel tank, four-wheel drive	17
2.5 Drain the fuel tank	22
2.6 Removing and installing misfuelling prevention device	32
2.7 Deactivating misfuelling prevention device	36
2.8 Renewing seal for cap	37
2.9 Checking earth cable on filler neck of fuel tank	38
<b>3 Fuel tank, all-wheel drive, Kodiaq</b>	<b>40</b>
3.1 Summary of components: fuel tank	40
3.2 Removing and installing fuel tank	42
3.3 Drain the fuel tank	47
3.4 Removing and installing misfuelling prevention device	57
3.5 Deactivating misfuelling prevention device	61
3.6 Renewing seal for cap	62
3.7 Checking earth cable on filler neck of fuel tank	63
<b>4 Fuel tank, front-wheel drive, Kodiaq</b>	<b>65</b>
4.1 Assembly overview - fuel tank	65
4.2 Removing and installing fuel tank	67
4.3 Drain the fuel tank	72
4.4 Removing and installing misfuelling prevention device	82
4.5 Deactivate misfuelling protection	86
4.6 Renewing seal for cap	87
4.7 Checking earth cable on filler neck of fuel tank	88
<b>5 Fuel tank, front-wheel drive, Octavia IV, Karoq</b>	<b>90</b>
5.1 Assembly overview – fuel tank, torsion beam axle	90
5.2 Assembly overview – fuel tank, multi-link rear suspension	92
5.3 Emptying fuel tank	94
5.4 Removing and installing fuel tank, torsion beam axle	103
5.5 Removing and installing fuel tank, multi-link rear suspension	111
5.6 Removing and installing misfuelling protection	120
5.7 Deactivating misfuelling prevention device	125
5.8 Renewing seal for cap	126
5.9 Checking earth cable on filler neck of fuel tank	126
<b>6 Fuel tank, all-wheel drive, Octavia IV, Karoq</b>	<b>128</b>
6.1 Assembly overview - fuel tank	128
6.2 Emptying fuel tank	130
6.3 Removing and installing fuel tank	139



6.4	Removing and installing misfuelling prevention device .....	148
6.5	Deactivate misfuelling protection .....	152
6.6	Renewing seal for cap .....	153
6.7	Checking earth cable on filler neck of fuel tank .....	154
<b>7</b>	<b>Fuel delivery unit, fuel gauge sender .....</b>	<b>156</b>
7.1	Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive ..	156
7.2	Assembly overview - fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive ..	157
7.3	Removing and installing fuel delivery unit/fuel gauge sender, vehicles with front-wheel drive .....	159
7.4	Removing and installing fuel delivery unit/fuel gauge sender, vehicles with four-wheel drive .....	164
7.5	Removing and installing fuel gauge sender [G] .....	171
7.6	Removing and installing fuel gauge sender 2 [G169] .....	174
7.7	Removing and installing assembly opening cover .....	177
<b>8</b>	<b>Plug-in connectors .....</b>	<b>179</b>
8.1	Disconnecting plug-in connectors .....	179
<b>9</b>	<b>Fuel filter .....</b>	<b>184</b>
9.1	Assembly overview - fuel filter .....	184
9.2	Removing and installing fuel filter .....	186
<b>10</b>	<b>Accelerator mechanism .....</b>	<b>190</b>
10.1	Assembly overview – accelerator pedal module .....	190
10.2	Removing and installing accelerator pedal module [GX2] .....	191
<b>11</b>	<b>Fuel pump .....</b>	<b>192</b>
11.1	Checking fuel system pressurisation pump [G6] .....	192
11.2	Connecting remote control .....	207
11.3	Removing and installing fuel pump control unit [J538] .....	209
11.4	Checking suction-jet pump .....	210
11.5	Removing and installing suction-jet pump .....	211
<b>12</b>	<b>Fuel lines .....</b>	<b>212</b>
12.1	Removing and installing fuel line for auxiliary/supplementary heater .....	212
12.2	Removing and installing fuel lines .....	214
12.3	Fuel hoses in engine compartment .....	220
<b>13</b>	<b>Senders and sensors .....</b>	<b>223</b>
13.1	Removing and installing water separator sender [G63] .....	223