

001 - Basic equipment , (L0L)	1-45
1. Basic equipment , (L0L)	1
2. Battery, Horn relay, Fuse holder A, Fuse holder B	2
3. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B	3
4. Fuse holder C	4
5. Fuse holder C	5
6. Fuse holder C	6
7. Fuse holder C	7
8. Fuse holder C	8
9. Fuse holder C	9
10. Heated rear window relay, Fuse holder C	10
11. Terminal 15 voltage supply relay, Fuse holder C	11
12. Fuse holder C	12
13.	13
14.	14
15.	15
16. Steering column electronics control unit	16
17. Right steering column switch, Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Steering column electronics control unit	17
18. Right steering column switch, Multifunction display call-up button, Multifunction display memory switch, Steering column electronics control unit, Ignition key withdrawal lock solenoid	18
19. Ignition/starter switch, Steering column electronics control unit	19
20. Left steering column switch, Steering column electronics control unit	20
21. Left steering column switch, Coil connector, Horn plate, Steering column electronics control unit	21
22. Humidity sender, Light sensor, Air humidity, rain and light sensor, Driver side windscreen wiper motor	22
23. Rear window wiper motor	23
24. Headlight washer system pump, Windscreen and rear window washer pump	24
25. Front interior light	25
26. Front interior light	26
27. Rear interior light	27
28. Rear left reading light, Rear right reading light	28
29. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	29
30. Electric torch, Right luggage compartment light	30
31. Rear lid handle release button, Rear lid lock unit	31
32. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	32
33. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	33
34. 12 V socket, 12 V socket 2, USB charging socket 1	34
35. Switch module 2 in centre console, Storage compartment illumination bulb	35
36. Treble horn, Bass horn	36
37. Immobiliser reader coil, Brake fluid level warning contact, Dash panel insert	37
38. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Dash panel insert	38
39. Bonnet contact switch, Front right brake pad wear sender, Dash panel insert	39
40. Dash panel insert	40
41. Dash panel insert	41
42. Data bus diagnostic interface, Dash panel insert	42
43. Data bus diagnostic interface	43
44. Data bus diagnostic interface	44
45. Data bus diagnostic interface, Diagnostic connection	45
002 - 1.0l petrol engine with start/stop system , CHZJ,(7L6)	46-73
1. 1.0l petrol engine with start/stop system , CHZJ,(7L6)	46
2. Battery, Starter, Battery monitor control unit, Fuse holder B	47
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	48
4. Main relay, Engine/motor control unit, Fuse holder B	49
5. Engine/motor control unit, Fuse holder B	50
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	51
7. Engine/motor control unit, Fuse holder B, Fuse holder C	52
8. Hall sender, Hall sender 3, Engine/motor control unit	53
9. Engine speed sender, Radiator outlet coolant temperature sender, Engine/motor control unit	54
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	55

11. Brake light switch, Clutch position sender, Engine/motor control unit	56
12. Accelerator pedal module, Engine/motor control unit	57
13. Throttle valve module, Engine/motor control unit	58
14. Knock sensor 1, Coolant temperature sender, Engine/motor control unit	59
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	60
16. Charge pressure control module, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	61
17. Intake manifold sender, Charge pressure sender, Engine/motor control unit	62
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	63
19. Engine/motor control unit, Fuel metering valve, Charge air cooling pump	64
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	65
21. Oil pressure sender, Oil level and oil temperature sender, Engine/motor control unit	66
22. Engine/motor control unit, Vacuum pump for brakes	67
23. Engine/motor control unit	68
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	69
25. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	70
26. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	71
27. Data bus diagnostic interface, Dash panel insert	72
28. Dash panel insert	73
003 - 1.5l petrol engine , DADA,(7L6)	74-102
1. 1.5l petrol engine , DADA,(7L6)	74
2. Battery, Starter, Battery monitor control unit, Fuse holder B	75
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	76
4. Main relay, Engine/motor control unit, Fuse holder B	77
5. Engine/motor control unit, Fuse holder B	78
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	79
7. Engine/motor control unit, Fuse holder B, Fuse holder C	80
8. Vacuum pump relay, Engine/motor control unit, Vacuum pump for brakes	81
9. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	82
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	83
11. Brake light switch, Clutch position sender, Engine/motor control unit	84
12. Accelerator pedal module, Engine/motor control unit	85
13. Engine/motor control unit	86
14. Throttle valve module, Engine/motor control unit	87
15. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	88
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	89
17. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	90
18. Oil pressure sender, Charge pressure sender, Charge pressure control module, Position sender for charge pressure positioner, Engine/motor control unit	91
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	92
20. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	93
21. Engine/motor control unit, Fuel metering valve, Charge air cooling pump	94
22. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	95
23. Engine temperature regulation module, Oil level and oil temperature sender, Engine/motor control unit	96
24. Engine/motor control unit, Exhaust flap control unit	97
25. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	98
26. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	99
27. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	100
28. Data bus diagnostic interface, Dash panel insert	101
29. Dash panel insert	102
004 - 1.6l diesel engine with start/stop svstem . DDYA.(7L6)	103-139

1. 1.6l diesel engine with start/stop system , DDYA,(7L6)	103
2. Battery, Starter, Battery monitor control unit, Fuse holder B	104
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	105
4. Main relay, Engine/motor control unit, Fuse holder B	106
5. Engine/motor control unit, Fuse holder B	107
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	108
7. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	109
8. Engine/motor control unit, Relay for reducing agent metering system, Fuse holder C	110
9. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	111
10. Engine/motor control unit	112
11. Brake light switch, Clutch position sender, Engine/motor control unit	113
12. Accelerator pedal module, Engine/motor control unit	114
13. Engine/motor control unit	115
14. Engine speed sender, Hall sender, Engine/motor control unit	116
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	117
16. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit	118
17. Charge pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve	119
18. Air mass meter, Engine/motor control unit, Exhaust flap control unit	120
19. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	121
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe after catalytic converter, Engine/motor control unit	122
21. NOx sender, Control unit for NOx sender, Engine/motor control unit	123
22. NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2	124
23. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	125
24. Delivery unit for reducing agent metering system, Engine/motor control unit, Injector for reducing agent	126
25. Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	127
26. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	128
27. Throttle valve module, Engine/motor control unit	129
28. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	130
29. Pressure differential sender, Engine/motor control unit, Radiator blind control motor	131
30. Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	132
31. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather	133
32. Engine/motor control unit	134
33. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	135
34. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	136
35. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	137
36. Data bus diagnostic interface, Dash panel insert	138
37. Dash panel insert	139
005 - 2.0l diesel engine with start/stop system , DFFA,(7L6)	140-174
1. 2.0l diesel engine with start/stop system , DFFA,(7L6)	140
2. Battery, Starter, Battery monitor control unit, Fuse holder B	141
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	142
4. Main relay, Engine/motor control unit, Fuse holder B	143
5. Engine/motor control unit, Fuse holder B	144
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	145
7. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	146
8. Engine/motor control unit, Relay for reducing agent metering system, Fuse holder C	147
9. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	148
10. Engine/motor control unit	149
11. Brake light switch, Clutch position sender, Engine/motor control unit	150
12. Accelerator pedal module, Engine/motor control unit	151
13. Engine/motor control unit	152
14. Engine speed sender, Hall sender, Engine/motor control unit	153
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3.	154

Injector, cylinder 4	
16. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit	155
17. Charge pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve	156
18. Air mass meter, Engine/motor control unit, Exhaust flap control unit	157
19. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	158
20. Lambda probe 1 before catalytic converter, Engine/motor control unit	159
21. NOx sender, Control unit for NOx sender, Engine/motor control unit	160
22. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	161
23. Delivery unit for reducing agent metering system, Engine/motor control unit, Injector for reducing agent	162
24. Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	163
25. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	164
26. Throttle valve module, Exhaust gas temperature sender 1, Engine/motor control unit	165
27. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender, Exhaust gas temperature sender 4, Engine/motor control unit	166
28. Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	167
29. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather	168
30. Engine/motor control unit	169
31. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	170
32. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	171
33. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	172
34. Fuel gauge sender 2, Data bus diagnostic interface, Dash panel insert	173
35. Dash panel insert	174
006 - Halogen headlights , (8IE),(L0L)	175-188
1. Halogen headlights , (8IE),(L0L)	175
2. Rotary light switch	176
3. Left steering column switch, Steering column electronics control unit	177
4. Steering column electronics control unit	178
5. Front left headlight	179
6. Front right headlight	180
7. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	181
8. Front passenger door control unit, Passenger side exterior mirror	182
9. High-level brake light bulb, Left number plate light, Right number plate light	183
10. Brake light switch, Reversing light switch	184
11. Front left headlight, Front right headlight	185
12. Fuse holder A, Fuse holder B	186
13. Fuse holder C	187
14. Dash panel insert	188
007 - LED headlights , (8IX),(L0L)	189-203
1. LED headlights , (8IX),(L0L)	189
2. Rotary light switch	190
3. Left steering column switch, Steering column electronics control unit	191
4. Front left headlight	192
5. Front right headlight	193
6. Control unit for cornering light and headlight range control	194
7. Rear left vehicle level sender, Airbag control unit	195
8. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	196
9. Front passenger door control unit, Passenger side exterior mirror	197
10. High-level brake light bulb, Left number plate light, Right number plate light	198
11. Brake light switch, Reversing light switch	199
12. Fuse holder A, Fuse holder B	200
13. Fuse holder C	201
14. Data bus diagnostic interface, Dash panel insert	202
15. Data bus diagnostic interface	203
008 - Tail light clusters with LEDs	204-206
1. Tail light clusters with LEDs	204
2. Rear left fog light bulb, Left tail light cluster, Left tail light cluster 2	205
3. Rear right fog light bulb, Right tail light cluster, Right tail light cluster 2	206
009 - Electromechanical power steering	207-210

1. Electromechanical power steering	207
2. Steering angle sender, Steering moment sender, Power steering control unit, Fuse holder A, Electromechanical power steering motor	208
3. Power steering control unit	209
4. Data bus diagnostic interface, Dash panel insert	210
010 - Airbag systems , (L0L)	211-220
1. Airbag systems , (L0L)	211
2. Fuse holder A, Fuse holder C	212
3. Coil connector, Front airbag crash sensor for driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	213
4. Switch module 1 in centre console, Key operated switch to deactivate airbag on front passenger side, Airbag control unit	214
5. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	215
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	216
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	217
8. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	218
9. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	219
10. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	220
011 - Anti-lock brake system (ABS) , (L0L)	221-229
1. Anti-lock brake system (ABS) , (L0L)	221
2. ABS control unit, Fuse holder B	222
3. Brake servo pressure sensor, ABS control unit	223
4. ABS control unit	224
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	225
6. ABS control unit, Left parking brake motor, Right parking brake motor	226
7. ABS control unit	227
8. Switch module 2 in centre console	228
9. Data bus diagnostic interface, Dash panel insert	229
012 - Dual clutch gearbox 0CW , (0EG)	230-237
1. Dual clutch gearbox 0CW , (0EG)	230
2. Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder B, Fuse holder C	231
3. Gearbox input speed sender, Gearbox hydraulic pressure sender, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor	232
4. Selector lever, Selector lever locked in position P switch, Mechatronic unit for dual clutch gearbox	233
5. Selector lever, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Selector lever position display	234
6. Selector lever, Temperature sender in control unit, Mechatronic unit for dual clutch gearbox	235
7. Mechatronic unit for dual clutch gearbox	236
8. Data bus diagnostic interface, Dash panel insert	237
013 - Dual clutch gearbox 0GC , (0IJ)	238-245
1. Dual clutch gearbox 0GC , (0IJ)	238
2. Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder B, Fuse holder C	239
3. Gearbox input speed sender, Gearbox hydraulic pressure sender, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	240
4. Selector lever, Selector lever locked in position P switch, Mechatronic unit for dual clutch gearbox	241
5. Selector lever, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Selector lever position display	242
6. Selector lever, Temperature sender in control unit, Mechatronic unit for dual clutch gearbox	243
7. Mechatronic unit for dual clutch gearbox	244
8. Data bus diagnostic interface, Dash panel insert	245
014 - Seat belt warning system , (3NZ),(3NU),(L0L)	246-250
1. Seat belt warning system , (3NZ),(3NU),(L0L)	246
2. Driver side belt switch, Airbag control unit, Fuse holder C	247
3. Front passenger side belt switch, Seat occupied sensor, front passenger side, Airbag control unit	248
4. Twin belt buckle, Belt switch for seat row 2, right, Airbag control unit	249
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	250
015 - Seat belt warning system . (5KP).(L0L)	251-255

1. Seat belt warning system , (5KP),(L0L)	251
2. Driver side belt switch, Airbag control unit, Fuse holder C	252
3. Front passenger side belt switch, Seat occupied sensor, front passenger side, Airbag control unit	253
4. Belt switch for seat row 2, middle left, Belt switch for seat row 2, middle right, Belt switch for seat row 2, right, Belt switch for seat row 2, left, Airbag control unit	254
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	255
016 - Radiator fan	256-258
1. Radiator fan	256
2. Battery, Fuse holder A, Fuse holder B	257
3. Right radiator fan, Radiator fan	258
017 - Heater and fresh air ventilation system , (9AC),(L0L)	259-262
1. Heater and fresh air ventilation system , (9AC),(L0L)	259
2. Heater and air conditioning controls, Fuse holder A, Fuse holder C	260
3. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower, Air recirculation flap control motor	261
4. Heater and air conditioning controls, Temperature flap, Air distribution flap	262
018 - Air conditioning system with manual regulation , (KH6),(L0L)	263-268
1. Air conditioning system with manual regulation , (KH6),(L0L)	263
2. Heater and air conditioning controls, Fuse holder A, Fuse holder C	264
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit, Fresh air blower	265
4. Heater and air conditioning controls, Air conditioner compressor regulating valve, Air recirculation flap control motor	266
5. Heater and air conditioning controls, Evaporator temperature sensor, Temperature flap, Air distribution flap	267
6. Heater and air conditioning controls	268
019 - Climatronic , (9AK)	269-277
1. Climatronic , (9AK)	269
2. Heater and air conditioning controls, Humidity sender, Air humidity, rain and light sensor, Fuse holder A, Fuse holder C	270
3. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Fresh air blower control unit, Fresh air blower	271
4. Heater and air conditioning controls, Air conditioner compressor regulating valve	272
5. Heater and air conditioning controls, Photosensor, Left vent temperature sender, Right vent temperature sender	273
6. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Air recirculation flap	274
7. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	275
8. Heater and air conditioning controls, Air distribution flap, Defroster flap	276
9. Heater and air conditioning controls	277
020 - Auxiliary air heater (PTC) , (7E6)	278-280
1. Auxiliary air heater (PTC) , (7E6)	278
2. Low heat output relay, High heat output relay, Fuse holder B, Auxiliary air heater element	279
3. Fuse holder B	280
021 - Heated windscreen , (4GX)	281-283
1. Heated windscreen , (4GX)	281
2. Heater and air conditioning controls	282
3. Heated windscreen relay, Fuse holder A, Fuse holder B, Heated windscreen	283
022 - Heated washer jets , (9T1)	284-285
1. Heated washer jets , (9T1)	284
2. Left washer jet heater element, Right washer jet heater element	285
023 - Convenience system , (4H3),(L0L)	286-302
1. Convenience system , (4H3),(L0L)	286
2. Fuse holder A, Fuse holder C	287
3. Driver door control unit	288
4. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	289
5. Driver door control unit, Driver door lock unit	290
6. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	291
7. Exterior mirror adjuster, Driver door control unit	292
8. Driver door control unit, Driver side exterior mirror	293
9. Front passenger door control unit	294
10. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	295
11. Front passenger door control unit. Front passenger side window regulator motor. Front passenger	296

side door warning lamp	
12. Front passenger door control unit, Passenger side exterior mirror	297
13. Rear left door lock unit	298
14. Rear driver side window regulator button, Rear left window regulator motor	299
15. Rear right door lock unit	300
16. Rear passenger side window regulator button, Rear right window regulator motor	301
17. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	302
024 - Convenience system , (4H5),(L0L)	303-321
1. Convenience system , (4H5),(L0L)	303
2. Fuse holder A, Fuse holder C	304
3. Driver door control unit	305
4. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	306
5. Driver door control unit, Driver door lock unit	307
6. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	308
7. Exterior mirror adjuster, Driver door control unit	309
8. Driver door control unit, Driver side exterior mirror	310
9. Front passenger door control unit	311
10. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	312
11. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	313
12. Front passenger door control unit, Passenger side exterior mirror	314
13. Rear left door control unit	315
14. Rear left door control unit, Rear left door lock unit	316
15. Rear driver side window regulator button, Rear left door control unit, Rear left window regulator motor	317
16. Rear right door control unit	318
17. Rear right door control unit, Rear right door lock unit	319
18. Rear passenger side window regulator button, Rear right door control unit, Rear right window regulator motor	320
19. Rear lid handle release button, Rear lid lock unit, Rear lid lock unit, Tank filler flap locking motor	321
025 - Entry and start authorisation , (4F2),(4I3),(L0L)	322-329
1. Entry and start authorisation , (4F2),(4I3),(L0L)	322
2. Fuse holder A, Fuse holder C	323
3. Control unit for electronic steering column lock, Interface for entry and start system	324
4. Driver exterior door handle, Starter button, Interface for entry and start system	325
5. Front passenger exterior door handle, Interface for entry and start system	326
6. Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	327
7. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	328
8. Immobiliser reader coil, Data bus diagnostic interface, Interface for entry and start system, Dash panel insert	329
026 - Radio system , (I8C),(I8F),(8RE),(8RM),(L0L)	330-341
1. Radio system , (I8C),(I8F),(8RE),(8RM),(L0L)	330
2. Fuse holder A, Fuse holder C	331
3. Data bus diagnostic interface, Control unit 1 for information electronics	332
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	333
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	334
6. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	335
7. Control unit 1 for information electronics, USB connection 1	336
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	337
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	338
10. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	339
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	340
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	341
027 - Radio navigation system , (I8F),(I8J),(8RE),(8RM),(L0L)	342-353
1. Radio navigation system . (I8F).(I8J).(8RE).(8RM).(L0L)	342

2. Fuse holder A, Fuse holder C	343
3. Data bus diagnostic interface, Control unit 1 for information electronics	344
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	345
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	346
6. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	347
7. Control unit 1 for information electronics, USB connection 1	348
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	349
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	350
10. Control unit 1 for information electronics, Roof aerial, LTE aerial 1, LTE aerial 2	351
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	352
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	353
028 - Radio system with digital sound package , (I8C),(I8F),(9VS),(L0L)	354-366
1. Radio system with digital sound package , (I8C),(I8F),(9VS),(L0L)	354
2. Fuse holder A, Fuse holder C	355
3. Data bus diagnostic interface, Control unit 1 for information electronics	356
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	357
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	358
6. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	359
7. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	360
8. Control unit 1 for information electronics, USB connection 1	361
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	362
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	363
11. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	364
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	365
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	366
029 - Radio navigation system with digital sound package , (I8F),(I8J),(9VS),(L0L)	367-379
1. Radio navigation system with digital sound package , (I8F),(I8J),(9VS),(L0L)	367
2. Fuse holder A, Fuse holder C	368
3. Data bus diagnostic interface, Control unit 1 for information electronics	369
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	370
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	371
6. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	372
7. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	373
8. Control unit 1 for information electronics, USB connection 1	374
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	375
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	376
11. Control unit 1 for information electronics, Roof aerial, LTE aerial 1, LTE aerial 2	377
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	378
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	379
030 - Emergency call module , (NZ3)	380-383
1. Emergency call module , (NZ3)	380
2. Emergency call module control unit and communication unit, Fuse holder A, Fuse holder C	381
3. Emergency assistance call button, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial	382
4. Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, Loudspeaker for emergency call module	383
031 - Emergency call module . (NZ4)	384-387

1. Emergency call module , (NZ4)	384
2. Emergency call module control unit and communication unit, Fuse holder A, Fuse holder C	385
3. Breakdown assistance call button, Emergency assistance call button, Information services button, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial	386
4. Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, Loudspeaker for emergency call module	387
032 - Electrically operated rear lid , (4E6),(4E7),(L0L)	388-395
1. Electrically operated rear lid , (4E6),(4E7),(L0L)	388
2. Rear lid control unit, Fuse holder A, Fuse holder C	389
3. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit	390
4. Rear lid remote release switch, Power latching system limit switch, luggage compartment locked, Driver door control unit, Rear lid control unit, Power latching for rear lid, Power latching motor for rear lid	391
5. Rear lid control unit, Rear lid drive unit	392
6. Rear lid control unit, Rear lid drive unit 2	393
7. Rear lid lock unit	394
8. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	395
033 - Background lighting , (QQ9),(L0L)	396-399
1. Background lighting , (QQ9),(L0L)	396
2. Light 1 for dashboard background lighting, Light 2 for dashboard background lighting, Fuse holder A, Fuse holder C	397
3. Light 3 for dashboard background lighting, Light 4 for dashboard background lighting	398
4. Light for driver door background lighting, Light for passenger door background lighting	399
034 - All-wheel drive (4Motion) with petrol engine , (1X1)	400-404
1. All-wheel drive (4Motion) with petrol engine , (1X1)	400
2. Fuse holder A, Fuse holder B, Fuse holder C	401
3. All-wheel drive control unit, All-wheel drive coupling pump	402
4. All-wheel drive control unit, Data bus diagnostic interface, Dash panel insert	403
5. Fuel delivery unit, Fuel pump control unit, Dash panel insert	404
035 - All-wheel drive (4Motion) with diesel engine , (1X1)	405-410
1. All-wheel drive (4Motion) with diesel engine , (1X1)	405
2. Fuse holder A, Fuse holder B, Fuse holder C	406
3. All-wheel drive control unit, All-wheel drive coupling pump	407
4. All-wheel drive control unit, Data bus diagnostic interface, Dash panel insert	408
5. Fuel pump control unit, Dash panel insert	409
6. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	410
036 - Auxiliary heater , (9M9)	411-416
1. Auxiliary heater , (9M9)	411
2. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower	412
3. Auxiliary heater control unit, Fuse holder A, Fuse holder B, Fuse holder C	413
4. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Glow plug with flame monitor, Combustion air blower, Circulation pump	414
5. Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary heater, Metering pump	415
6. Auxiliary heater control unit, Data bus diagnostic interface, Dash panel insert	416
037 - Panoramic sliding sunroof , (3FU)	417-421
1. Panoramic sliding sunroof , (3FU)	417
2. Sliding sunroof adjustment control unit, Fuse holder A, Fuse holder C	418
3. Sunroof button, Sliding sunroof adjustment control unit	419
4. Sunroof button, Sliding sunroof adjustment control unit, Sliding sunroof motor	420
5. Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Sunroof roller blind motor	421
038 - Anti-theft alarm system , (7AL),(7AS)	422-423
1. Anti-theft alarm system , (7AL),(7AS)	422
2. Bonnet contact switch, Anti-theft alarm sensor, Anti-theft alarm system horn, Fuse holder A, Fuse holder B, Fuse holder C	423
039 - Automatic anti-dazzle interior and exterior mirrors , (4L6),(L0L)	424-426
1. Automatic anti-dazzle interior and exterior mirrors , (4L6),(L0L)	424
2. Fuse holder A, Fuse holder C, Automatic anti-dazzle interior mirror	425
3. Humidity sender, Air humidity, rain and light sensor, Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Passenger side exterior mirror	426
040 - Interior mirror with humidity sender and main beam assist , (4L6),(L0L)	427-429
1. Interior mirror with humidity sender and main beam assist , (4L6),(L0L)	427
2. Data bus diagnostic interface. Fuse holder A. Fuse holder C. Automatic anti-dazzle interior	428

mirror	
3. Humidity sender, Air humidity, rain and light sensor, Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Passenger side exterior mirror	429
041 - Seat heating , (3NZ),(3NU),(L0L)	430-437
1. Seat heating , (3NZ),(3NU),(L0L)	430
2. Fuse holder A, Fuse holder C	431
3. Heater and air conditioning controls	432
4. Seat heating (driver side)	433
5. Seat heating (front passenger side)	434
6. Switch module in rear centre console, Heated rear seats control unit	435
7. Heated rear seats control unit, Rear left seat heating, Heated backrest for rear left seat	436
8. Heated rear seats control unit, Rear right seat heating, Heated backrest for rear right seat	437
042 - Seat heating , (5KP),(L0L)	438-446
1. Seat heating , (5KP),(L0L)	438
2. Fuse holder A, Fuse holder C	439
3. Heater and air conditioning controls	440
4. Seat heating (driver side)	441
5. Seat heating (front passenger side)	442
6. Switch module in rear centre console, Heated rear seats control unit	443
7. Heated rear seats control unit	444
8. Rear left seat heating, Heated backrest for rear left seat	445
9. Rear right seat heating, Heated backrest for rear right seat	446
043 - Seat and mirror adjustment with memory function , (3PH),(L0L)	447-459
1. Seat and mirror adjustment with memory function , (3PH),(L0L)	447
2. Driver seat adjustment control unit, Fuse holder A, Fuse holder C	448
3. Operating unit for front left seat adjustment, Driver seat adjustment control unit	449
4. Operating unit 2 for front left seat adjustment, Driver seat adjustment control unit	450
5. Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	451
6. Driver seat adjustment control unit, Driver seat height adjustment motor, Driver seat rake adjustment motor	452
7. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	453
8. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	454
9. Exterior mirror adjuster, Driver door control unit	455
10. Driver door control unit, Driver side exterior mirror	456
11. Driver door control unit, Driver side exterior mirror	457
12. Front passenger door control unit, Passenger side exterior mirror	458
13. Front passenger door control unit, Passenger side exterior mirror	459
044 - Rear parking aid (PDC) , (7X1)	460-464
1. Rear parking aid (PDC) , (7X1)	460
2. Parking aid control unit, Fuse holder C	461
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	462
4. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	463
5. Parking aid control unit, Data bus diagnostic interface, Dash panel insert	464
045 - Front and rear parking aid (PDC) , (7X2)	465-471
1. Front and rear parking aid (PDC) , (7X2)	465
2. Switch module 1 in centre console, Parking aid control unit, Fuse holder C	466
3. Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	467
4. Front right parking aid sender, Front centre right parking aid sender, Front parking aid warning buzzer, Parking aid control unit	468
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	469
6. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	470
7. Parking aid control unit, Data bus diagnostic interface, Dash panel insert	471
046 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	472-481
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	472
2. Switch module 1 in centre console, Park assist steering control unit, Fuse holder C	473
3. Front centre left parking aid sender, Front left parking aid sender, Park assist steering control unit	474
4. Front right parking aid sender, Front centre right parking aid sender, Front parking aid warning buzzer, Park assist steering control unit	475
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Park assist steering control unit	476
6. Rear left parking aid sender. Rear centre left parking aid sender. Rear parking aid warning	477

buzzer, Park assist steering control unit	
7. Rear centre right parking aid sender, Rear right parking aid sender, Park assist steering control unit	478
8. Rear left park assist steering sender, Rear right park assist steering sender, Park assist steering control unit	479
9. Power steering control unit, Data bus diagnostic interface, Park assist steering control unit	480
10. Data bus diagnostic interface, Dash panel insert	481
047 - Adaptive cruise control , (6K2),(6K3),(6K4)	482-486
1. Adaptive cruise control , (6K2),(6K3),(6K4)	482
2. Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	483
3. Adaptive cruise control unit	484
4. Steering column combination switch, Steering column electronics control unit	485
5. Steering column electronics control unit, Data bus diagnostic interface	486
048 - Front camera for driver assist systems , (QK1)	487-489
1. Front camera for driver assist systems , (QK1)	487
2. Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	488
3. Adaptive cruise control unit, Data bus diagnostic interface	489
049 - Reversing camera (Rear Assist) , (KA1)	490-491
1. Reversing camera (Rear Assist) , (KA1)	490
2. Control unit 1 for information electronics, Reversing camera, Fuse holder A, Fuse holder C	491
050 - Lane change assist , (7Y8),(7Y9),(79E),(79F),(L0L)	492-494
1. Lane change assist , (7Y8),(7Y9),(79E),(79F),(L0L)	492
2. Lane change assist control unit 2, Fuse holder C, Driver side exterior mirror, Passenger side exterior mirror	493
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	494
051 - Trailer coupling , (1M6),(1D7)	495-498
1. Trailer coupling , (1M6),(1D7)	495
2. Trailer detector control unit, Fuse holder A, Fuse holder C	496
3. Trailer detector control unit, Trailer towing coupling	497
4. Electric hinged tow coupling attachment button, Trailer detector control unit, Trailer towing coupling	498
052 - Mobile telephone systems , (9IJ),(9IH),(9ZC)	499-501
1. Mobile telephone systems , (9IJ),(9IH),(9ZC)	499
2. Two-way signal amplifier for mobile telephone/data services, Roof aerial, Fuse holder A, Fuse holder C	500
3. Control unit 1 for information electronics, Storage compartment with interface for mobile telephone	501
053 - Multifunction steering wheel , (1XX),(2FS),(2PK),(2ZD),(2ZH),(2ZW)	502-506
1. Multifunction steering wheel , (1XX),(2FS),(2PK),(2ZD),(2ZH),(2ZW)	502
2. Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Coil connector, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	503
3. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Heated steering wheel sender, Steering column electronics control unit	504
4. Steering column electronics control unit, Data bus diagnostic interface	505
5. Data bus diagnostic interface, Fuse holder A, Fuse holder C	506
054 - Heated steering wheel , (2ZD),(2ZW)	507-514
1. Heated steering wheel , (2ZD),(2ZW)	507
2. Steering column electronics control unit, Fuse holder A, Fuse holder C	508
3. Right steering column switch, Steering column electronics control unit	509
4. Right steering column switch, Steering column electronics control unit, Ignition key withdrawal lock solenoid	510
5. Ignition/starter switch, Steering column electronics control unit	511
6. Left steering column switch, Steering column electronics control unit	512
7. Left steering column switch, Multifunction buttons on right in steering wheel, Coil connector, Heated steering wheel sender, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Heated steering wheel	513
8. Data bus diagnostic interface	514
055 - 230 V socket , (9Z3)	515-516
1. 230 V socket , (9Z3)	515
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Interior socket, 230 V, 110 V, DC/AC converter with socket, 12 V - 230 V	516
056 - Data bus network , (L0L)	517-532
1. Data bus network , (L0L)	517
2. Data bus diagnostic interface, Dash panel insert, Diagnostic connection	518
3. Data bus diaanostic interface	519

4. Data bus diagnostic interface	520
5. Data bus diagnostic interface	521
6. Data bus diagnostic interface	522
7. Data bus diagnostic interface	523
8. Data bus diagnostic interface	524
9. Data bus diagnostic interface	525
10. Data bus diagnostic interface	526
11. Data bus diagnostic interface	527
12. Data bus diagnostic interface	528
13. Data bus diagnostic interface	529
14. Data bus diagnostic interface	530
15. Data bus diagnostic interface	531
16. Data bus diagnostic interface	532
057 - Basic equipment , (L0R)	533-577
1. Basic equipment , (L0R)	533
2. Battery, Horn relay, Fuse holder A, Fuse holder B	534
3. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B	535
4. Fuse holder C	536
5. Fuse holder C	537
6. Fuse holder C	538
7. Fuse holder C	539
8. Fuse holder C	540
9. Fuse holder C	541
10. Heated rear window relay, Fuse holder C	542
11. Terminal 15 voltage supply relay, Fuse holder C	543
12. Fuse holder C	544
13.	545
14.	546
15.	547
16. Steering column electronics control unit	548
17. Right steering column switch, Steering column electronics control unit	549
18. Right steering column switch, Steering column electronics control unit, Ignition key withdrawal lock solenoid	550
19. Ignition/starter switch, Steering column electronics control unit	551
20. Left steering column switch, Steering column electronics control unit	552
21. Left steering column switch, Coil connector, Horn plate, Steering column electronics control unit	553
22. Humidity sender, Light sensor, Air humidity, rain and light sensor, Driver side windscreen wiper motor	554
23. Rear window wiper motor	555
24. Headlight washer system pump, Windscreen and rear window washer pump	556
25. Front interior light	557
26. Front interior light	558
27. Rear interior light	559
28. Rear left reading light, Rear right reading light	560
29. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	561
30. Electric torch, Right luggage compartment light	562
31. Rear lid handle release button, Rear lid lock unit	563
32. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	564
33. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	565
34. 12 V socket, 12 V socket 2, USB charging socket 1	566
35. Switch module 2 in centre console, Storage compartment illumination bulb	567
36. Treble horn, Bass horn	568
37. Immobiliser reader coil, Brake fluid level warning contact, Dash panel insert	569
38. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Dash panel insert	570
39. Bonnet contact switch, Front right brake pad wear sender, Dash panel insert	571
40. Dash panel insert	572
41. Dash panel insert	573
42. Data bus diagnostic interface, Dash panel insert	574
43. Data bus diagnostic interface	575
44. Data bus diagnostic interface	576
45. Data bus diagnostic interface. Diagnostic connection	577

058 - Halogen headlights , (8IE),(L0R)	578-591
1. Halogen headlights , (8IE),(L0R)	578
2. Rotary light switch	579
3. Left steering column switch, Steering column electronics control unit	580
4. Steering column electronics control unit	581
5. Front left headlight	582
6. Front right headlight	583
7. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	584
8. Front passenger door control unit, Passenger side exterior mirror	585
9. High-level brake light bulb, Left number plate light, Right number plate light	586
10. Brake light switch, Reversing light switch	587
11. Front left headlight, Front right headlight	588
12. Fuse holder A, Fuse holder B	589
13. Fuse holder C	590
14. Dash panel insert	591
059 - LED headlights , (8IX),(L0R)	592-606
1. LED headlights , (8IX),(L0R)	592
2. Rotary light switch	593
3. Left steering column switch, Steering column electronics control unit	594
4. Front left headlight	595
5. Front right headlight	596
6. Control unit for cornering light and headlight range control	597
7. Rear left vehicle level sender, Airbag control unit	598
8. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	599
9. Front passenger door control unit, Passenger side exterior mirror	600
10. High-level brake light bulb, Left number plate light, Right number plate light	601
11. Brake light switch, Reversing light switch	602
12. Fuse holder A, Fuse holder B	603
13. Fuse holder C	604
14. Data bus diagnostic interface, Dash panel insert	605
15. Data bus diagnostic interface	606
060 - Airbag systems , (L0R)	607-616
1. Airbag systems , (L0R)	607
2. Fuse holder A, Fuse holder C	608
3. Coil connector, Front airbag crash sensor for driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	609
4. Switch module 1 in centre console, Key operated switch to deactivate airbag on front passenger side, Airbag control unit	610
5. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	611
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	612
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	613
8. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	614
9. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	615
10. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	616
061 - Anti-lock brake system (ABS) , (L0R)	617-625
1. Anti-lock brake system (ABS) , (L0R)	617
2. ABS control unit, Fuse holder B	618
3. Brake servo pressure sensor, ABS control unit	619
4. ABS control unit	620
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	621
6. ABS control unit, Left parking brake motor, Right parking brake motor	622
7. ABS control unit	623
8. Switch module 2 in centre console	624
9. Data bus diagnostic interface, Dash panel insert	625
062 - Seat belt warning system , (3NZ),(3NU),(L0R)	626-630
1. Seat belt warning system , (3NZ),(3NU),(L0R)	626
2. Driver side belt switch, Airbag control unit, Fuse holder C	627
3. Front passenger side belt switch, Seat occupied sensor, front passenger side, Airbag control unit	628
4. Twin belt buckle. Belt switch for seat row 2. right. Airbag control unit	629

5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	630
063 - Seat belt warning system , (5KP),(L0R)	631-635
1. Seat belt warning system , (5KP),(L0R)	631
2. Driver side belt switch, Airbag control unit, Fuse holder C	632
3. Front passenger side belt switch, Seat occupied sensor, front passenger side, Airbag control unit	633
4. Belt switch for seat row 2, middle left, Belt switch for seat row 2, middle right, Belt switch for seat row 2, right, Belt switch for seat row 2, left, Airbag control unit	634
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	635
064 - Heater and fresh air ventilation system , (9AC),(L0R)	636-639
1. Heater and fresh air ventilation system , (9AC),(L0R)	636
2. Heater and air conditioning controls, Fuse holder A, Fuse holder C	637
3. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower, Air recirculation flap control motor	638
4. Heater and air conditioning controls, Temperature flap, Air distribution flap	639
065 - Air conditioning system with manual regulation , (KH6),(L0R)	640-645
1. Air conditioning system with manual regulation , (KH6),(L0R)	640
2. Heater and air conditioning controls, Fuse holder A, Fuse holder C	641
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit, Fresh air blower	642
4. Heater and air conditioning controls, Air conditioner compressor regulating valve, Air recirculation flap control motor	643
5. Heater and air conditioning controls, Evaporator temperature sensor, Temperature flap, Air distribution flap	644
6. Heater and air conditioning controls	645
066 - Convenience system , (4H3),(L0R)	646-662
1. Convenience system , (4H3),(L0R)	646
2. Fuse holder A, Fuse holder C	647
3. Driver door control unit	648
4. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	649
5. Driver door control unit, Driver door lock unit	650
6. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	651
7. Exterior mirror adjuster, Driver door control unit	652
8. Driver door control unit, Driver side exterior mirror	653
9. Front passenger door control unit	654
10. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	655
11. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	656
12. Front passenger door control unit, Passenger side exterior mirror	657
13. Rear left door lock unit	658
14. Rear passenger side window regulator button, Rear left window regulator motor	659
15. Rear right door lock unit	660
16. Rear driver side window regulator button, Rear right window regulator motor	661
17. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	662
067 - Convenience system , (4H5),(L0R)	663-681
1. Convenience system , (4H5),(L0R)	663
2. Fuse holder A, Fuse holder C	664
3. Driver door control unit	665
4. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	666
5. Driver door control unit, Driver door lock unit	667
6. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	668
7. Exterior mirror adjuster, Driver door control unit	669
8. Driver door control unit, Driver side exterior mirror	670
9. Front passenger door control unit	671
10. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	672
11. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	673
12. Front passenger door control unit, Passenger side exterior mirror	674
13. Rear left door control unit	675
14. Rear left door control unit, Rear left door lock unit	676
15. Rear passenger side window regulator button. Rear left door control unit. Rear left window	677

regulator motor	
16. Rear right door control unit	678
17. Rear right door control unit, Rear right door lock unit	679
18. Rear driver side window regulator button, Rear right door control unit, Rear right window regulator motor	680
19. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	681
068 - Entry and start authorisation , (4F2),(4I3),(L0R)	682-689
1. Entry and start authorisation , (4F2),(4I3),(L0R)	682
2. Fuse holder A, Fuse holder C	683
3. Control unit for electronic steering column lock, Interface for entry and start system	684
4. Driver exterior door handle, Starter button, Interface for entry and start system	685
5. Front passenger exterior door handle, Interface for entry and start system	686
6. Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	687
7. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	688
8. Immobiliser reader coil, Data bus diagnostic interface, Interface for entry and start system, Dash panel insert	689
069 - Radio system , (I8C),(I8F),(8RE),(8RM),(L0R)	690-701
1. Radio system , (I8C),(I8F),(8RE),(8RM),(L0R)	690
2. Fuse holder A, Fuse holder C	691
3. Data bus diagnostic interface, Control unit 1 for information electronics	692
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	693
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	694
6. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	695
7. Control unit 1 for information electronics, USB connection 1	696
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	697
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	698
10. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	699
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	700
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	701
070 - Radio navigation system , (I8F),(I8J),(8RE),(8RM),(L0R)	702-713
1. Radio navigation system , (I8F),(I8J),(8RE),(8RM),(L0R)	702
2. Fuse holder A, Fuse holder C	703
3. Data bus diagnostic interface, Control unit 1 for information electronics	704
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	705
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	706
6. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	707
7. Control unit 1 for information electronics, USB connection 1	708
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	709
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	710
10. Control unit 1 for information electronics, Roof aerial, LTE aerial 1, LTE aerial 2	711
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	712
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	713
071 - Radio system with digital sound package , (I8C),(I8F),(9VS),(L0R)	714-726
1. Radio system with digital sound package , (I8C),(I8F),(9VS),(L0R)	714
2. Fuse holder A, Fuse holder C	715
3. Data bus diagnostic interface, Control unit 1 for information electronics	716
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	717
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	718
6. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	719
7. Multimedia svstem operatinda unit. Displav unit for front information displav and operatinda unit	720

control unit, Control unit 1 for information electronics	
8. Control unit 1 for information electronics, USB connection 1	721
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	722
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	723
11. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	724
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	725
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	726
072 - Radio navigation system with digital sound package , (I8F),(I8J),(9VS),(L0R)	727-739
1. Radio navigation system with digital sound package , (I8F),(I8J),(9VS),(L0R)	727
2. Fuse holder A, Fuse holder C	728
3. Data bus diagnostic interface, Control unit 1 for information electronics	729
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	730
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	731
6. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	732
7. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	733
8. Control unit 1 for information electronics, USB connection 1	734
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	735
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	736
11. Control unit 1 for information electronics, Roof aerial, LTE aerial 1, LTE aerial 2	737
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	738
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	739
073 - Electrically operated rear lid , (4E6),(4E7),(L0R)	740-747
1. Electrically operated rear lid , (4E6),(4E7),(L0R)	740
2. Rear lid control unit, Fuse holder A, Fuse holder C	741
3. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit	742
4. Rear lid remote release switch, Driver door control unit, Rear lid control unit, Power latching for rear lid	743
5. Rear lid control unit, Rear lid drive unit	744
6. Rear lid control unit, Rear lid drive unit 2	745
7. Rear lid lock unit	746
8. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	747
074 - Background lighting , (QQ9),(L0R)	748-751
1. Background lighting , (QQ9),(L0R)	748
2. Light 1 for dashboard background lighting, Light 2 for dashboard background lighting, Fuse holder A, Fuse holder C	749
3. Light 3 for dashboard background lighting, Light 4 for dashboard background lighting	750
4. Light for driver door background lighting, Light for passenger door background lighting	751
075 - Automatic anti-dazzle interior and exterior mirrors , (4L6),(L0R)	752-754
1. Automatic anti-dazzle interior and exterior mirrors , (4L6),(L0R)	752
2. Fuse holder A, Fuse holder C, Automatic anti-dazzle interior mirror	753
3. Humidity sender, Air humidity, rain and light sensor, Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Passenger side exterior mirror	754
076 - Interior mirror with humidity sender and main beam assist , (4L6),(L0R)	755-757
1. Interior mirror with humidity sender and main beam assist , (4L6),(L0R)	755
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Automatic anti-dazzle interior mirror	756
3. Humidity sender, Air humidity, rain and light sensor, Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Passenger side exterior mirror	757
077 - Seat heating , (3NZ),(3NU),(L0R)	758-765
1. Seat heating , (3NZ),(3NU),(L0R)	758
2. Fuse holder A, Fuse holder C	759
3. Heater and air conditioning controls	760
4. Seat heating (driver side)	761
5. Seat heating (front passenger side)	762
6. Switch module in rear centre console, Heated rear seats control unit	763
7. Heated rear seats control unit. Rear left seat heating. Heated backrest for rear left seat	764

8. Heated rear seats control unit, Rear right seat heating, Heated backrest for rear right seat	765
078 - Seat heating , (5KP),(L0R)	766-774
1. Seat heating , (5KP),(L0R)	766
2. Fuse holder A, Fuse holder C	767
3. Heater and air conditioning controls	768
4. Seat heating (driver side)	769
5. Seat heating (front passenger side)	770
6. Switch module in rear centre console, Heated rear seats control unit	771
7. Heated rear seats control unit	772
8. Rear left seat heating, Heated backrest for rear left seat	773
9. Rear right seat heating, Heated backrest for rear right seat	774
079 - Seat and mirror adjustment with memory function , (3PJ),(L0R)	775-787
1. Seat and mirror adjustment with memory function , (3PJ),(L0R)	775
2. Driver seat adjustment control unit, Fuse holder A, Fuse holder C	776
3. Operating unit for front right seat adjustment, Driver seat adjustment control unit	777
4. Operating unit 2 for front right seat adjustment, Driver seat adjustment control unit	778
5. Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	779
6. Driver seat adjustment control unit, Driver seat height adjustment motor, Driver seat rake adjustment motor	780
7. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	781
8. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	782
9. Exterior mirror adjuster, Driver door control unit	783
10. Driver door control unit, Driver side exterior mirror	784
11. Driver door control unit, Driver side exterior mirror	785
12. Front passenger door control unit, Passenger side exterior mirror	786
13. Front passenger door control unit, Passenger side exterior mirror	787