

001 - Basic equipment , (L0L)	1-44
1. Basic equipment , (L0L)	1
2. Battery, Horn relay, Fuse holder A, Fuse holder B	2
3. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B	3
4. Emergency call module control unit and communication unit, Fuse holder C	4
5. Fuse holder C	5
6. Trailer detector control unit, Fuse holder C	6
7. Rotary light switch, Fuse holder C	7
8. Fuse holder C	8
9. Fuse holder C	9
10. Heated rear window relay, Fuse holder C	10
11. Terminal 15 voltage supply relay, Fuse holder C	11
12. Engine/motor control unit, Fuse holder C	12
13.	13
14.	14
15.	15
16. Steering column electronics control unit	16
17. Right steering column switch, Steering column electronics control unit	17
18. Right steering column switch, Airbag control unit, Steering column electronics control unit	18
19. Ignition/starter switch, Steering column electronics control unit	19
20. Left steering column switch, Steering column electronics control unit	20
21. Left steering column switch, Coil connector, Horn plate, Steering column electronics control unit	21
22. Humidity sender, Light sensor, Air humidity, rain and light sensor, Driver side windscreen wiper motor	22
23. Rear window wiper motor	23
24. Headlight washer system pump, Windscreen and rear window washer pump	24
25. Front interior light	25
26. Front interior light	26
27. Rear interior light	27
28. Rear left reading light, Rear right reading light	28
29. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Right luggage compartment light	29
30. Rear lid handle release button, Rear lid lock unit	30
31. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Left footwell light, Right footwell light, Rear window	31
32. Rear left footwell light, Rear right footwell light	32
33. 12 V socket, 12 V socket 2, USB charging socket 1, USB charging socket 2	33
34. Switch module 2 in centre console, Storage compartment illumination bulb	34
35. Treble horn, Bass horn	35
36. Immobiliser reader coil, Brake fluid level warning contact, Control unit 1 for information electronics, Dash panel insert	36
37. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Dash panel insert	37
38. Bonnet contact switch, Front right brake pad wear sender, Dash panel insert	38
39. Dash panel insert	39
40. Dash panel insert	40
41. Data bus diagnostic interface, Dash panel insert	41
42. Data bus diagnostic interface	42
43. Data bus diagnostic interface	43
44. Data bus diagnostic interface, Diagnostic connection	44
002 - Basic equipment , (L0R)	45-88
1. Basic equipment , (L0R)	45
2. Battery, Horn relay, Fuse holder A, Fuse holder B	46
3. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B	47
4. Emergency call module control unit and communication unit, Fuse holder C	48
5. Fuse holder C	49
6. Trailer detector control unit, Fuse holder C	50
7. Rotary light switch, Fuse holder C	51
8. Fuse holder C	52
9. Fuse holder C	53
10. Heated rear window relay, Fuse holder C	54
11. Terminal 15 voltage supply relay, Fuse holder C	55
12. Engine/motor control unit. Fuse holder C	56

13.	57
14.	58
15.	59
16. Steering column electronics control unit	60
17. Right steering column switch, Steering column electronics control unit	61
18. Right steering column switch, Airbag control unit, Steering column electronics control unit	62
19. Ignition/starter switch, Steering column electronics control unit	63
20. Left steering column switch, Steering column electronics control unit	64
21. Left steering column switch, Coil connector, Horn plate, Steering column electronics control unit	65
22. Humidity sender, Light sensor, Air humidity, rain and light sensor, Driver side windscreen wiper motor	66
23. Rear window wiper motor	67
24. Headlight washer system pump, Windscreen and rear window washer pump	68
25. Front interior light	69
26. Front interior light	70
27. Rear interior light	71
28. Rear left reading light, Rear right reading light	72
29. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Right luggage compartment light	73
30. Rear lid handle release button, Rear lid lock unit	74
31. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Left footwell light, Right footwell light, Rear window	75
32. Rear left footwell light, Rear right footwell light	76
33. 12 V socket, 12 V socket 2, USB charging socket 1, USB charging socket 2	77
34. Switch module 2 in centre console, Storage compartment illumination bulb	78
35. Treble horn, Bass horn	79
36. Immobiliser reader coil, Brake fluid level warning contact, Control unit 1 for information electronics, Dash panel insert	80
37. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Dash panel insert	81
38. Bonnet contact switch, Front right brake pad wear sender, Dash panel insert	82
39. Dash panel insert	83
40. Dash panel insert	84
41. Data bus diagnostic interface, Dash panel insert	85
42. Data bus diagnostic interface	86
43. Data bus diagnostic interface	87
44. Data bus diagnostic interface	88
003 - 1.0l petrol engine with start/stop system , DLAA,(7L6)	89-115
1. 1.0l petrol engine with start/stop system , DLAA,(7L6)	89
2. Battery, Starter, Battery monitor control unit, Fuse holder B	90
3. Alternator with voltage regulator, Air conditioner compressor regulating valve, Fuse holder A, Fuse holder B	91
4. Main relay, Engine/motor control unit, Fuse holder B	92
5. Engine/motor control unit, Fuse holder B	93
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	94
7. Engine/motor control unit, Fuse holder B, Fuse holder C	95
8. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	96
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	97
10. Brake light switch, Clutch position sender, Engine/motor control unit	98
11. Accelerator pedal module, Engine/motor control unit	99
12. Engine/motor control unit, Radiator blind control motor	100
13. Throttle valve module, Engine/motor control unit	101
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	102
15. Pressure sensor for activated charcoal filter air flushing, Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	103
16. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	104
17. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	105
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1. Valve for oil pressure control. Piston cooling oil control valve. Inlet camshaft control	106

valve 1	
19. Engine temperature regulation module, Engine/motor control unit, Fuel metering valve, Charge air cooling pump	107
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	108
21. Oil level and oil temperature sender, Engine/motor control unit	109
22. Engine/motor control unit	110
23. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	111
24. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	112
25. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	113
26. Data bus diagnostic interface, Dash panel insert	114
27. Dash panel insert	115
004 - 1.4l petrol engine , DJKA,(7L3)	116-143
1. 1.4l petrol engine , DJKA,(7L3)	116
2. Battery, Starter, Battery monitor control unit, Fuse holder B	117
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	118
4. Main relay, Engine/motor control unit, Fuse holder B	119
5. Engine/motor control unit, Fuse holder B	120
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	121
7. Engine/motor control unit, Fuse holder B, Fuse holder C, Vacuum pump for brakes	122
8. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine/motor control unit	123
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	124
10. Brake light switch, Engine/motor control unit	125
11. Accelerator pedal module, Engine/motor control unit	126
12. Engine/motor control unit	127
13. Throttle valve module, Engine/motor control unit	128
14. Knock sensor 1, Coolant temperature sender, Engine/motor control unit	129
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	130
16. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit	131
17. Charge pressure sender, Charge pressure control module, Engine/motor control unit	132
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	133
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit	134
20. Engine/motor control unit, Fuel metering valve, Charge air cooling pump	135
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	136
22. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	137
23. Oil level and oil temperature sender, Engine/motor control unit	138
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	139
25. Data bus diagnostic interface, Engine/motor control unit	140
26. Automatic gearbox control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	141
27. Data bus diagnostic interface, Dash panel insert	142
28. Dash panel insert	143
005 - 1.4l petrol engine with start/stop system , DJKA,(7L6)	144-171
1. 1.4l petrol engine with start/stop system , DJKA,(7L6)	144
2. Battery, Starter, Battery monitor control unit, Fuse holder B	145
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	146
4. Main relay, Engine/motor control unit, Fuse holder B	147
5. Engine/motor control unit, Fuse holder B	148
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	149
7. Vacuum pump relay, Engine/motor control unit, Fuse holder B, Fuse holder C, Vacuum pump for brakes	150
8. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine/motor control unit	151
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	152
10. Brake light switch, Engine/motor control unit	153
11. Accelerator pedal module, Engine/motor control unit	154
12. Engine/motor control unit	155

13. Throttle valve module, Engine/motor control unit	156
14. Knock sensor 1, Coolant temperature sender, Engine/motor control unit	157
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	158
16. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit	159
17. Charge pressure sender, Charge pressure control module, Engine/motor control unit	160
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	161
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit	162
20. Engine/motor control unit, Fuel metering valve, Charge air cooling pump	163
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	164
22. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	165
23. Oil level and oil temperature sender, Engine/motor control unit	166
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	167
25. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	168
26. Switch module 1 in centre console, Data bus diagnostic interface	169
27. Data bus diagnostic interface, Dash panel insert	170
28. Dash panel insert	171
006 - 1.5l petrol engine , DPCA,(7L6)	172-201
1. 1.5l petrol engine , DPCA,(7L6)	172
2. Battery, Starter, Battery monitor control unit, Fuse holder B	173
3. Alternator with voltage regulator, Air conditioner compressor regulating valve, Fuse holder A, Fuse holder B	174
4. Main relay, Engine/motor control unit, Fuse holder B	175
5. Engine/motor control unit, Fuse holder B	176
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	177
7. Engine/motor control unit, Fuse holder B	178
8. Vacuum pump relay, Engine/motor control unit, Fuse holder C, Vacuum pump for brakes	179
9. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	180
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	181
11. Brake light switch, Clutch position sender, Engine/motor control unit	182
12. Accelerator pedal module, Engine/motor control unit	183
13. Engine/motor control unit	184
14. Throttle valve module, Engine/motor control unit	185
15. Pressure sensor for activated charcoal filter air flushing, Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	186
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	187
17. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	188
18. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	189
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	190
20. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	191
21. Engine/motor control unit, Fuel metering valve, Charge air cooling pump	192
22. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	193
23. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	194
24. Engine temperature regulation module, Oil level and oil temperature sender, Engine/motor control unit	195
25. Engine/motor control unit	196
26. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	197
27. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	198
28. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	199
29. Data bus diagnostic interface, Dash panel insert	200
30. Dash panel insert	201
007 - 1.6l petrol engine . DWYA.(7L3)	202-225

1. 1.6l petrol engine , DWYA,(7L3)	202
2. Battery, Starter, Battery monitor control unit, Fuse holder B	203
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	204
4. Main relay, Engine/motor control unit, Fuse holder B	205
5. Engine/motor control unit, Fuse holder B	206
6. Fuel pump relay, Engine/motor control unit, Fuse holder B	207
7. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	208
8. Vacuum pump relay, Engine/motor control unit, Fuse holder B, Fuse holder C, Vacuum pump for brakes	209
9. Engine speed sender, Radiator outlet coolant temperature sender, Engine/motor control unit	210
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	211
11. Brake light switch, Clutch position sender, Engine/motor control unit	212
12. Accelerator pedal module, Engine/motor control unit	213
13. Throttle valve module, Engine/motor control unit	214
14. Knock sensor 1, Coolant temperature sender, Engine/motor control unit	215
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	216
16. Intake manifold sender, Hall sender, Engine/motor control unit	217
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	218
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	219
19. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	220
20. Oil pressure switch, Oil level and oil temperature sender, Engine/motor control unit	221
21. Engine/motor control unit	222
22. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	223
23. Fuel delivery unit, Data bus diagnostic interface, Dash panel insert	224
24. Dash panel insert	225
008 - 2.0l petrol engine with start/stop system , DNNA,(7L6)	226-256
1. 2.0l petrol engine with start/stop system , DNNA,(7L6)	226
2. Battery, Starter, Battery monitor control unit, Fuse holder B	227
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	228
4. Main relay, Engine/motor control unit, Fuse holder B	229
5. Engine/motor control unit, Fuse holder B	230
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	231
7. Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C	232
8. Engine speed sender, Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit	233
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	234
10. Brake light switch, Accelerator pedal module, Engine/motor control unit	235
11. Engine/motor control unit	236
12. Throttle valve module, Engine/motor control unit	237
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	238
14. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit	239
15. Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	240
16. Knock sensor 1, Coolant temperature sender, Engine/motor control unit	241
17. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	242
18. Charge pressure control module, Engine/motor control unit, Actuator for engine temperature regulation	243
19. Intake manifold sender, Dual exhaust gas temperature sensor 1, Engine/motor control unit	244
20. Charge pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control	245
21. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Coolant valve for gearbox	246
22. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Exhaust camshaft control valve 1, Spark plug 1, Spark plug 2, Continued coolant circulation pump	247
23. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	248
24. Radiator outlet coolant temperature sender, Engine/motor control unit	249
25. Oil pressure switch. Oil pressure switch for reduced oil pressure. Stage 2 oil pressure switch.	250

Oil level and oil temperature sender, Engine/motor control unit	
26. Engine/motor control unit	251
27. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	252
28. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	253
29. Switch module 1 in centre console, Data bus diagnostic interface	254
30. Data bus diagnostic interface, Dash panel insert	255
31. Dash panel insert	256
009 - 2.0l diesel engine with start/stop system , DTRB,DTRD,DTTA,DTTC,(7L6)	257-291
1. 2.0l diesel engine with start/stop system , DTRB,DTRD,DTTA,DTTC,(7L6)	257
2. Battery, Starter, Battery monitor control unit, Fuse holder B	258
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	259
4. Main relay, Engine/motor control unit, Fuse holder B	260
5. Engine/motor control unit, Fuse holder B	261
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	262
7. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	263
8. Engine/motor control unit, Fuse holder C	264
9. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	265
10. Brake light switch, Clutch position sender, Engine/motor control unit	266
11. Accelerator pedal module, Engine/motor control unit	267
12. Engine/motor control unit	268
13. Engine speed sender, Hall sender, Engine/motor control unit	269
14. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	270
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	271
16. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit	272
17. Air mass meter, Engine/motor control unit, Exhaust flap control unit	273
18. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	274
19. Lambda probe 1 before catalytic converter, Engine/motor control unit	275
20. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	276
21. Control unit 3 for NOx sender, Particulate sensor, Engine/motor control unit	277
22. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	278
23. Delivery unit for reducing agent metering system, Engine/motor control unit, Injector for reducing agent	279
24. Water separator sender, Fuel pressure sender, Engine/motor control unit	280
25. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	281
26. Exhaust gas recirculation valve 2, Charge pressure control module, Engine/motor control unit	282
27. Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Charge air temperature sender before charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	283
28. Temperature and pressure sender for low-pressure fuel system, Exhaust gas temperature sender 4, Temperature sensor 2 for exhaust gas recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit	284
29. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather, Injector 2 for reducing agent	285
30. Engine/motor control unit	286
31. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	287
32. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	288
33. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	289
34. Fuel gauge sender 2, Data bus diagnostic interface, Dash panel insert	290
35. Dash panel insert	291
010 - 2.0l diesel engine , CRVC,(7L3)	292-319
1. 2.0l diesel engine , CRVC,(7L3)	292
2. Battery, Starter, Battery monitor control unit, Fuse holder B	293
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	294
4. Main relay, Engine/motor control unit, Fuse holder B	295
5. Engine/motor control unit, Fuse holder B	296
6. Engine/motor control unit. Starter relay 1. Starter relay 2. Fuse holder B	297

7. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	298
8. Engine/motor control unit, Fuse holder B, Fuse holder C	299
9. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	300
10. Engine/motor control unit	301
11. Brake light switch, Accelerator pedal module, Engine/motor control unit	302
12. Engine/motor control unit	303
13. Engine speed sender, Hall sender, Engine/motor control unit	304
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	305
15. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit	306
16. Charge pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	307
17. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	308
18. Water separator sender, Fuel pressure sender, Engine/motor control unit	309
19. Exhaust gas recirculation valve 1, Air mass meter, Engine/motor control unit	310
20. Throttle valve module, Exhaust gas temperature sender 1, Engine/motor control unit	311
21. Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	312
22. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather	313
23. Engine/motor control unit	314
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	315
25. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	316
26. Data bus diagnostic interface	317
27. Data bus diagnostic interface, Dash panel insert	318
28. Dash panel insert	319
011 - Dual clutch gearbox 0CW , (0EG)	320-327
1. Dual clutch gearbox 0CW , (0EG)	320
2. Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder B, Fuse holder C	321
3. Gearbox input speed sender, Gearbox hydraulic pressure sender, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor	322
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	323
5. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever position display	324
6. Temperature sender in control unit, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	325
7. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	326
8. Data bus diagnostic interface, Dash panel insert	327
012 - Dual clutch gearbox 0D9 , (0ES)	328-335
1. Dual clutch gearbox 0D9 , (0ES)	328
2. Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder B, Fuse holder C	329
3. Mechatronic unit for dual clutch gearbox	330
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	331
5. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever position display	332
6. Gearbox oil temperature sender, Temperature sender in control unit, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	333
7. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	334
8. Data bus diagnostic interface, Dash panel insert	335
013 - Dual clutch gearbox 0GC , (0IJ)	336-343
1. Dual clutch gearbox 0GC , (0IJ)	336
2. Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder B, Fuse holder C	337
3. Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	338
4. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Ignition key withdrawal lock solenoid	339
5. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever position display	340
6. Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	341
7. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	342
8. Data bus diagnostic interface, Dash panel insert	343
014 - 6-speed automatic gearbox 09G , (0ER)	344-352
1. 6-speed automatic gearbox 09G , (0ER)	344
2. Automatic gearbox control unit. Fuse holder A. Fuse holder B. Fuse holder C	345

3. Multifunction switch, Automatic gearbox control unit	346
4. Automatic gearbox control unit, Gearbox	347
5. Automatic gearbox control unit, Gearbox	348
6. Automatic gearbox control unit, Selector lever sensors control unit	349
7. Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display	350
8. Automatic gearbox control unit	351
9. Data bus diagnostic interface, Dash panel insert	352
015 - 8-speed automatic gearbox 09S , (0IH)	353-362
1. 8-speed automatic gearbox 09S , (0IH)	353
2. Automatic gearbox control unit, Fuse holder A, Fuse holder B, Fuse holder C	354
3. Automatic gearbox control unit, Gearbox	355
4. Automatic gearbox control unit, Gearbox	356
5. Automatic gearbox control unit, Gearbox	357
6. Automatic gearbox control unit, Selector lever sensors control unit, Ignition key withdrawal lock solenoid	358
7. Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display	359
8. Automatic gearbox control unit, Selector lever sensors control unit	360
9. Automatic gearbox control unit	361
10. Data bus diagnostic interface, Dash panel insert	362
016 - LED headlights , (8IT),(L0L)	363-375
1. LED headlights , (8IT),(L0L)	363
2. Rotary light switch	364
3. Left steering column switch, Steering column electronics control unit	365
4. Steering column electronics control unit	366
5. Front left headlight	367
6. Front right headlight	368
7. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	369
8. Front passenger door control unit, Passenger side exterior mirror	370
9. High-level brake light bulb, Left number plate light, Right number plate light	371
10. Brake light switch, Reversing light switch	372
11. Fuse holder A, Fuse holder B	373
12. Fuse holder C	374
13. Dash panel insert	375
017 - LED headlights , (8IT),(L0R)	376-388
1. LED headlights , (8IT),(L0R)	376
2. Rotary light switch	377
3. Left steering column switch, Steering column electronics control unit	378
4. Steering column electronics control unit	379
5. Front left headlight	380
6. Front right headlight	381
7. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	382
8. Front passenger door control unit, Passenger side exterior mirror	383
9. High-level brake light bulb, Left number plate light, Right number plate light	384
10. Brake light switch, Reversing light switch	385
11. Fuse holder A, Fuse holder B	386
12. Fuse holder C	387
13. Dash panel insert	388
018 - LED headlights , (8IU),(L0L)	389-403
1. LED headlights , (8IU),(L0L)	389
2. Rotary light switch	390
3. Left steering column switch, Steering column electronics control unit	391
4. Front left headlight	392
5. Front right headlight	393
6. Control unit for cornering light and headlight range control, Front camera for driver assist systems, Automatic anti-dazzle interior mirror	394
7. Twin belt buckle, Rear left vehicle level sender, Airbag control unit	395
8. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	396
9. Front passenger door control unit, Passenger side exterior mirror	397
10. High-level brake light bulb, Left number plate light, Right number plate light	398
11. Brake light switch, Reversing light switch	399
12. Fuse holder A, Fuse holder B	400
13. Fuse holder C	401
14. Data bus diagnostic interface, Dash panel insert	402
15. Data bus diagnostic interface	403

019 - LED headlights , (8IU),(L0R)	404-418
1. LED headlights , (8IU),(L0R)	404
2. Rotary light switch	405
3. Left steering column switch, Steering column electronics control unit	406
4. Front left headlight	407
5. Front right headlight	408
6. Control unit for cornering light and headlight range control, Front camera for driver assist systems, Automatic anti-dazzle interior mirror	409
7. Twin belt buckle, Rear left vehicle level sender, Airbag control unit	410
8. Switch module 1 in centre console, Driver door control unit, Driver side exterior mirror	411
9. Front passenger door control unit, Passenger side exterior mirror	412
10. High-level brake light bulb, Left number plate light, Right number plate light	413
11. Brake light switch, Reversing light switch	414
12. Fuse holder A, Fuse holder B	415
13. Fuse holder C	416
14. Data bus diagnostic interface, Dash panel insert	417
15. Data bus diagnostic interface	418
020 - Tail light clusters with LEDs	419-423
1. Tail light clusters with LEDs	419
2. Left tail light cluster, Left tail light cluster 2	420
3. Right tail light cluster, Right tail light cluster 2	421
4. Rear left fog light bulb, Rear right fog light bulb	422
5.	423
021 - Electromechanical power steering	424-427
1. Electromechanical power steering	424
2. Steering angle sender, Steering moment sender, Power steering control unit, Fuse holder A, Electromechanical power steering motor	425
3. Power steering control unit	426
4. Data bus diagnostic interface, Dash panel insert	427
022 - Airbag systems , (L0L)	428-438
1. Airbag systems , (L0L)	428
2. Fuse holder A, Fuse holder C	429
3. Coil connector, Front airbag crash sensor for driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	430
4. Switch module 1 in centre console, Key-operated switch to deactivate airbag on front passenger side, Airbag control unit	431
5. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	432
6. Side airbag crash sensor on driver side, Airbag control unit, Rear side airbag igniter on driver side	433
7. Side airbag crash sensor on front passenger side, Airbag control unit, Rear side airbag igniter on passenger side	434
8. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	435
9. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	436
10. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	437
11. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	438
023 - Airbag systems , (L0R)	439-449
1. Airbag systems , (L0R)	439
2. Fuse holder A, Fuse holder C	440
3. Coil connector, Front airbag crash sensor for driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	441
4. Switch module 1 in centre console, Key-operated switch to deactivate airbag on front passenger side, Airbag control unit	442
5. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	443
6. Side airbag crash sensor on driver side, Airbag control unit, Rear side airbag igniter on driver side	444
7. Side airbag crash sensor on front passenger side, Airbag control unit, Rear side airbag igniter on passenger side	445
8. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	446

9. Airbag control unit, Front left seat belt, Front right seat belt, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	447
10. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	448
11. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	449
024 - Seat belt warning system , (3NZ),(3NU),(L0L)	450-454
1. Seat belt warning system , (3NZ),(3NU),(L0L)	450
2. Driver side belt switch, Airbag control unit, Fuse holder C	451
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	452
4. Twin belt buckle, Belt switch for seat row 2, right, Airbag control unit	453
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	454
025 - Seat belt warning system , (3NZ),(3NU),(L0R)	455-459
1. Seat belt warning system , (3NZ),(3NU),(L0R)	455
2. Driver side belt switch, Airbag control unit, Fuse holder C	456
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	457
4. Twin belt buckle, Belt switch for seat row 2, right, Airbag control unit	458
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	459
026 - Seat belt warning system , (5KP),(L0L)	460-464
1. Seat belt warning system , (5KP),(L0L)	460
2. Driver side belt switch, Airbag control unit, Fuse holder C	461
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	462
4. Belt switch for seat row 2, centre left, Belt switch for seat row 2, centre right, Belt switch for seat row 2, right, Belt switch for seat row 2, left, Airbag control unit	463
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	464
027 - Seat belt warning system , (5KP),(L0R)	465-469
1. Seat belt warning system , (5KP),(L0R)	465
2. Driver side belt switch, Airbag control unit, Fuse holder C	466
3. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	467
4. Belt switch for seat row 2, centre left, Belt switch for seat row 2, centre right, Belt switch for seat row 2, right, Belt switch for seat row 2, left, Airbag control unit	468
5. Airbag control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	469
028 - Anti-lock brake system (ABS) , (L0L)	470-478
1. Anti-lock brake system (ABS) , (L0L)	470
2. ABS control unit, Fuse holder B	471
3. Brake servo pressure sensor, ABS control unit	472
4. ABS control unit	473
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	474
6. ABS control unit, Left parking brake motor, Right parking brake motor	475
7. ABS control unit	476
8. Switch module 2 in centre console	477
9. Data bus diagnostic interface, Dash panel insert	478
029 - Anti-lock brake system (ABS) , (L0R)	479-488
1. Anti-lock brake system (ABS) , (L0R)	479
2. ABS control unit, Fuse holder B	480
3. Brake servo pressure sensor, ABS control unit	481
4. ABS control unit	482
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	483
6. ABS control unit, Left parking brake motor, Right parking brake motor	484
7. ABS control unit	485
8. Switch module 2 in centre console	486
9. Data bus diagnostic interface	487
10. Data bus diagnostic interface, Dash panel insert	488
030 - Radiator fan	489-491
1. Radiator fan	489
2. Battery, Fuse holder A, Fuse holder B	490
3. Right radiator fan, Radiator fan	491
031 - Air conditioning system with manual regulation , (KH6),(L0L)	492-497
1. Air conditioning system with manual regulation , (KH6),(L0L)	492
2. Air conditioning system relay, Fuse holder A, Fuse holder B, Fuse holder C	493
3. Heater and air conditioning controls. Pressure sender for refrigerant circuit. Fresh air blower	494

control unit	
4. Heater and air conditioning controls, Air conditioner compressor regulating valve, Air recirculation flap control motor	495
5. Heater and air conditioning controls, Evaporator temperature sensor, Temperature flap, Air distribution flap	496
6. Heater and air conditioning controls	497
032 - Air conditioning system with manual regulation , DNNA,(KH6),(L0L)	498-503
1. Air conditioning system with manual regulation , DNNA,(KH6),(L0L)	498
2. Air conditioning system relay, Fuse holder A, Fuse holder C	499
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit	500
4. Heater and air conditioning controls, Air conditioner compressor regulating valve, Air recirculation flap control motor	501
5. Heater and air conditioning controls, Evaporator temperature sensor, Temperature flap, Air distribution flap	502
6. Heater and air conditioning controls	503
033 - Climatronic , (9AK),(KH7)	504-513
1. Climatronic , (9AK),(KH7)	504
2. Air conditioning system relay, Fuse holder A, Fuse holder B	505
3. Humidity sender, Air humidity, rain and light sensor, Fuse holder C	506
4. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Fresh air blower control unit	507
5. Heater and air conditioning controls, Air conditioner compressor regulating valve	508
6. Heater and air conditioning controls, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender	509
7. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Air recirculation flap	510
8. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	511
9. Heater and air conditioning controls, Air distribution flap, Defroster flap	512
10. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Rear temperature flap	513
034 - Climatronic , DNNA,(9AK),(KH7)	514-522
1. Climatronic , DNNA,(9AK),(KH7)	514
2. Humidity sender, Air humidity, rain and light sensor, Air conditioning system relay, Fuse holder A, Fuse holder C	515
3. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Fresh air blower control unit	516
4. Heater and air conditioning controls, Air conditioner compressor regulating valve	517
5. Heater and air conditioning controls, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender	518
6. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Air recirculation flap	519
7. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	520
8. Heater and air conditioning controls, Air distribution flap, Defroster flap	521
9. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Rear temperature flap	522
035 - Auxiliary air heater (PTC) , (7E6)	523-525
1. Auxiliary air heater (PTC) , (7E6)	523
2. Low heat output relay, High heat output relay, Fuse holder B, Auxiliary air heater element	524
3. Fuse holder B	525
036 - Auxiliary heater , (9M1),(9M9),(L0L)	526-531
1. Auxiliary heater , (9M1),(9M9),(L0L)	526
2. Heater and air conditioning controls, Fresh air blower control unit	527
3. Auxiliary heater control unit, Fuse holder A, Fuse holder B, Fuse holder C	528
4. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Glow plug with flame monitor, Combustion air blower, Circulation pump	529
5. Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary heater, Metering pump	530
6. Auxiliary heater control unit, Data bus diagnostic interface, Dash panel insert	531
037 - Heated windscreen , (4GX),(4GW)	532-534
1. Heated windscreen , (4GX),(4GW)	532
2. Heater and air conditioning controls	533
3. Heated windscreen relay, Fuse holder A, Fuse holder B, Heated windscreen	534
038 - Heated washer jets , (9T1)	535-536
1. Heated washer jets , (9T1)	535
2. Left washer jet heater element. Right washer jet heater element	536

039 - Convenience system , (4H3),(L0L)	537-554
1. Convenience system , (4H3),(L0L)	537
2. Fuse holder A, Fuse holder C	538
3. Driver door control unit	539
4. Driver door control unit	540
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	541
6. Driver door control unit, Driver door lock unit	542
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	543
8. Exterior mirror adjuster, Driver door control unit	544
9. Driver door control unit, Driver side exterior mirror	545
10. Front passenger door control unit	546
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	547
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	548
13. Front passenger door control unit, Passenger side exterior mirror	549
14. Rear left door lock unit	550
15. Rear driver side window regulator button, Rear left window regulator motor	551
16. Rear right door lock unit	552
17. Rear passenger side window regulator button, Rear right window regulator motor	553
18. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	554
040 - Convenience system , (4H3),(L0R)	555-572
1. Convenience system , (4H3),(L0R)	555
2. Fuse holder A, Fuse holder C	556
3. Driver door control unit	557
4. Driver door control unit	558
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	559
6. Driver door control unit, Driver door lock unit	560
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	561
8. Exterior mirror adjuster, Driver door control unit	562
9. Driver door control unit, Driver side exterior mirror	563
10. Front passenger door control unit	564
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	565
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	566
13. Front passenger door control unit, Passenger side exterior mirror	567
14. Rear left door lock unit	568
15. Rear passenger side window regulator button, Rear left window regulator motor	569
16. Rear right door lock unit	570
17. Rear driver side window regulator button, Rear right window regulator motor	571
18. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	572
041 - Convenience system , (4H5),(L0L)	573-592
1. Convenience system , (4H5),(L0L)	573
2. Fuse holder A, Fuse holder C	574
3. Driver door control unit	575
4. Driver door control unit	576
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	577
6. Driver door control unit, Driver door lock unit	578
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	579
8. Exterior mirror adjuster, Driver door control unit	580
9. Driver door control unit, Driver side exterior mirror	581
10. Front passenger door control unit	582
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	583
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	584
13. Front passenger door control unit, Passenger side exterior mirror	585
14. Rear left door control unit	586
15. Rear left door control unit. Rear left door lock unit	587

16. Rear driver side window regulator button, Rear left door control unit, Rear left window regulator motor	588
17. Rear right door control unit	589
18. Rear right door control unit, Rear right door lock unit	590
19. Rear passenger side window regulator button, Rear right door control unit, Rear right window regulator motor	591
20. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	592
042 - Convenience system , (4H5),(L0R)	593-612
1. Convenience system , (4H5),(L0R)	593
2. Fuse holder A, Fuse holder C	594
3. Driver door control unit	595
4. Driver door control unit	596
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	597
6. Driver door control unit, Driver door lock unit	598
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	599
8. Exterior mirror adjuster, Driver door control unit	600
9. Driver door control unit, Driver side exterior mirror	601
10. Front passenger door control unit	602
11. Front passenger door control unit, Front passenger door lock unit	603
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	604
13. Front passenger door control unit, Passenger side exterior mirror	605
14. Rear left door control unit	606
15. Rear left door control unit, Rear left door lock unit	607
16. Rear passenger side window regulator button, Rear left door control unit, Rear left window regulator motor	608
17. Rear right door control unit	609
18. Rear right door control unit, Rear right door lock unit	610
19. Rear driver side window regulator button, Rear right door control unit, Rear right window regulator motor	611
20. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	612
043 - Electrically operated rear lid , (4E6),(4E7),(L0L)	613-619
1. Electrically operated rear lid , (4E6),(4E7),(L0L)	613
2. Rear lid control unit, Fuse holder A, Fuse holder C	614
3. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit	615
4. Rear lid remote release switch, Driver door control unit, Rear lid control unit, Power latching for rear lid	616
5. Rear lid control unit, Rear lid drive unit	617
6. Rear lid lock unit	618
7. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	619
044 - Electrically operated rear lid , (4E6),(4E7),(L0R)	620-626
1. Electrically operated rear lid , (4E6),(4E7),(L0R)	620
2. Rear lid control unit, Fuse holder A, Fuse holder C	621
3. Button to close rear lid in luggage compartment, Rear lid warning buzzer, Rear lid control unit	622
4. Rear lid remote release switch, Driver door control unit, Rear lid control unit, Power latching for rear lid	623
5. Rear lid control unit, Rear lid drive unit	624
6. Rear lid lock unit	625
7. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	626
045 - All-wheel drive (4Motion) with petrol engine , (1X1)	627-631
1. All-wheel drive (4Motion) with petrol engine , (1X1)	627
2. Fuse holder A, Fuse holder B, Fuse holder C	628
3. All-wheel drive control unit, All-wheel drive coupling pump	629
4. All-wheel drive control unit, Data bus diagnostic interface, Dash panel insert	630
5. Fuel delivery unit, Fuel pump control unit, Dash panel insert	631
046 - All-wheel drive (4Motion) with diesel engine , (1X1),(L0L)	632-638
1. All-wheel drive (4Motion) with diesel engine , (1X1),(L0L)	632
2. Fuse holder A, Fuse holder B, Fuse holder C	633
3. All-wheel drive control unit, All-wheel drive coupling pump	634
4. All-wheel drive control unit, Data bus diagnostic interface, Dash panel insert	635
5. Dash panel insert	636
6. Fuel pump control unit. Dash panel insert	637

7. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	638
047 - Entry and start authorisation , (4F2),(4I3),(4I6),(4I7),(L0L)	639-647
1. Entry and start authorisation , (4F2),(4I3),(4I6),(4I7),(L0L)	639
2. Fuse holder A, Fuse holder C	640
3. Control unit for electronic steering column lock, Interface for entry and start system	641
4. Starter button, Interface for entry and start system	642
5. Driver exterior door handle, Interface for entry and start system	643
6. Front passenger exterior door handle, Interface for entry and start system	644
7. Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	645
8. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	646
9. Immobiliser reader coil, Data bus diagnostic interface, Interface for entry and start system, Dash panel insert	647
048 - Entry and start authorisation , (4F2),(4I3),(4I6),(4I7),(L0R)	648-656
1. Entry and start authorisation , (4F2),(4I3),(4I6),(4I7),(L0R)	648
2. Fuse holder A, Fuse holder C	649
3. Control unit for electronic steering column lock, Interface for entry and start system	650
4. Starter button, Interface for entry and start system	651
5. Driver exterior door handle, Interface for entry and start system	652
6. Front passenger exterior door handle, Interface for entry and start system	653
7. Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	654
8. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	655
9. Immobiliser reader coil, Data bus diagnostic interface, Interface for entry and start system, Dash panel insert	656
049 - Radio system , (I8I),(8RE),(8RM),(L0L)	657-665
1. Radio system , (I8I),(8RE),(8RM),(L0L)	657
2. Fuse holder A, Fuse holder C	658
3. Data bus diagnostic interface, Control unit 1 for information electronics	659
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	660
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	661
6. Control unit 1 for information electronics, USB hub, USB connection 1	662
7. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Storage compartment with interface for mobile telephone	663
8. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	664
9. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	665
050 - Radio system , (I8I),(8RE),(8RM),(L0R)	666-674
1. Radio system , (I8I),(8RE),(8RM),(L0R)	666
2. Fuse holder A, Fuse holder C	667
3. Data bus diagnostic interface, Control unit 1 for information electronics	668
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	669
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	670
6. Control unit 1 for information electronics, USB hub, USB connection 1	671
7. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Storage compartment with interface for mobile telephone	672
8. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	673
9. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	674
051 - Radio system with digital sound package , (8AR),(9VS),(L0L)	675-686
1. Radio system with digital sound package , (8AR),(9VS),(L0L)	675
2. Fuse holder A, Fuse holder C	676
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	677
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	678
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	679
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	680
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble	681

loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	682
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	683
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Storage compartment with interface for mobile telephone	684
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	685
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	686
052 - Radio system with digital sound package , (8AR),(9VS),(L0R)	687-698
1. Radio system with digital sound package , (8AR),(9VS),(L0R)	687
2. Fuse holder A, Fuse holder C	688
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	689
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	690
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	691
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	692
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	693
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	694
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	695
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Storage compartment with interface for mobile telephone	696
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	697
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	698
053 - Radio navigation system , (8AR),(8RM),(L0L)	699-710
1. Radio navigation system , (8AR),(8RM),(L0L)	699
2. Fuse holder A, Fuse holder C	700
3. Data bus diagnostic interface, Control unit 1 for information electronics	701
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	702
5. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	703
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	704
7. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Reversing camera	705
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	706
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Dash panel insert, Telephone microphone	707
10. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	708
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	709
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	710
054 - Radio navigation system , (8AR),(8RM),(L0R)	711-722
1. Radio navigation system , (8AR),(8RM),(L0R)	711
2. Fuse holder A, Fuse holder C	712
3. Data bus diagnostic interface, Control unit 1 for information electronics	713
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	714
5. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	715
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	716
7. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	717
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	718
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Dash panel insert, Telephone microphone	719
10. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	720
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	721
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire. Frequency modulation (FM) frequency filter in positive wire. Rear window	722

055 - Radio navigation system with digital sound package , (8AR),(9VS),(L0L)	723-735
1. Radio navigation system with digital sound package , (8AR),(9VS),(L0L)	723
2. Fuse holder A, Fuse holder C	724
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	725
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	726
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	727
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	728
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	729
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	730
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	731
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	732
11. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	733
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	734
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	735
056 - Radio navigation system with digital sound package , (8AR),(9VS),(L0R)	736-748
1. Radio navigation system with digital sound package , (8AR),(9VS),(L0R)	736
2. Fuse holder A, Fuse holder C	737
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	738
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	739
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	740
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	741
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	742
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	743
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	744
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	745
11. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	746
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	747
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	748
057 - Emergency call module , (NZ0),(EL5),(8AR)	749-752
1. Emergency call module , (NZ0),(EL5),(8AR)	749
2. Emergency call module control unit and communication unit, Fuse holder A, Fuse holder C	750
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial	751
4. Data bus diagnostic interface, Emergency call module control unit and communication unit, LTE aerial 2, Loudspeaker for emergency call module	752
058 - Emergency call module , (NZ2),(I8I),(8AR)	753-756
1. Emergency call module , (NZ2),(I8I),(8AR)	753
2. Emergency call module control unit and communication unit, Fuse holder A, Fuse holder C	754
3. Emergency assistance call button, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial	755
4. Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, LTE aerial 2, Loudspeaker for emergency call module	756
059 - Emergency call module , (NZ3),(I8I),(8AR)	757-760
1. Emergency call module , (NZ3),(I8I),(8AR)	757
2. Emergency call module control unit and communication unit, Fuse holder A, Fuse holder C	758
3. Emergency assistance call button, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial	759
4. Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, LTE aerial 2, Loudspeaker for emergency call module	760
060 - Background lighting , (QQ9),(KA0),(KA1),(L0L)	761-765
1. Background lighting , (QQ9),(KA0),(KA1),(L0L)	761
2. Light 1 for dash panel backaround lightina. Light 2 for dash panel backaround lightina. Fuse	762

holder A, Fuse holder C	
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	763
4. Light for driver door background lighting, Light for passenger door background lighting	764
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	765
061 - Background lighting , (QQ9),(KA0),(KA1),(L0R)	766-770
1. Background lighting , (QQ9),(KA0),(KA1),(L0R)	766
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	767
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	768
4. Light for driver door background lighting, Light for passenger door background lighting	769
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	770
062 - Background lighting , (QQ9),(KA6),(L0L)	771-775
1. Background lighting , (QQ9),(KA6),(L0L)	771
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	772
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	773
4. Light for driver door background lighting, Light for passenger door background lighting	774
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	775
063 - Background lighting , (QQ9),(KA6),(L0R)	776-780
1. Background lighting , (QQ9),(KA6),(L0R)	776
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	777
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	778
4. Light for driver door background lighting, Light for passenger door background lighting	779
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	780
064 - Panoramic sliding sunroof , (3FU)	781-785
1. Panoramic sliding sunroof , (3FU)	781
2. Sliding sunroof adjustment control unit, Fuse holder A, Fuse holder C	782
3. Sunroof button, Sliding sunroof adjustment control unit	783
4. Sunroof button, Sliding sunroof adjustment control unit, Sliding sunroof motor	784
5. Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Sunroof roller blind motor	785
065 - Anti-theft alarm system , (7AL),(7AS)	786-787
1. Anti-theft alarm system , (7AL),(7AS)	786
2. Bonnet contact switch, Anti-theft alarm sensor, Anti-theft alarm system horn, Fuse holder A, Fuse holder B, Fuse holder C	787
066 - Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0L)	788-791
1. Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0L)	788
2. Fuse holder A, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	789
3. Driver door control unit, Driver side exterior mirror, Automatic anti-dazzle interior mirror	790
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	791
067 - Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0R)	792-795
1. Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0R)	792
2. Fuse holder A, Fuse holder C, Automatic anti-dazzle interior mirror	793
3. Driver door control unit, Driver side exterior mirror, Automatic anti-dazzle interior mirror	794
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	795
068 - Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0L)	796-799
1. Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0L)	796
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	797
3. Driver door control unit, Driver side exterior mirror	798
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	799
069 - Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0R)	800-803
1. Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0R)	800
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	801
3. Driver door control unit, Driver side exterior mirror	802
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	803

070 - Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0L)	804-811
1. Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0L)	804
2. Fuse holder A, Fuse holder C	805
3. Heater and air conditioning controls	806
4. Seat heating (driver side)	807
5. Seat heating (front passenger side)	808
6. Switch module in rear centre console, Heated rear seats control unit	809
7. Heated rear seats control unit, Rear left seat heating, Heated backrest for rear left seat	810
8. Heated rear seats control unit, Rear right seat heating, Heated backrest for rear right seat	811
071 - Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0R)	812-819
1. Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0R)	812
2. Fuse holder A, Fuse holder C	813
3. Heater and air conditioning controls	814
4. Seat heating (driver side)	815
5. Seat heating (front passenger side)	816
6. Switch module in rear centre console, Heated rear seats control unit	817
7. Heated rear seats control unit, Rear left seat heating, Heated backrest for rear left seat	818
8. Heated rear seats control unit, Rear right seat heating, Heated backrest for rear right seat	819
072 - Seat heating , (3NZ),(3NU),(KH7),(L0L)	820-827
1. Seat heating , (3NZ),(3NU),(KH7),(L0L)	820
2. Fuse holder A, Fuse holder C	821
3. Heater and air conditioning controls	822
4. Seat heating (driver side)	823
5. Seat heating (front passenger side)	824
6. Operating and display unit for rear air conditioning system	825
7. Operating and display unit for rear air conditioning system, Rear left seat heating, Heated backrest for rear left seat	826
8. Operating and display unit for rear air conditioning system, Rear right seat heating, Heated backrest for rear right seat	827
073 - Seat heating , (3NZ),(3NU),(KH7),(L0R)	828-835
1. Seat heating , (3NZ),(3NU),(KH7),(L0R)	828
2. Fuse holder A, Fuse holder C	829
3. Heater and air conditioning controls	830
4. Seat heating (driver side)	831
5. Seat heating (front passenger side)	832
6. Operating and display unit for rear air conditioning system	833
7. Operating and display unit for rear air conditioning system, Rear left seat heating, Heated backrest for rear left seat	834
8. Operating and display unit for rear air conditioning system, Rear right seat heating, Heated backrest for rear right seat	835
074 - Seat heating , (5KP),(9AK),(KH6),(L0L)	836-844
1. Seat heating , (5KP),(9AK),(KH6),(L0L)	836
2. Fuse holder A, Fuse holder C	837
3. Heater and air conditioning controls	838
4. Seat heating (driver side)	839
5. Seat heating (front passenger side)	840
6. Switch module in rear centre console, Heated rear seats control unit	841
7. Heated rear seats control unit	842
8. Rear left seat heating, Heated backrest for rear left seat	843
9. Rear right seat heating, Heated backrest for rear right seat	844
075 - Seat heating , (5KP),(9AK),(KH6),(L0R)	845-853
1. Seat heating , (5KP),(9AK),(KH6),(L0R)	845
2. Fuse holder A, Fuse holder C	846
3. Heater and air conditioning controls	847
4. Seat heating (driver side)	848
5. Seat heating (front passenger side)	849
6. Switch module in rear centre console, Heated rear seats control unit	850
7. Heated rear seats control unit	851
8. Rear left seat heating, Heated backrest for rear left seat	852
9. Rear right seat heating, Heated backrest for rear right seat	853
076 - Seat heating , (5KP),(KH7),(L0L)	854-862
1. Seat heating , (5KP),(KH7),(L0L)	854
2. Fuse holder A, Fuse holder C	855
3. Heater and air conditioning controls	856
4. Seat heating (driver side)	857
5. Seat heating (front passenger side)	858

6. Operating and display unit for rear air conditioning system	859
7. Operating and display unit for rear air conditioning system	860
8. Rear left seat heating, Heated backrest for rear left seat	861
9. Rear right seat heating, Heated backrest for rear right seat	862
077 - Seat heating , (5KP),(KH7),(L0R)	863-871
1. Seat heating , (5KP),(KH7),(L0R)	863
2. Fuse holder A, Fuse holder C	864
3. Heater and air conditioning controls	865
4. Seat heating (driver side)	866
5. Seat heating (front passenger side)	867
6. Operating and display unit for rear air conditioning system	868
7. Operating and display unit for rear air conditioning system	869
8. Rear left seat heating, Heated backrest for rear left seat	870
9. Rear right seat heating, Heated backrest for rear right seat	871
078 - Seat and mirror adjustment with memory function , (3PH),(3PN),(L0L)	872-892
1. Seat and mirror adjustment with memory function , (3PH),(3PN),(L0L)	872
2. Fuse holder A, Fuse holder C, Fuse holder D	873
3. Driver seat adjustment control unit	874
4. Operating unit for front left seat adjustment, Driver seat adjustment control unit	875
5. Operating unit 2 for front left seat adjustment, Driver seat adjustment control unit	876
6. Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	877
7. Driver seat adjustment control unit, Driver seat height adjustment motor, Driver seat rake adjustment motor	878
8. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	879
9. Driver seat adjustment control unit, Front left lumbar support adjustment motor	880
10. Front passenger seat adjustment control unit	881
11. Operating unit for front right seat adjustment, Front passenger seat adjustment control unit	882
12. Operating unit 2 for front right seat adjustment, Front passenger seat adjustment control unit	883
13. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment control unit	884
14. Front passenger seat adjustment control unit, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	885
15. Front passenger seat adjustment control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor	886
16. Front passenger seat adjustment control unit, Front right lumbar support adjustment motor	887
17. Exterior mirror adjuster, Driver door control unit	888
18. Driver door control unit, Driver side exterior mirror	889
19. Driver door control unit, Driver side exterior mirror	890
20. Front passenger door control unit, Passenger side exterior mirror	891
21. Front passenger door control unit, Passenger side exterior mirror	892
079 - Seat and mirror adjustment with memory function , (3PJ),(3PN),(L0R)	893-913
1. Seat and mirror adjustment with memory function , (3PJ),(3PN),(L0R)	893
2. Fuse holder A, Fuse holder C, Fuse holder D	894
3. Driver seat adjustment control unit	895
4. Operating unit for front right seat adjustment, Driver seat adjustment control unit	896
5. Operating unit 2 for front right seat adjustment, Driver seat adjustment control unit	897
6. Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	898
7. Driver seat adjustment control unit, Driver seat height adjustment motor, Driver seat rake adjustment motor	899
8. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	900
9. Driver seat adjustment control unit, Front left lumbar support adjustment motor	901
10. Front passenger seat adjustment control unit	902
11. Operating unit for front left seat adjustment, Front passenger seat adjustment control unit	903
12. Operating unit 2 for front left seat adjustment, Front passenger seat adjustment control unit	904
13. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment control unit	905
14. Front passenger seat adjustment control unit, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	906
15. Front passenger seat adjustment control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor	907
16. Front passenger seat adjustment control unit, Front right lumbar support adjustment motor	908
17. Exterior mirror adjuster, Driver door control unit	909
18. Driver door control unit, Driver side exterior mirror	910
19. Driver door control unit. Driver side exterior mirror	911

20. Front passenger door control unit, Passenger side exterior mirror	912
21. Front passenger door control unit, Passenger side exterior mirror	913
080 - Rear parking aid (PDC) , (7X1)	914-917
1. Rear parking aid (PDC) , (7X1)	914
2. Rear left parking aid sender, Rear centre left parking aid sender, Parking aid control unit, Parking aid loudspeaker, Fuse holder C	915
3. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	916
4. Parking aid control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	917
081 - Front and rear parking aid (PDC) , (7X2),(8A8)	918-924
1. Front and rear parking aid (PDC) , (7X2),(8A8)	918
2. Switch module 1 in centre console, Parking aid control unit, Fuse holder C	919
3. Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	920
4. Front right parking aid sender, Front centre right parking aid sender, Parking aid control unit, Parking aid loudspeaker	921
5. Rear left parking aid sender, Rear centre left parking aid sender, Parking aid control unit	922
6. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	923
7. Parking aid control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	924
082 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5),(8A9)	925-934
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5),(8A9)	925
2. Switch module 1 in centre console, Parking aid control unit, Onboard supply control unit, Fuse holder C	926
3. Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	927
4. Front right parking aid sender, Front centre right parking aid sender, Parking aid control unit, Parking aid loudspeaker	928
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	929
6. Rear left parking aid sender, Rear centre left parking aid sender, Parking aid control unit	930
7. Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	931
8. Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit	932
9. Power steering control unit, Data bus diagnostic interface	933
10. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	934
083 - Adaptive cruise control , (6K2),(6K3),(6K4)	935-939
1. Adaptive cruise control , (6K2),(6K3),(6K4)	935
2. Control unit for cornering light and headlight range control, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	936
3. Adaptive cruise control unit	937
4. Steering column combination switch, Steering column electronics control unit	938
5. Steering column electronics control unit, Data bus diagnostic interface	939
084 - Front camera for driver assist systems , (QK1)	940-942
1. Front camera for driver assist systems , (QK1)	940
2. Control unit for cornering light and headlight range control, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	941
3. Adaptive cruise control unit, Data bus diagnostic interface	942
085 - Reversing camera (Rear Assist) , (KA1),(L0L)	943-944
1. Reversing camera (Rear Assist) , (KA1),(L0L)	943
2. Control unit 1 for information electronics, Reversing camera, Fuse holder A, Fuse holder C	944
086 - Reversing camera (Rear Assist) , (KA1),(L0R)	945-946
1. Reversing camera (Rear Assist) , (KA1),(L0R)	945
2. Control unit 1 for information electronics, Reversing camera, Fuse holder A, Fuse holder C	946
087 - Overhead view camera , (KA6),(L0L)	947-950
1. Overhead view camera , (KA6),(L0L)	947
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse holder A, Fuse holder C	948
3. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera, Front overhead view camera	949
4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	950
088 - Overhead view camera , (KA6),(L0R)	951-954
1. Overhead view camera , (KA6),(L0R)	951
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse holder A, Fuse holder C	952
3. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera. Front overhead view camera	953

4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	954
089 - Lane change assist , (7Y1),(L0L)	955-958
1. Lane change assist , (7Y1),(L0L)	955
2. Blind Spot Monitor control unit 2, Fuse holder C, Driver side exterior mirror	956
3. Blind Spot Monitor control unit, Passenger side exterior mirror	957
4. Data bus diagnostic interface, Blind Spot Monitor control unit	958
090 - Lane change assist , (7Y1),(L0R)	959-962
1. Lane change assist , (7Y1),(L0R)	959
2. Blind Spot Monitor control unit 2, Fuse holder C, Passenger side exterior mirror	960
3. Blind Spot Monitor control unit, Driver side exterior mirror	961
4. Data bus diagnostic interface, Blind Spot Monitor control unit	962
091 - Adaptive chassis control DCC , (2H4)	963-967
1. Adaptive chassis control DCC , (2H4)	963
2. Electronically controlled damping control unit, Fuse holder A, Fuse holder C	964
3. Switch module 2 in centre console, Front left vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface, Front left shock absorber damping adjustment valve	965
4. Front right vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	966
5. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	967
092 - Trailer coupling , (1M6),(1D7)	968-971
1. Trailer coupling , (1M6),(1D7)	968
2. Trailer detector control unit, Fuse holder A, Fuse holder C	969
3. Trailer detector control unit, Towing bracket	970
4. Button for electric swivelling towing bracket, Trailer detector control unit, Towing bracket	971
093 - Engine sound generator , (9J1)	972-973
1. Engine sound generator , (9J1)	972
2. Data bus diagnostic interface, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse holder C	973
094 - 230 V socket , (9Z3)	974-975
1. 230 V socket , (9Z3)	974
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Interior socket, 230 V, 110 V	975
095 - Mobile telephone systems , (9IJ),(9ZV),(L0L)	976-978
1. Mobile telephone systems , (9IJ),(9ZV),(L0L)	976
2. Two-way signal amplifier for mobile telephone/data services, Roof aerial, LTE aerial 3, Fuse holder A, Fuse holder C	977
3. Control unit 1 for information electronics, Interface for entry and start system, Storage compartment with interface for mobile telephone	978
096 - Mobile telephone systems , (9IJ),(9ZV),(L0R)	979-981
1. Mobile telephone systems , (9IJ),(9ZV),(L0R)	979
2. Two-way signal amplifier for mobile telephone/data services, Roof aerial, LTE aerial 3, Fuse holder A, Fuse holder C	980
3. Control unit 1 for information electronics, Interface for entry and start system, Storage compartment with interface for mobile telephone	981
097 - Multifunction steering wheel , (2FJ),(2FT),(2FU),(2PS),(2PT),(2ZA),(2ZS),(2ZW)	982-987
1. Multifunction steering wheel , (2FJ),(2FT),(2FU),(2PS),(2PT),(2ZA),(2ZS),(2ZW)	982
2. Coil connector, Horn plate, Steering column electronics control unit	983
3. Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Steering wheel, Heated steering wheel sender	984
4. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Sensor module, Multifunction steering wheel control unit, Control unit for steering wheel contact detection	985
5. Data bus diagnostic interface, Control unit 1 for information electronics	986
6. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder C	987
098 - Heated steering wheel , (2FT),(2PS),(2PT),(2ZW)	988-994
1. Heated steering wheel , (2FT),(2PS),(2PT),(2ZW)	988
2. Steering column electronics control unit, Fuse holder A, Fuse holder C	989
3. Right steering column switch, Steering column electronics control unit	990
4. Right steering column switch, Steering column electronics control unit	991
5. Left steering column switch, Steering column electronics control unit	992
6. Left steering column switch, Steering wheel, Coil connector, Horn plate, Steering column electronics control unit. Engine/motor control unit. Heated steering wheel	993

7. Coil connector, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side	994
099 - Data bus network , (L0L)	995-1012
1. Data bus network , (L0L)	995
2. Data bus diagnostic interface, Dash panel insert, Diagnostic connection	996
3. Driver door control unit, Data bus diagnostic interface	997
4. Front passenger door control unit, Data bus diagnostic interface	998
5. Heater and air conditioning controls, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	999
6. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Front passenger seat adjustment control unit, Driver seat adjustment control unit	1000
7. Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit	1001
8. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Main beam assist control unit	1002
9. Data bus diagnostic interface, Blind Spot Monitor control unit, Front camera for driver assist systems	1003
10. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	1004
11. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	1005
12. Data bus diagnostic interface, Auxiliary hydraulic pump 1 for gearbox oil	1006
13. Airbag control unit, Data bus diagnostic interface, Selector lever sensors control unit	1007
14. Power steering control unit, Data bus diagnostic interface	1008
15. ABS control unit, Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	1009
16. Data bus diagnostic interface	1010
17. Auxiliary heater control unit, Data bus diagnostic interface, Control unit 1 for information electronics	1011
18. Digital sound package control unit, Data bus diagnostic interface	1012
100 - Data bus network , (L0R)	1013-1028
1. Data bus network , (L0R)	1013
2. Data bus diagnostic interface, Dash panel insert, Diagnostic connection	1014
3. Driver door control unit, Data bus diagnostic interface	1015
4. Front passenger door control unit, Data bus diagnostic interface	1016
5. Heater and air conditioning controls, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	1017
6. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Front passenger seat adjustment control unit, Driver seat adjustment control unit	1018
7. Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit	1019
8. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Main beam assist control unit	1020
9. Adaptive cruise control unit, Data bus diagnostic interface, Blind Spot Monitor control unit, Front camera for driver assist systems	1021
10. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	1022
11. Data bus diagnostic interface, Engine/motor control unit, Auxiliary hydraulic pump 1 for gearbox oil	1023
12. Airbag control unit, Data bus diagnostic interface, Selector lever sensors control unit	1024
13. Power steering control unit, Data bus diagnostic interface	1025
14. ABS control unit, Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface	1026
15. Data bus diagnostic interface	1027
16. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	1028
101 - Basic equipment , (L0L)	1029-1072
1. Basic equipment , (L0L)	1029
2. Battery, Horn relay, Fuse holder A, Fuse holder B	1030
3. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B	1031
4. Emergency call module control unit and communication unit, Fuse holder C	1032
5. Fuse holder C	1033
6. Trailer detector control unit, Fuse holder C	1034
7. Rotary light switch, Fuse holder C	1035
8. Fuse holder C	1036
9. Fuse holder C	1037
10. Heated rear window relav. Fuse holder C	1038

11. Terminal 15 voltage supply relay, Fuse holder C	1039
12. Engine/motor control unit, Fuse holder C	1040
13.	1041
14.	1042
15.	1043
16. Steering column electronics control unit	1044
17. Right steering column switch, Steering column electronics control unit	1045
18. Right steering column switch, Airbag control unit, Steering column electronics control unit	1046
19. Ignition/starter switch, Steering column electronics control unit	1047
20. Left steering column switch, Steering column electronics control unit	1048
21. Left steering column switch, Coil connector, Horn plate, Steering column electronics control unit	1049
22. Humidity sender, Light sensor, Air humidity, rain and light sensor, Driver side windscreen wiper motor	1050
23. Rear window wiper motor	1051
24. Headlight washer system pump, Windscreen and rear window washer pump	1052
25. Front interior light	1053
26. Front interior light	1054
27. Rear interior light	1055
28. Rear left reading light, Rear right reading light	1056
29. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Right luggage compartment light	1057
30. Rear lid handle release button, Rear lid lock unit	1058
31. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Left footwell light, Right footwell light, Rear window	1059
32. Rear left footwell light, Rear right footwell light	1060
33. 12 V socket, 12 V socket 2, USB charging socket 1, USB charging socket 2	1061
34. Switch module 2 in centre console, Storage compartment illumination bulb	1062
35. Treble horn, Bass horn	1063
36. Immobiliser reader coil, Brake fluid level warning contact, Control unit 1 for information electronics, Dash panel insert	1064
37. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Dash panel insert	1065
38. Bonnet contact switch, Front right brake pad wear sender, Dash panel insert	1066
39. Dash panel insert	1067
40. Dash panel insert	1068
41. Data bus diagnostic interface, Dash panel insert	1069
42. Data bus diagnostic interface	1070
43. Data bus diagnostic interface	1071
44. Data bus diagnostic interface, Diagnostic connection	1072
102 - Basic equipment , (L0R)	1073-1116
1. Basic equipment , (L0R)	1073
2. Battery, Horn relay, Fuse holder B	1074
3. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B	1075
4. Emergency call module control unit and communication unit, Fuse holder C	1076
5. Fuse holder C	1077
6. Trailer detector control unit, Fuse holder C	1078
7. Rotary light switch, Fuse holder C	1079
8. Fuse holder C	1080
9. Fuse holder C	1081
10. Heated rear window relay, Fuse holder C	1082
11. Terminal 15 voltage supply relay, Fuse holder C	1083
12. Engine/motor control unit, Fuse holder C	1084
13.	1085
14.	1086
15.	1087
16. Steering column electronics control unit	1088
17. Right steering column switch, Steering column electronics control unit	1089
18. Right steering column switch, Airbag control unit, Steering column electronics control unit	1090
19. Ignition/starter switch, Steering column electronics control unit	1091
20. Left steering column switch, Steering column electronics control unit	1092
21. Left steering column switch, Coil connector, Horn plate, Steering column electronics control unit	1093
22. Humidity sender. Light sensor. Air humidity. rain and light sensor. Driver side windscreen wiper	1094

motor	
23. Rear window wiper motor	1095
24. Headlight washer system pump, Windscreen and rear window washer pump	1096
25. Front interior light	1097
26. Front interior light	1098
27. Rear interior light	1099
28. Rear left reading light, Rear right reading light	1100
29. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Right luggage compartment light	1101
30. Rear lid handle release button, Rear lid lock unit	1102
31. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Left footwell light, Right footwell light, Rear window	1103
32. Rear left footwell light, Rear right footwell light	1104
33. 12 V socket, 12 V socket 2, USB charging socket 1, USB charging socket 2	1105
34. Switch module 2 in centre console, Storage compartment illumination bulb	1106
35. Treble horn, Bass horn	1107
36. Immobiliser reader coil, Brake fluid level warning contact, Control unit 1 for information electronics, Dash panel insert	1108
37. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Dash panel insert	1109
38. Bonnet contact switch, Front right brake pad wear sender, Dash panel insert	1110
39. Dash panel insert	1111
40. Dash panel insert	1112
41. Data bus diagnostic interface, Dash panel insert	1113
42. Data bus diagnostic interface	1114
43. Data bus diagnostic interface	1115
44. Data bus diagnostic interface	1116
103 - 1.5l petrol engine , DXDB,(7L6)	1117-1146
1. 1.5l petrol engine , DXDB,(7L6)	1117
2. Battery, Starter, Battery monitor control unit, Fuse holder B	1118
3. Alternator with voltage regulator, Air conditioner compressor regulating valve, Fuse holder A, Fuse holder B	1119
4. Main relay, Engine/motor control unit, Fuse holder B	1120
5. Engine/motor control unit, Fuse holder B	1121
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	1122
7. Engine/motor control unit, Fuse holder B, Fuse holder C	1123
8. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	1124
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	1125
10. Brake light switch, Clutch position sender, Engine/motor control unit	1126
11. Accelerator pedal module, Engine/motor control unit	1127
12. Engine/motor control unit	1128
13. Throttle valve module, Engine/motor control unit	1129
14. Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	1130
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1131
16. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	1132
17. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	1133
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	1134
19. Engine/motor control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	1135
20. Dual exhaust gas temperature sensor 1, Pressure sensor for activated charcoal filter air flushing, Pressure differential sender for particulate filter, Engine/motor control unit	1136
21. Function unit for active oil separation, Engine/motor control unit, Charge air cooling pump	1137
22. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Fuel metering valve, Spark plug 1, Spark plug 2	1138
23. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	1139
24. Engine temperature regulation module. Oil level and oil temperature sender. Engine/motor control	1140

unit	
25. Engine/motor control unit	1141
26. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1142
27. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1143
28. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	1144
29. Data bus diagnostic interface, Dash panel insert	1145
30. Dash panel insert	1146
104 - 1.6l petrol engine , DWYA,(7L3)	1147-1170
1. 1.6l petrol engine , DWYA,(7L3)	1147
2. Battery, Starter, Battery monitor control unit, Fuse holder B	1148
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	1149
4. Main relay, Engine/motor control unit, Fuse holder B	1150
5. Engine/motor control unit, Fuse holder B	1151
6. Fuel pump relay, Engine/motor control unit, Fuse holder B	1152
7. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	1153
8. Vacuum pump relay, Engine/motor control unit, Fuse holder B, Fuse holder C, Vacuum pump for brakes	1154
9. Engine speed sender, Radiator outlet coolant temperature sender, Engine/motor control unit	1155
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	1156
11. Brake light switch, Clutch position sender, Engine/motor control unit	1157
12. Accelerator pedal module, Engine/motor control unit	1158
13. Throttle valve module, Engine/motor control unit	1159
14. Knock sensor 1, Coolant temperature sender, Engine/motor control unit	1160
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1161
16. Intake manifold sender, Hall sender, Engine/motor control unit	1162
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	1163
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	1164
19. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	1165
20. Oil pressure switch, Engine/motor control unit	1166
21. Engine/motor control unit	1167
22. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	1168
23. Fuel delivery unit, Data bus diagnostic interface, Dash panel insert	1169
24. Dash panel insert	1170
105 - 2.0l diesel engine with start/stop system , DTRB,DTRD,DTTA,DTTC,(7L6)	1171-1205
1. 2.0l diesel engine with start/stop system , DTRB,DTRD,DTTA,DTTC,(7L6)	1171
2. Battery, Starter, Battery monitor control unit, Fuse holder B	1172
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	1173
4. Main relay, Engine/motor control unit, Fuse holder B	1174
5. Engine/motor control unit, Fuse holder B	1175
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	1176
7. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	1177
8. Engine/motor control unit, Fuse holder C	1178
9. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	1179
10. Brake light switch, Clutch position sender, Engine/motor control unit	1180
11. Accelerator pedal module, Engine/motor control unit	1181
12. Engine/motor control unit	1182
13. Engine speed sender, Hall sender, Engine/motor control unit	1183
14. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	1184
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1185
16. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit	1186
17. Air mass meter, Engine/motor control unit, Exhaust flap control unit	1187
18. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	1188
19. Lambda probe 1 before catalytic converter, Engine/motor control unit	1189
20. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	1190
21. Control unit 3 for NOx sender. Particulate sensor. Engine/motor control unit	1191

22. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	1192
23. Delivery unit for reducing agent metering system, Engine/motor control unit, Injector for reducing agent	1193
24. Water separator sender, Fuel pressure sender, Engine/motor control unit	1194
25. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	1195
26. Exhaust gas recirculation valve 2, Charge pressure control module, Engine/motor control unit	1196
27. Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Charge air temperature sender before charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	1197
28. Temperature and pressure sender for low-pressure fuel system, Exhaust gas temperature sender 4, Temperature sensor 2 for exhaust gas recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit	1198
29. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather, Injector 2 for reducing agent	1199
30. Engine/motor control unit	1200
31. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1201
32. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1202
33. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	1203
34. Fuel gauge sender 2, Data bus diagnostic interface, Dash panel insert	1204
35. Dash panel insert	1205
106 - Anti-lock brake system (ABS) , (L0L)	1206-1214
1. Anti-lock brake system (ABS) , (L0L)	1206
2. ABS control unit, Fuse holder B	1207
3. Brake servo pressure sensor, ABS control unit	1208
4. ABS control unit	1209
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	1210
6. ABS control unit, Left parking brake motor, Right parking brake motor	1211
7. ABS control unit	1212
8. Switch module 2 in centre console	1213
9. Data bus diagnostic interface, Dash panel insert	1214
107 - Anti-lock brake system (ABS) , (L0R)	1215-1224
1. Anti-lock brake system (ABS) , (L0R)	1215
2. ABS control unit, Fuse holder B	1216
3. Brake servo pressure sensor, ABS control unit	1217
4. ABS control unit	1218
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	1219
6. ABS control unit, Left parking brake motor, Right parking brake motor	1220
7. ABS control unit	1221
8. Switch module 2 in centre console	1222
9. Data bus diagnostic interface	1223
10. Data bus diagnostic interface, Dash panel insert	1224
108 - Convenience system , (4H3),(L0L)	1225-1242
1. Convenience system , (4H3),(L0L)	1225
2. Fuse holder A, Fuse holder C	1226
3. Driver door control unit	1227
4. Driver door control unit	1228
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	1229
6. Driver door control unit, Driver door lock unit	1230
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	1231
8. Exterior mirror adjuster, Driver door control unit	1232
9. Driver door control unit, Driver side exterior mirror	1233
10. Front passenger door control unit	1234
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	1235
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	1236
13. Front passenger door control unit, Passenger side exterior mirror	1237
14. Rear left door lock unit	1238

15. Rear driver side window regulator button, Rear left window regulator motor	1239
16. Rear right door lock unit	1240
17. Rear passenger side window regulator button, Rear right window regulator motor	1241
18. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	1242
109 - Convenience system , (4H3),(L0R)	1243-1260
1. Convenience system , (4H3),(L0R)	1243
2. Fuse holder A, Fuse holder C	1244
3. Driver door control unit	1245
4. Driver door control unit	1246
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	1247
6. Driver door control unit, Driver door lock unit	1248
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	1249
8. Exterior mirror adjuster, Driver door control unit	1250
9. Driver door control unit, Driver side exterior mirror	1251
10. Front passenger door control unit	1252
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	1253
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	1254
13. Front passenger door control unit, Passenger side exterior mirror	1255
14. Rear left door lock unit	1256
15. Rear passenger side window regulator button, Rear left window regulator motor	1257
16. Rear right door lock unit	1258
17. Rear driver side window regulator button, Rear right window regulator motor	1259
18. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	1260
110 - Convenience system , (4H5),(L0L)	1261-1280
1. Convenience system , (4H5),(L0L)	1261
2. Fuse holder A, Fuse holder C	1262
3. Driver door control unit	1263
4. Driver door control unit	1264
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	1265
6. Driver door control unit, Driver door lock unit	1266
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	1267
8. Exterior mirror adjuster, Driver door control unit	1268
9. Driver door control unit, Driver side exterior mirror	1269
10. Front passenger door control unit	1270
11. Front passenger side window regulator button, Front passenger door control unit, Front passenger door lock unit	1271
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	1272
13. Front passenger door control unit, Passenger side exterior mirror	1273
14. Rear left door control unit	1274
15. Rear left door control unit, Rear left door lock unit	1275
16. Rear driver side window regulator button, Rear left door control unit, Rear left window regulator motor	1276
17. Rear right door control unit	1277
18. Rear right door control unit, Rear right door lock unit	1278
19. Rear passenger side window regulator button, Rear right door control unit, Rear right window regulator motor	1279
20. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	1280
111 - Convenience system , (4H5),(L0R)	1281-1300
1. Convenience system , (4H5),(L0R)	1281
2. Fuse holder A, Fuse holder C	1282
3. Driver door control unit	1283
4. Driver door control unit	1284
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	1285
6. Driver door control unit, Driver door lock unit	1286
7. Switch module 1 in centre console, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side door warning lamp	1287
8. Exterior mirror adjuster, Driver door control unit	1288
9. Driver door control unit. Driver side exterior mirror	1289

10. Front passenger door control unit	1290
11. Front passenger door control unit, Front passenger door lock unit	1291
12. Front passenger door control unit, Front passenger side window regulator motor, Front passenger side door warning lamp	1292
13. Front passenger door control unit, Passenger side exterior mirror	1293
14. Rear left door control unit	1294
15. Rear left door control unit, Rear left door lock unit	1295
16. Rear passenger side window regulator button, Rear left door control unit, Rear left window regulator motor	1296
17. Rear right door control unit	1297
18. Rear right door control unit, Rear right door lock unit	1298
19. Rear driver side window regulator button, Rear right door control unit, Rear right window regulator motor	1299
20. Rear lid handle release button, Rear lid lock unit, Tank filler flap locking motor	1300
112 - Radio system with digital sound package , (8AR),(9VS),(L0L)	1301-1312
1. Radio system with digital sound package , (8AR),(9VS),(L0L)	1301
2. Fuse holder A, Fuse holder C	1302
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	1303
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	1304
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	1305
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1306
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1307
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	1308
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	1309
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Storage compartment with interface for mobile telephone	1310
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	1311
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	1312
113 - Radio system with digital sound package , (8AR),(9VS),(L0R)	1313-1324
1. Radio system with digital sound package , (8AR),(9VS),(L0R)	1313
2. Fuse holder A, Fuse holder C	1314
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	1315
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	1316
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	1317
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1318
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1319
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	1320
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	1321
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Storage compartment with interface for mobile telephone	1322
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	1323
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	1324
114 - Radio navigation system , (8AR),(8RM),(L0L)	1325-1336
1. Radio navigation system , (8AR),(8RM),(L0L)	1325
2. Fuse holder A, Fuse holder C	1326
3. Data bus diagnostic interface, Control unit 1 for information electronics	1327
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	1328
5. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1329
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1330
7. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Reversing camera	1331
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	1332
9. Control unit 1 for information electronics. Emergency call module control unit and communication	1333

unit, Dash panel insert, Telephone microphone	
10. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	1334
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	1335
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	1336
115 - Radio navigation system , (8AR),(8RM),(L0R)	1337-1348
1. Radio navigation system , (8AR),(8RM),(L0R)	1337
2. Fuse holder A, Fuse holder C	1338
3. Data bus diagnostic interface, Control unit 1 for information electronics	1339
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	1340
5. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1341
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1342
7. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	1343
8. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	1344
9. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Dash panel insert, Telephone microphone	1345
10. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	1346
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	1347
12. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	1348
116 - Radio navigation system with digital sound package , (8AR),(9VS),(L0L)	1349-1361
1. Radio navigation system with digital sound package , (8AR),(9VS),(L0L)	1349
2. Fuse holder A, Fuse holder C	1350
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	1351
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	1352
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	1353
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1354
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1355
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	1356
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	1357
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	1358
11. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	1359
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	1360
13. Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	1361
117 - Radio navigation system with digital sound package , (8AR),(9VS),(L0R)	1362-1374
1. Radio navigation system with digital sound package , (8AR),(9VS),(L0R)	1362
2. Fuse holder A, Fuse holder C	1363
3. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	1364
4. Digital sound package control unit, Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	1365
5. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	1366
6. Digital sound package control unit, Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	1367
7. Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1368
8. Multimedia system operating unit, Control unit 1 for information electronics, Reversing camera	1369
9. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	1370
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	1371
11. Control unit 1 for information electronics, Roof aerial, Storage compartment with interface for mobile telephone	1372
12. Control unit 1 for information electronics, Left aerial module, Right aerial module, Rear window	1373
13. Amplitude modulation (AM) frequency filter. Frequency modulation (FM) frequency filter in	1374

negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window	
118 - Background lighting , (QQ9),(KA0),(KA1),(L0L)	1375-1379
1. Background lighting , (QQ9),(KA0),(KA1),(L0L)	1375
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	1376
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	1377
4. Light for driver door background lighting, Light for passenger door background lighting	1378
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	1379
119 - Background lighting , (QQ9),(KA0),(KA1),(L0R)	1380-1384
1. Background lighting , (QQ9),(KA0),(KA1),(L0R)	1380
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	1381
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	1382
4. Light for driver door background lighting, Light for passenger door background lighting	1383
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	1384
120 - Background lighting , (QQ9),(KA6),(L0L)	1385-1389
1. Background lighting , (QQ9),(KA6),(L0L)	1385
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	1386
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	1387
4. Light for driver door background lighting, Light for passenger door background lighting	1388
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	1389
121 - Background lighting , (QQ9),(KA6),(L0R)	1390-1394
1. Background lighting , (QQ9),(KA6),(L0R)	1390
2. Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Fuse holder A, Fuse holder C	1391
3. Light 3 for dash panel background lighting, Light 4 for dash panel background lighting	1392
4. Light for driver door background lighting, Light for passenger door background lighting	1393
5. Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	1394
122 - Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0L)	1395-1398
1. Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0L)	1395
2. Fuse holder A, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	1396
3. Driver door control unit, Driver side exterior mirror, Automatic anti-dazzle interior mirror	1397
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	1398
123 - Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0R)	1399-1402
1. Automatic anti-dazzle interior and exterior mirrors , (4L5),(4L6),(L0R)	1399
2. Fuse holder A, Fuse holder C, Automatic anti-dazzle interior mirror	1400
3. Driver door control unit, Driver side exterior mirror, Automatic anti-dazzle interior mirror	1401
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	1402
124 - Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0L)	1403-1406
1. Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0L)	1403
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	1404
3. Driver door control unit, Driver side exterior mirror	1405
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	1406
125 - Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0R)	1407-1410
1. Interior mirror with humidity sender and main beam assist , (4L5),(4L6),(L0R)	1407
2. Data bus diagnostic interface, Fuse holder A, Fuse holder C, Front interior light, Automatic anti-dazzle interior mirror	1408
3. Driver door control unit, Driver side exterior mirror	1409
4. Humidity sender, Air humidity, rain and light sensor, Front passenger door control unit, Passenger side exterior mirror	1410
126 - Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0L)	1411-1418
1. Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0L)	1411
2. Fuse holder A, Fuse holder C	1412
3. Heater and air conditioning controls	1413
4. Seat heating (driver side)	1414
5. Seat heating (front passenger side)	1415
6. Switch module in rear centre console. Heated rear seats control unit	1416

7. Heated rear seats control unit, Rear left seat heating, Heated backrest for rear left seat	1417
8. Heated rear seats control unit, Rear right seat heating, Heated backrest for rear right seat	1418
127 - Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0R)	1419-1426
1. Seat heating , (3NZ),(3NU),(9AK),(KH6),(L0R)	1419
2. Fuse holder A, Fuse holder C	1420
3. Heater and air conditioning controls	1421
4. Seat heating (driver side)	1422
5. Seat heating (front passenger side)	1423
6. Switch module in rear centre console, Heated rear seats control unit	1424
7. Heated rear seats control unit, Rear left seat heating, Heated backrest for rear left seat	1425
8. Heated rear seats control unit, Rear right seat heating, Heated backrest for rear right seat	1426
128 - Seat heating , (3NZ),(3NU),(KH7),(L0L)	1427-1434
1. Seat heating , (3NZ),(3NU),(KH7),(L0L)	1427
2. Fuse holder A, Fuse holder C	1428
3. Heater and air conditioning controls	1429
4. Seat heating (driver side)	1430
5. Seat heating (front passenger side)	1431
6. Operating and display unit for rear air conditioning system	1432
7. Operating and display unit for rear air conditioning system, Rear left seat heating, Heated backrest for rear left seat	1433
8. Operating and display unit for rear air conditioning system, Rear right seat heating, Heated backrest for rear right seat	1434
129 - Seat heating , (3NZ),(3NU),(KH7),(L0R)	1435-1442
1. Seat heating , (3NZ),(3NU),(KH7),(L0R)	1435
2. Fuse holder A, Fuse holder C	1436
3. Heater and air conditioning controls	1437
4. Seat heating (driver side)	1438
5. Seat heating (front passenger side)	1439
6. Operating and display unit for rear air conditioning system	1440
7. Operating and display unit for rear air conditioning system, Rear left seat heating, Heated backrest for rear left seat	1441
8. Operating and display unit for rear air conditioning system, Rear right seat heating, Heated backrest for rear right seat	1442
130 - Seat heating , (5KP),(9AK),(KH6),(L0L)	1443-1451
1. Seat heating , (5KP),(9AK),(KH6),(L0L)	1443
2. Fuse holder A, Fuse holder C	1444
3. Heater and air conditioning controls	1445
4. Seat heating (driver side)	1446
5. Seat heating (front passenger side)	1447
6. Switch module in rear centre console, Heated rear seats control unit	1448
7. Heated rear seats control unit	1449
8. Rear left seat heating, Heated backrest for rear left seat	1450
9. Rear right seat heating, Heated backrest for rear right seat	1451
131 - Seat heating , (5KP),(9AK),(KH6),(L0R)	1452-1460
1. Seat heating , (5KP),(9AK),(KH6),(L0R)	1452
2. Fuse holder A, Fuse holder C	1453
3. Heater and air conditioning controls	1454
4. Seat heating (driver side)	1455
5. Seat heating (front passenger side)	1456
6. Switch module in rear centre console, Heated rear seats control unit	1457
7. Heated rear seats control unit	1458
8. Rear left seat heating, Heated backrest for rear left seat	1459
9. Rear right seat heating, Heated backrest for rear right seat	1460
132 - Seat heating , (5KP),(KH7),(L0L)	1461-1469
1. Seat heating , (5KP),(KH7),(L0L)	1461
2. Fuse holder A, Fuse holder C	1462
3. Heater and air conditioning controls	1463
4. Seat heating (driver side)	1464
5. Seat heating (front passenger side)	1465
6. Operating and display unit for rear air conditioning system	1466
7. Operating and display unit for rear air conditioning system	1467
8. Rear left seat heating, Heated backrest for rear left seat	1468
9. Rear right seat heating, Heated backrest for rear right seat	1469
133 - Seat heating , (5KP),(KH7),(L0R)	1470-1478
1. Seat heating , (5KP),(KH7),(L0R)	1470
2. Fuse holder A, Fuse holder C	1471

3. Heater and air conditioning controls	1472
4. Seat heating (driver side)	1473
5. Seat heating (front passenger side)	1474
6. Operating and display unit for rear air conditioning system	1475
7. Operating and display unit for rear air conditioning system	1476
8. Rear left seat heating, Heated backrest for rear left seat	1477
9. Rear right seat heating, Heated backrest for rear right seat	1478
134 - Adaptive cruise control , (6K2),(6K3),(6K4)	1479-1483
1. Adaptive cruise control , (6K2),(6K3),(6K4)	1479
2. Control unit for cornering light and headlight range control, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	1480
3. Adaptive cruise control unit	1481
4. Steering column combination switch, Steering column electronics control unit	1482
5. Steering column electronics control unit, Data bus diagnostic interface	1483
135 - Front camera for driver assist systems , (QK1)	1484-1486
1. Front camera for driver assist systems , (QK1)	1484
2. Control unit for cornering light and headlight range control, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	1485
3. Adaptive cruise control unit, Data bus diagnostic interface	1486
136 - Overhead view camera , (KA6),(L0L)	1487-1490
1. Overhead view camera , (KA6),(L0L)	1487
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse holder A, Fuse holder C	1488
3. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera, Front overhead view camera	1489
4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	1490
137 - Overhead view camera , (KA6),(L0R)	1491-1494
1. Overhead view camera , (KA6),(L0R)	1491
2. Data bus diagnostic interface, Control unit for overhead view camera, Fuse holder A, Fuse holder C	1492
3. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera, Front overhead view camera	1493
4. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	1494
138 - Adaptive chassis control DCC , (2H4)	1495-1499
1. Adaptive chassis control DCC , (2H4)	1495
2. Electronically controlled damping control unit, Fuse holder A, Fuse holder C	1496
3. Switch module 2 in centre console, Front left vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface, Front left shock absorber damping adjustment valve	1497
4. Front right vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	1498
5. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit	1499
139 - Data bus network , (L0L)	1500-1517
1. Data bus network , (L0L)	1500
2. Data bus diagnostic interface, Dash panel insert, Diagnostic connection	1501
3. Driver door control unit, Data bus diagnostic interface	1502
4. Front passenger door control unit, Data bus diagnostic interface	1503
5. Heater and air conditioning controls, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	1504
6. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Front passenger seat adjustment control unit, Driver seat adjustment control unit	1505
7. Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit	1506
8. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Main beam assist control unit	1507
9. Adaptive cruise control unit, Data bus diagnostic interface, Blind Spot Monitor control unit, Front camera for driver assist systems	1508
10. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	1509
11. Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	1510
12. Data bus diagnostic interface, Auxiliary hydraulic pump 1 for gearbox oil	1511
13. Airbag control unit, Data bus diagnostic interface, Selector lever sensors control unit	1512
14. Power steering control unit. Data bus diagnostic interface	1513

15. ABS control unit, Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	1514
16. All-wheel drive control unit, Data bus diagnostic interface	1515
17. Auxiliary heater control unit, Data bus diagnostic interface, Control unit 1 for information electronics	1516
18. Digital sound package control unit, Data bus diagnostic interface	1517
140 - Data bus network , (L0R)	1518-1533
1. Data bus network , (L0R)	1518
2. Data bus diagnostic interface, Dash panel insert, Diagnostic connection	1519
3. Driver door control unit, Data bus diagnostic interface	1520
4. Front passenger door control unit, Data bus diagnostic interface	1521
5. Heater and air conditioning controls, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	1522
6. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Front passenger seat adjustment control unit, Driver seat adjustment control unit	1523
7. Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit	1524
8. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Main beam assist control unit	1525
9. Adaptive cruise control unit, Data bus diagnostic interface, Blind Spot Monitor control unit, Front camera for driver assist systems	1526
10. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	1527
11. Data bus diagnostic interface, Engine/motor control unit, Auxiliary hydraulic pump 1 for gearbox oil	1528
12. Airbag control unit, Data bus diagnostic interface, Selector lever sensors control unit	1529
13. Power steering control unit, Data bus diagnostic interface	1530
14. ABS control unit, Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface	1531
15. All-wheel drive control unit, Data bus diagnostic interface	1532
16. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	1533
141 - 2.0l diesel engine with start/stop system , DTRB,DTRD,DTTA,DTTC,(7L6)	1534-1568
1. 2.0l diesel engine with start/stop system , DTRB,DTRD,DTTA,DTTC,(7L6)	1534
2. Battery, Starter, Battery monitor control unit, Fuse holder B	1535
3. Alternator with voltage regulator, Fuse holder A, Fuse holder B	1536
4. Main relay, Engine/motor control unit, Fuse holder B	1537
5. Engine/motor control unit, Fuse holder B	1538
6. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	1539
7. Automatic glow period control unit, Engine/motor control unit, Fuse holder B	1540
8. Engine/motor control unit, Fuse holder C	1541
9. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	1542
10. Brake light switch, Clutch position sender, Engine/motor control unit	1543
11. Accelerator pedal module, Engine/motor control unit	1544
12. Engine/motor control unit	1545
13. Engine speed sender, Hall sender, Engine/motor control unit	1546
14. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	1547
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1548
16. Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit	1549
17. Air mass meter, Engine/motor control unit, Exhaust flap control unit	1550
18. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	1551
19. Lambda probe 1 before catalytic converter, Engine/motor control unit	1552
20. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	1553
21. Control unit 3 for NOx sender, Particulate sensor, Engine/motor control unit, Injector for reducing agent	1554
22. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	1555
23. Delivery unit for reducing agent metering system, Engine/motor control unit	1556
24. Water separator sender, Fuel pressure sender, Engine/motor control unit	1557
25. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	1558
26. Exhaust gas recirculation valve 2. Charge pressure control module. Engine/motor control unit	1559

27. Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Charge air temperature sender before charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	1560
28. Temperature and pressure sender for low-pressure fuel system, Exhaust gas temperature sender 4, Temperature sensor 2 for exhaust gas recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit	1561
29. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase breather, Injector 2 for reducing agent	1562
30. Engine/motor control unit	1563
31. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1564
32. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1565
33. Switch module 1 in centre console, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	1566
34. Fuel gauge sender 2, Data bus diagnostic interface, Dash panel insert	1567
35. Dash panel insert	1568
801 - -Fitting locations: Earth points - 3	1569-1575
1. Earth points	1569-1575
1.1 Earth points in the front part of the vehicle	1569
1.1.1 Front from the left	1569
1.2 Earth points in the middle part of the vehicle	1570-1572
1.2.1 Interior front left	1571
1.2.2 Interior front right	1571
1.2.3 Interior front centre	1572
1.3 Control units in the rear part of the vehicle	1573
1.3.1 Luggage compartment on the left	1573
1.4 Earth points on the roof	1574-1575
1.4.1 Earth points on the roof	1574-1575
802 - -Fitting locations: Fuses - 3	1576-1595
1. Fuses	1576-1595
1.1 Fuse holder C -SC-, as of February 2022	1576-1584
1.1.1 Fitting position Fuse holder C -SC-, Left-hand drive	1576
1.1.2 Fitting position Fuse holder C -SC-, right-hand drive	1577
1.1.3 Fuse assignment Fuse holder C -SC-, from February 2022	1578-1580
1.1.4 Fuse assignment Fuse holder C -SC-, as of June 2022	1581-1584
1.2 Fuse holder B -SB-, as of February 2022	1585-1589
1.2.1 Fitting position Fuse holder B -SB-, as of February 2022	1585
1.2.2 Fuse assignment Fuse holder B -SB-, from February 2022	1586-1587
1.2.3 Fuse assignment Fuse holder B -SB-, from June 2022	1588-1589
1.3 Fuse holder A -SA-, as of February 2022	1590-1591
1.3.1 Fitting position Fuse holder A -SA-, as of February 2022	1590-1591
1.3.2 Fuse assignment Fuse holder A -SA-, from February 2022	1592
1.4 Fuse holder D -SD-, as of February 2022	1592-1595
1.4.1 Installation Fuse holder D -SD-, Left-hand drive	1592
1.4.2 Fuse assignment Fuse holder D -SD-, left-hand drive	1593
1.4.3 Fitting position Fuse holder D -SD-, right-hand drive	1594
1.4.4 Fuse assignment Fuse holder D -SD-, right-hand drive	1595
803 - -Fitting locations: Relay - 3	1596-1600
1. Relay	1596-1600
1.1 Relay on fuse holder C -SC-, under the dash panel on the left	1597-1598
1.1.1 Fitting position and relay position assignment, relay on fuse holder C -SC-, LHD from February 2022	1597
1.1.2 Fitting position and relay position assignment, relay on fuse holder C -SC-, RHD from February 2022	1598
1.2 Relay on fuse holder B -SB-	1599-1600
1.2.1 Fitting position and relay position, relay on fuse holder B -SB-, from February 2022	1599-1600
804 - - Fitting positions: front part of the vehicle - 3	1601-1638
1. Fitting positions: front part of the vehicle	1601-1638
1.1 Front, front view	1614
1.2 Front, left view	1615
1.3 Front, right view	1616
1.4 1.5 l petrol engine, DPCA	1617-1620
1.4.1 1.5 l petrol engine, DPCA, from the front	1618
1.4.2 1.5 l petrol engine, DPCA, from above	1618
1.4.3 1.5 l petrol engine. DPCA. from the right	1619

1.4.4 1.5 l petrol engine, DPCA, from behind	1620
1.5 1.4 l petrol engine, DJKA	1621-1623
1.5.1 1.4-litre petrol engine, DJKA, from the front	1622
1.5.2 1.4 l petrol engine, DJKA, from above	1622
1.5.3 1.4-litre petrol engine, DJKA, from the front	1623
1.6 1.0 l petrol engine, DLAA	1624-1626
1.6.1 1.0-litre petrol engine, DLAA, from the front	1625
1.6.2 1.0 l petrol engine, DLAA, from above	1625
1.6.3 1.0-litre petrol engine, DLAA, from the back	1626
1.7 1.6 l petrol engine, DWYA	1627-1630
1.7.1 1.6 litre petrol engine, DWYA, from the front	1628
1.7.2 1.6 l petrol engine, DWYA, from above	1628
1.7.3 1.6 litre petrol engine, DWYA, from the left	1629
1.7.4 1.6 litre petrol engine, DWYA, from behind	1630
1.8 2.0 l petrol engine, DNNA	1631-1634
1.8.1 2.0-litre petrol engine, DNNA, from the front	1632
1.8.2 2.0 l petrol engine, DNNA, from above	1632
1.8.3 2.0 l petrol engine, DNNA, from the right	1633
1.8.4 2.0-litre petrol engine, DNNA, from the back	1634
1.9 2.0 l diesel engine, DTRB, DTRD, DTTA, DTTC	1635-1638
1.9.1 2.0 l diesel engine, DTRB, DTRD, DTTA, DTTC, from the front	1636
1.9.2 2.0 l diesel engine, DTRB, DTRD, DTTA, DTTC, from above	1636
1.9.3 2.0 l diesel engine, DTRB, DTRD, DTTA, DTTC, from behind	1637-1638
805 - - Fitting positions: middle part of the vehicle - 3	1639-1685
1. Fitting positions: middle part of the vehicle	1639-1685
1.1 Roof	1650-1652
1.1.1 Roof, part 1	1650
1.1.2 Roof, part 2	1651
1.1.3 Roof, sliding/tilting sunroof	1652
1.2 Doors	1653-1661
1.2.1 Driver door, left-hand drive	1654-1655
1.2.2 Driver's door, right-hand drive	1656
1.2.3 Passenger door, left-hand drive	1657-1658
1.2.4 Passenger door, right hand drive	1659
1.2.5 Rear left door	1660
1.2.6 Rear right door	1661
1.3 Seats	1662
1.3.1 Left front seat	1662
1.4 Steering wheel and steering column	1663
1.4.1 Steering column	1663
1.5 Front interior	1664-1677
1.5.1 Interior front left, left-hand drive	1665-1666
1.5.2 Interior front left, right-hand drive	1667
1.5.3 Interior front right, left-hand drive	1668-1669
1.5.4 Interior front right, right-hand drive	1670
1.5.5 Dash panel, left-hand drive	1671-1672
1.5.6 Dash panel, right-hand drive	1673
1.5.7 Left footwell, left-hand drive	1673-1674
1.5.8 Right footwell, right-hand drive	1675
1.5.9 Centre console in front, left-hand drive	1676
1.5.10 Centre console in front, right-hand drive	1677
1.6 Rear interior	1678-1679
1.6.1 Rear left interior	1679
1.6.2 Rear right interior	1679
1.7 Heating and air conditioning unit	1680-1685
1.7.1 Air conditioning, KH6, part 1	1681
1.7.2 Air conditioning, KH6, part 2	1682
1.7.3 Climatronic, 9AK, part 1	1683
1.7.4 Climatronic, 9AK, part 2	1684-1685
806 - - Fitting positions: rear part of the vehicle - 3	1686-1691
1. Fitting positions: rear part of the vehicle	1686-1691
1.1 Tailgate	1687
1.2 Rear bumper	1688
1.3 Rear side, right view	1689
1.4 Rear side, left view	1690-1691
807 - - Fitting locations: Underbody of the vehicle - 3	1692-1693

1. Fitting positions: Underbody of the vehicle	1692-1693
1.1 Underbody, part 1	1692
1.2 Underbody, part 2	1693
830 - -Plug views: Parts with prefix A to D - 3	1694-1696
1. Plug views: Parts with prefix A to D	1694-1696
1.1 Starter -B-	1694
1.1.1 Connector -T1on-	1694
1.2 Alternator with voltage regulator -CX1-	1694
1.2.1 Connector -T2abn-	1694
1.3 Immobilizer reading coil -D2-	1695
1.3.1 Connector -T2h-	1695
1.4 Ignition starting switch -D-	1695-1696
1.4.1 Connector -T6l-	1695-1696
831 - -Plug views: Parts with prefix E - 3	1697-1715
1. Plug views: Parts with prefix E	1697-1715
1.1 Rotary light switch -EX1-	1698
1.1.1 Connector -T10v-	1698
1.2 Driver door external door handle -EX6-	1698
1.2.1 Connector -T4cq-	1698
1.3 Passenger door external door handle -EX7-	1699
1.3.1 Connector -T4ct-	1699
1.4 Centre console switch module 1 -EX23-	1699
1.4.1 Connector -T10ag-	1699
1.4.2 Connector -T10y-	1700
1.5 Button for starting system -E378-	1700
1.5.1 Connector -T4o-	1700
1.6 Key switch for deactivating the passenger side airbag -E224-	1701
1.6.1 Connector -T6p-	1701
1.7 Switch module for rear centre console -EX24-	1701
1.7.1 Connector -T10ac-	1701
1.8 Centre console switch module 2 -EX30-	1702
1.8.1 Connector -T16a-	1702
1.9 Emergency call button -E276-	1702
1.9.1 Connector -T6r-	1702
1.10 Pushbutton for towbar that can be electrically swivelled -E474-	1703
1.10.1 Connector -T4p-	1703
1.11 Exterior mirror adjustment -EX11-	1703
1.11.1 Connector -T6z-	1703
1.12 Operating unit for window regulators in driver door -EX36-	1704
1.12.1 Connector -T10u-	1704
1.13 Button for front passenger window -E716-	1704
1.13.1 Connector -T4m-	1704
1.14 Button for sunroof -E325-	1705
1.14.1 Connector -T5bk-	1705
1.15 Button 1 for roof blind -E584-	1705
1.15.1 Connector -T4cv-	1705
1.16 Passenger side belt switch -E25-	1706
1.16.1 Connector -T2m-	1706
1.17 Centre left belt switch, 2. Row -E719-	1706
1.17.1 Connector -T2j-	1706
1.18 Centre right belt switch, 2. Row -E720-	1707
1.18.1 Connector -T2k-	1707
1.19 Button for driver side rear window -E711-	1707
1.19.1 Connector -T4q-	1707
1.20 Button for passenger side rear window -E713-	1708
1.20.1 Connector -T4r-	1708
1.21 Button for closing the tailgate in the boot -E406-	1708
1.21.1 Connector -T4s-	1708
1.22 Driver s side belt switch -E24-	1709
1.22.1 Connector -T2n-	1709
1.23 Operating unit for front left seat adjustment -EX33-	1709
1.23.1 Connector -T12a-	1709
1.24 Operating unit for front right seat adjustment -EX34-	1710
1.24.1 Connector -T12b-	1710
1.25 Operating unit 2 for front left seat adjustment -EX38-	1710
1.25.1 Connector -T6w-	1710

1.26 Operating unit 2 for front right seat adjustment -EX39-	1711
1.26.1 Connector -T6y-	1711
1.27 Switch for adjusting the driver's seat lumbar support -E176-	1711
1.27.1 Connector -T6t-	1711
1.28 Heating / air conditioning operation -EX21-	1712-1713
1.28.1 Connector -T20b-	1712
1.28.2 Connector -T16k-	1712
1.28.3 Connector -T16l-	1713
1.28.4 Connector -T16q-	1713
1.29 Switch for tailgate remote unlocking -E188-	1714
1.29.1 Connector -T4n-	1714
1.30 Button for unlocking in tailgate handle -E234-	1714
1.30.1 Connector -T2i-	1714
1.31 Switch for adjusting the driver's seat lumbar support -E177-	1715
1.31.1 Connector -T6u-	1715
832 - -Plug views: Parts with prefix F - 3	1716-1724
1. Plug views: Parts with prefix F	1716-1724
1.1 Belt switch, right, 2nd Row -F487-	1716
1.1.1 Connector -T2ae-	1716
1.1.2 Connector -T2hn-	1717
1.2 Left belt switch, 2. Row -F488-	1717
1.2.1 Connector -T2hm-	1717
1.3 Brake light switch -F-	1717
1.3.1 Connector -T4t-	1717
1.4 Oil pressure switch -F1-	1718
1.4.1 Connector -T2o-	1718
1.4.2 Connector -T1oo-	1718
1.4.3 Connector -T1op-	1719
1.5 Switch for reversing lights -F4-	1719
1.5.1 Connector -T2ac-	1719
1.6 Warning contact for brake fluid level -F34-	1720
1.6.1 Connector -T2s-	1720
1.7 Contact switch for driver s side make-up mirror -F147-	1720
1.7.1 Connector -T2q-	1720
1.8 Contact switch for passenger side make-up mirror -F148-	1721
1.8.1 Connector -T2r-	1721
1.9 Contact switch for engine hood -F266-	1721
1.9.1 Connector -T2p-	1721
1.10 Oil pressure switch for reduced oil pressure -F378-	1722
1.10.1 Connector -T2ab-	1722
1.10.2 Connector -T1or-	1722
1.11 Double belt lock -FX4-	1723
1.11.1 Connector -T4u-	1723
1.12 Coil -F350-	1723-1724
1.12.1 Connector -T12j-	1723-1724
833 - -Plug views: Parts with prefix G - 3	1725-1769
1. Plug views: Parts with prefix G	1725-1769
1.1 Light detection sensor -G399-	1727
1.1.1 Connector -T6aa-	1727
1.2 Fuel delivery unit -GX1-	1727-1729
1.2.1 Connector -T2bq-	1728
1.2.2 Connector -T3cr-	1728
1.2.3 Connector -T4ad-	1728
1.2.4 Connector -T5m-	1729
1.2.5 Connector -T6bh-	1729
1.3 Fuel level encoder 2 -G169-	1730
1.3.1 Connector -T3af-	1730
1.4 Sensor for humidity, rain and light detection -G823- / Air humidity encoder -G355-	1730
1.4.1 Connector -T3al-	1730
1.5 Rear left vehicle level encoder -G76-	1731
1.5.1 Connector -T4aa-	1731
1.6 Pressure encoder for refrigerant circuit -G805-	1731
1.6.1 Connector -T3h-	1731
1.7 Sensor for air quality -G238-	1732
1.7.1 Connector -T3t-	1732
1.8 Gearbox neutral position encoder -G701-	1732

1.8.1 Connector -T3ba-	1732
1.9 Exhaust temperature sensor 3 -G495-	1733
1.9.1 Connector -T2bd-	1733
1.10 Exhaust temperature sensor 2 -G448-	1733
1.10.1 Connector -T2az-	1733
1.11 Exhaust temperature sensor 4 -G648-	1734
1.11.1 Connector -T2bi-	1734
1.12 Throttle valve control unit 2 -GX4-	1734
1.12.1 Connector -T3ax-	1734
1.13 Lambda probe 1 before catalytic converter -GX10-	1735-1736
1.13.1 Connector -T4ae-	1735
1.13.2 Connector -T5n-	1735
1.13.3 Connector -T6ab-	1736
1.13.4 Connector -T6ac-	1736
1.14 Air flow meter -G70-	1737
1.14.1 Connector -T3az-	1737
1.14.2 Connector -T4ah-	1737
1.15 Pressure sensor for brake booster -G294-	1738
1.15.1 Connector -T3ag-	1738
1.16 Lambda probe 1 after catalytic converter -GX7-	1738
1.16.1 Connector -T4aj-	1738
1.17 Accelerator pedal module -GX2-	1739
1.17.1 Connector -T6ad-	1739
1.18 Clutch position encoder -G476-	1739
1.18.1 Connector -T5l-	1739
1.19 Encoder for front right brake lining/pad wear encoder -G35-	1740
1.19.1 Connector -T2au-	1740
1.20 Conveying unit for reduction agent dosing system -GX19-	1740
1.20.1 Connector -T4bs-	1740
1.20.2 Connector -T5o-	1741
1.21 Encoder for front centre right parking aid -G253-	1741
1.21.1 Connector -T3x-	1741
1.22 Encoder for front centre left parking aid -G254-	1742
1.22.1 Connector -T3y-	1742
1.23 Encoder for front left parking aid -G255-	1742
1.23.1 Connector -T3z-	1742
1.24 Front left encoder for Park Assist, left vehicle side -G568-	1743
1.24.1 Connector -T3bd-	1743
1.25 Front right encoder for Park Assist, right vehicle side -G569-	1743
1.25.1 Connector -T3be-	1743
1.26 Encoder for rear left parking aid -G203-	1744
1.26.1 Connector -T3o-	1744
1.27 Encoder for rear centre left parking aid -G204-	1744
1.27.1 Connector -T3p-	1744
1.28 Encoder for rear centre right parking aid -G205-	1745
1.28.1 Connector -T3q-	1745
1.29 Encoder for rear right parking aid -G206-	1745
1.29.1 Connector -T3r-	1745
1.30 Rear left park steering assistant encoder -G716-	1746
1.30.1 Connector -T3bf-	1746
1.31 Rear right encoder for park steering assistant -G717-	1746
1.31.1 Connector -T3bg-	1746
1.32 Oil level and oil temperature sensor -G266-	1747
1.32.1 Connector -T3ab-	1747
1.32.2 Connector -T3aa-	1747
1.32.3 Connector -T3ac-	1748
1.33 Throttle valve control unit -GX3-	1748-1750
1.33.1 Connector -T5p-	1748
1.33.2 Connector -T5q-	1749
1.33.3 Connector -T6ae-	1749
1.33.4 Connector -T6af-	1750
1.33.5 Connector -T6aj-	1750
1.34 Exhaust gas recirculation valve 1 -GX5-	1751
1.34.1 Connector -T6ai-	1751
1.35 Exhaust gas recirculation valve 2 -GX6-	1751
1.35.1 Connector -T5u-	1751

1.36 Engine speed encoder -G28-	1752
1.36.1 Connector -T3ad-	1752
1.36.2 Connector -T3ae-	1752
1.37 Charge pressure sensor -GX26-	1753
1.37.1 Connector -T4ag-	1753
1.37.2 Connector -T3ah-	1753
1.38 Charge pressure sensor -G31-	1754
1.38.1 Connector -T3ai-	1754
1.39 Signal encoder -G40-	1754-1755
1.39.1 Connector -T3j-	1754
1.39.2 Connector -T3an-	1755
1.39.3 Connector -T3ao-	1755
1.40 Exhaust temperature sensor 1 -G235-	1756
1.40.1 Connector -T2al-	1756
1.40.2 Connector -T2am-	1756
1.41 Fuel pressure encoder -G247-	1757
1.41.1 Connector -T3u-	1757
1.41.2 Connector -T3v-	1757
1.42 Differential pressure encoder -G505-	1758
1.42.1 Connector -T3aq-	1758
1.43 Passenger side seat occupancy sensor -G128-	1758
1.43.1 Connector -T2ag-	1758
1.44 Signal encoder 3 -G300-	1759
1.44.1 Connector -T3n-	1759
1.45 Oil pressure encoder -G10-	1759
1.45.1 Connector -T3i-	1759
1.46 Suction pipe encoder -GX9-	1760
1.46.1 Connector -T3bb-	1760
1.46.2 Connector -T4ak-	1760
1.46.3 Connector -T4z-	1761
1.47 Module for charge pressure control -GX34-	1761-1762
1.47.1 Connector -T6ag-	1761
1.47.2 Connector -T6ah-	1762
1.47.3 Connector -T6ar-	1762
1.48 Pressure sensor 1 for exhaust gas -G450-	1763
1.48.1 Connector -T3ar-	1763
1.49 Position sensor for exhaust camshaft -G1003-	1763
1.49.1 Connector -T3l-	1763
1.50 Position sensor for intake camshaft -G1002-	1764
1.50.1 Connector -T3k-	1764
1.51 Module for engine temperature control -GX33-	1764
1.51.1 Connector -T5r-	1764
1.52 Encoder for front right parking aid -G252-	1765
1.52.1 Connector -T3w-	1765
1.53 Sensor for anti-theft alarm system -G578-	1765
1.53.1 Connector -T4y-	1765
1.54 Pressure sensor for air purge of the activated carbon filter -GX44-	1766
1.54.1 Connector -T4ai-	1766
1.54.2 Connector -T4ce-	1766
1.55 Driver side crash sensor for side airbag -G179-	1767
1.55.1 Connector -T2br-	1767
1.56 Passenger side crash sensor for side airbag -G180-	1767
1.56.1 Connector -T2bs-	1767
1.57 Driver s side rear crash sensor for side airbag -G256-	1768
1.57.1 Connector -T2bt-	1768
1.58 Rear passenger side crash sensor for side airbag -G257-	1768
1.58.1 Connector -T2bu-	1768
1.59 NOx sensor control 3 unit -GX50-	1769
1.59.1 Connector -T5x-	1769
834 - -Plug views: Parts with prefix H to I - 3	1770-1772
1. Plug views: Parts with prefix H to I	1770-1772
1.1 Anti-theft alarm system horn -H8-	1770
1.1.1 Connector -T3bh-	1770
1.2 Warning number for tailgate -H32-	1770
1.2.1 Connector -T2bx-	1770
1.3 High tone horn -H2-	1771

1.3.1 Connector -T2bw-	1771
1.4 Low tone horn -H7-	1771-1772
1.4.1 Connector -T2by-	1771-1772
835 - -Plug views: Parts with prefix J - 3	1773-1825
1. Plug views: Parts with prefix J	1773-1825
1.1 Vehicle voltage control unit -J519-	1774-1775
1.1.1 Connector -T46b-	1774
1.1.2 Connector -T73a-	1775
1.1.3 Connector -T73b-	1775
1.2 Steering column electronics control unit -J527-	1776
1.2.1 Connector -T14t-	1776
1.2.2 Connector -T16e-	1776
1.3 Fresh air blower control unit -J126-	1777
1.3.1 Connector -T4al-	1777
1.4 Control unit for IT 1 -J794-	1777-1781
1.4.1 Connector -T12g-	1778
1.4.2 Connector -T12h-	1778
1.4.3 Connector -T12i-	1778
1.4.4 Connector -T5ay-	1779
1.4.5 Connector -T5ax-	1779
1.4.6 Connector -T8ab-	1780
1.4.7 Connector -T8aj-	1780
1.4.8 Connector -T4by-	1781
1.4.9 Connector -T2hi-	1781
1.5 Parking aid control unit -J446-	1782
1.5.1 Connector -T18b-	1782
1.5.2 Connector -T26a-	1782
1.6 Display unit for display and operating control unit, information at the front -J685-	1783
1.6.1 Connector -T12f-	1783
1.6.2 Connector -T5aq-	1783
1.7 Interface for entry and start system -J965-	1784
1.7.1 Connector -T40a-	1784
1.8 Control unit for emergency call module and communication unit -J949-	1784-1785
1.8.1 Connector -T2gy-	1784
1.8.2 Connector -T36a-	1785
1.8.3 Connector -T4bw-	1785
1.9 Airbag control unit -J234-	1786
1.9.1 Connector -T90c-	1786
1.10 Electronic steering column lock control unit -J764-	1786
1.10.1 Connector -T4ar-	1786
1.11 Data bus on board diagnostic interface -J533-	1787
1.11.1 Connector -T20e-	1787
1.12 Front left tensioner igniter control unit -J854-	1787
1.12.1 Connector -T5am-	1787
1.13 Control unit for selector lever sensors -J587-	1788
1.13.1 Connector -T10w-	1788
1.14 Heated rear seat control unit -J786-	1788
1.14.1 Connector -T16h-	1788
1.15 Control unit for fuel pump -J538-	1789
1.15.1 Connector -T5v-	1789
1.15.2 Connector -T6aq-	1789
1.16 Digital sound package control unit -J525-	1790
1.16.1 Connector -T38a-	1790
1.16.2 Connector -T9a-	1790
1.17 Trailer detector control unit -J345-	1791-1792
1.17.1 Connector -T10ah-	1791
1.17.2 Connector -T10ai-	1791
1.17.3 Connector -T24a-	1792
1.17.4 Connector -T6bi-	1792
1.18 Control unit for tailgate -J605-	1793
1.18.1 Connector -T10x-	1793
1.18.2 Connector -T32c-	1793
1.19 2-way amplifier for mobile service -J984-	1794
1.19.1 Connector -T4bx-	1794
1.19.2 Connector -T2cf-	1794
1.19.3 Connector -T2az-	1795

1.20 Control unit 2 for blind spot detection -J1087-	1795
1.20.1 Connector -T8x-	1795
1.21 Control unit for blind spot detection -J1086-	1796
1.21.1 Connector -T8y-	1796
1.22 Exhaust flap control unit -J883-	1796
1.22.1 Connector -T5y-	1796
1.23 Engine control unit -J623-	1797-1798
1.23.1 Connector -T91a-	1797
1.23.2 Connector -T94a-	1797
1.23.3 Connector -T60a-	1798
1.23.4 Connector -T105a-	1798
1.24 Additional heater control unit -J364-	1799
1.24.1 Connector -T2gw-	1799
1.24.2 Connector -T6ak-	1799
1.25 Control unit for ABS -J104-	1800
1.25.1 Connector -T46a-	1800
1.26 Control unit for NOx sensor -J583-	1800
1.26.1 Connector -T5w-	1800
1.27 Control unit for battery monitoring -J367-	1801
1.27.1 Connector -T2hg-	1801
1.28 Control unit for cornering light and headlight range control -J745-	1801
1.28.1 Connector -T20d-	1801
1.29 Mechatronics for double clutch gearboxes -J743-	1802
1.29.1 Connector -T16g-	1802
1.29.2 Connector -T25a-	1802
1.29.3 Connector -T20c-	1803
1.30 Control unit for NOx encoder 2 -J881-	1803
1.30.1 Connector -T5s-	1803
1.31 Driver's side door control unit -J386-	1804-1805
1.31.1 Connector -T16r-	1804
1.31.2 Connector -T20g-	1804
1.31.3 Connector -T32d-	1805
1.31.4 Connector -T6al-	1805
1.32 Passenger side door control unit -J387-	1806-1807
1.32.1 Connector -T16s-	1806
1.32.2 Connector -T20h-	1806
1.32.3 Connector -T32e-	1807
1.32.4 Connector -T6am-	1807
1.33 Driver seat adjustment control unit -J810-	1808-1809
1.33.1 Connector -T10ak-	1808
1.33.2 Connector -T12d-	1808
1.33.3 Connector -T16n-	1809
1.33.4 Connector -T32b-	1809
1.34 Sliding sunroof control unit -J245-	1810
1.34.1 Connector -T16t-	1810
1.34.2 Connector -T4cu-	1810
1.34.3 Connector -T5az-	1811
1.35 Control unit for reduction agent heater -J891-	1811
1.35.1 Connector -T4an-	1811
1.35.2 Connector -T5al-	1812
1.36 Door control unit, rear left -J388-	1812-1813
1.36.1 Connector -T20i-	1812
1.36.2 Connector -T6an-	1813
1.36.3 Connector -T16o-	1813
1.37 Rear right door control unit -J389-	1814
1.37.1 Connector -T20j-	1814
1.37.2 Connector -T6ao-	1814
1.37.3 Connector -T16p-	1815
1.38 Power steering control unit -J500-	1815
1.38.1 Connector -T2bz-	1815
1.38.2 Connector -T3cs-	1816
1.39 Control unit for tailgate opening -J938-	1816
1.39.1 Connector -T4bf-	1816
1.39.2 Connector -T4cn-	1817
1.40 Control unit for clearance control -J428-	1817
1.40.1 Connector -T7a-	1817

1.41 Four-wheel drive control unit -J492-	1818
1.41.1 Connector -T6ap-	1818
1.42 Control unit for electronically controlled damping -J250-	1818
1.42.1 Connector -T47a-	1818
1.43 Control unit for structure-borne noise -J869-	1819
1.43.1 Connector -T6as-	1819
1.44 Environment camera control unit -J928-	1819-1821
1.44.1 Connector -T2gx-	1820
1.44.2 Connector -T5av-	1820
1.44.3 Connector -T5ar-	1820
1.44.4 Connector -T5at-	1821
1.44.5 Connector -T5aw-	1821
1.44.6 Connector -T18c-	1822
1.45 Automatic gearbox control unit -J217-	1822
1.45.1 Connector -T81a-	1822
1.46 Front passenger seat adjustment control unit -J720-	1823-1825
1.46.1 Connector -T32a-	1823
1.46.2 Connector -T12c-	1823
1.46.3 Connector -T10aj-	1824
1.46.4 Connector -T16m-	1824-1825
836 - -Plug views: Parts with prefix K to M - 3	1826-1832
1. Plug views: Parts with prefix K to M	1826-1832
1.1 Dash panel insert -KX2-	1826
1.1.1 Connector -T18a-	1826
1.2 Lamp 4 for control panel ambient lighting -L295-	1827
1.2.1 Connector -T3bn-	1827
1.3 Lamp 3 for control panel ambient lighting -L294-	1827
1.3.1 Connector -T3bm-	1827
1.4 Lamp 1 for control panel ambient lighting -L292-	1828
1.4.1 Connector -T3bk-	1828
1.5 Lamp 2 for control panel ambient lighting -L293-	1828
1.5.1 Connector -T3bl-	1828
1.6 Left tail light -MX3-	1829
1.6.1 Connector -T8z-	1829
1.7 Lamp for rear fog light, left -L46-	1829
1.7.1 Connector -T3cp-	1829
1.8 Right tail light -MX4-	1830
1.8.1 Connector -T8aa-	1830
1.9 Front left headlights -MX1-	1830
1.9.1 Connector -T14u-	1830
1.10 Front right headlights -MX2-	1831
1.10.1 Connector -T14v-	1831
1.11 Left tail light 2 -MX5-	1831
1.11.1 Connector -T10z-	1831
1.12 Right tail light 2 -MX6-	1832
1.12.1 Connector -T10aa-	1832
1.13 Lamp for high-set brake lights -M25-	1832
1.13.1 Connector -T2cj-	1832
837 - -Plug views: Parts with prefix N - 3	1833-1858
1. Plug views: Parts with prefix N	1833-1858
1.1 Igniter 1 for passenger side airbag -N131-	1834
1.1.1 Connector -T3bw-	1834
1.2 Driver s side rear side airbag igniter -N201-	1834
1.2.1 Connector -T3f-	1834
1.3 Rear passenger side igniter for side airbag -N202-	1835
1.3.1 Connector -T3e-	1835
1.4 Injection valve for reducing agent -N474-	1835
1.4.1 Connector -T2ed-	1835
1.5 Driver s side igniter for side airbag -N199-	1836
1.5.1 Connector -T3by-	1836
1.6 Passenger side igniter for side airbag -N200-	1836
1.6.1 Connector -T3bx-	1836
1.7 Ignition coil 1 with output stage -N70-	1837
1.7.1 Connector -T4as-	1837
1.8 Ignition coil 2 with output stage -N127-	1837
1.8.1 Connector -T4ao-	1837

1.9 Ignition coil 3 with output stage -N291-	1838
1.9.1 Connector -T4ap-	1838
1.10 Exhaust camshaft adjuster for cylinder 2 -N587-	1838
1.10.1 Connector -T3bt-	1838
1.11 Ignition coil 4 with output stage -N292-	1839
1.11.1 Connector -T4aq-	1839
1.12 Inlet camshaft adjuster for cylinder 2 -N583-	1839
1.12.1 Connector -T3bs-	1839
1.13 Inlet camshaft adjuster for cylinder 3 -N591-	1840
1.13.1 Connector -T3bu-	1840
1.14 Exhaust camshaft adjuster for cylinder 3 -N595-	1840
1.14.1 Connector -T3bv-	1840
1.15 Coolant valve for cylinder head -N489-	1841
1.15.1 Connector -T2ef-	1841
1.16 Control valve for air conditioning compressor -N280-	1841
1.16.1 Connector -T2abr-	1841
1.16.2 Connector -T2aae-	1842
1.17 Valve 1 for camshaft adjustment -N205-	1842
1.17.1 Connector -T2eo-	1842
1.17.2 Connector -T2cm-	1843
1.18 Control valve for fuel pressure -N276-	1843
1.18.1 Connector -T2co-	1843
1.18.2 Connector -T2cp-	1844
1.19 Driver s side igniter for knee airbag -N295-	1844
1.19.1 Connector -T2cd-	1844
1.19.2 Connector -T2ce-	1845
1.20 Valve 1 for camshaft adjustment in outlet -N318-	1845-1846
1.20.1 Connector -T2dd-	1845
1.20.2 Connector -T2de-	1846
1.20.3 Connector -T2hx-	1846
1.21 Valve for oil pressure control -N428-	1847-1848
1.21.1 Connector -T2ea-	1847
1.21.2 Connector -T2dz-	1847
1.21.3 Connector -T2eb-	1848
1.21.4 Connector -T2ec-	1848
1.22 Front left safety belt -NX10-	1849
1.22.1 Connector -T2ez-	1849
1.22.2 Connector -T5am-	1849
1.23 Front right seatbelt -NX11-	1850
1.23.1 Connector -T2fa-	1850
1.23.2 Connector -T5an-	1850
1.24 Valve for front left damping adjustment -N336-	1851
1.24.1 Connector -T2dp-	1851
1.25 Valve for front right damping adjustment -N337-	1851
1.25.1 Connector -T2dq-	1851
1.26 Valve for rear left damping adjustment -N338-	1852
1.26.1 Connector -T2dr-	1852
1.26.2 Connector -T2aex-	1852
1.27 Valve for rear right damping adjustment -N339-	1853
1.27.1 Connector -T2ds-	1853
1.27.2 Connector -T2aey-	1853
1.28 Igniter for driver s side head airbag -N251-	1854
1.28.1 Connector -T2cb-	1854
1.29 Igniter for passenger side head airbag -N252-	1854
1.29.1 Connector -T2cc-	1854
1.30 Rear driver s side igniter for belt tensioner -N196-	1855
1.30.1 Connector -T2f-	1855
1.31 Rear passenger side igniter for belt tensioner -N197-	1855
1.31.1 Connector -T2g-	1855
1.32 Injection valve 2 for reducing agent -N758-	1856
1.32.1 Connector -T2er-	1856
1.33 Gearbox -NX1-	1856-1858
1.33.1 Connector -T28a-	1856
1.33.2 Connector -T8ah-	1857
1.33.3 Connector -T8ai-	1857
1.33.4 Connector -T14w-	1858

838 - -Plug views: Parts with prefix O to Q - 3	1859-1862
1. Plug views: Parts with prefix O to Q	1859-1862
1.1 Glow plug 3 -QX3-	1859
1.1.1 Connector -T4at-	1859
1.2 Glow plug 1 -Q10-	1859
1.2.1 Connector -T1ov-	1859
1.2.2 Connector -T1ow-	1860
1.3 Glow plug 2 -Q11-	1860
1.3.1 Connector -T1oy-	1860
1.3.2 Connector -T1ox-	1861
1.4 Glow plug 4 -Q13-	1861-1862
1.4.1 Connector -T1pb-	1861
1.4.2 Connector -T1pa-	1862
839 - -Plug views: Parts with prefix R - 3	1863-1880
1. Plug views: Parts with prefix R	1863-1880
1.1 Storage compartment with interface for mobile phone -R265-	1864
1.1.1 Connector -T6at-	1864
1.1.2 Connector -T2hd-	1864
1.2 USB hub -R293-	1865
1.2.1 Connector -T4aw-	1865
1.2.2 Connector -T5ao-	1865
1.2.3 Connector -T5as-	1866
1.2.4 Connector -T5au-	1866
1.3 Microphone for phone -R38-	1866
1.3.1 Connector -T2fs-	1866
1.4 Front camera for driver assistance systems -R242-	1867
1.4.1 Connector -T12e-	1867
1.5 Rear view camera -R189-	1867
1.5.1 Connector -T2hc-	1867
1.5.2 Connector -T4av-	1868
1.6 Subwoofer -R211-	1868
1.6.1 Connector -T4au-	1868
1.7 Radio receiver for heating -R64-	1869
1.7.1 Connector -T6au-	1869
1.7.2 Connector -T2he-	1869
1.8 Rear left high-frequency loudspeaker -R14-	1870
1.8.1 Connector -T2fm-	1870
1.9 Rear left low-frequency loudspeaker -R15-	1870
1.9.1 Connector -T2fg-	1870
1.10 Rear right high-frequency loudspeaker -R16-	1871
1.10.1 Connector -T2fn-	1871
1.11 Rear right high-frequency loudspeaker -R17-	1871
1.11.1 Connector -T2fh-	1871
1.12 Tweeter, front left -R20-	1872
1.12.1 Connector -T2fo-	1872
1.13 Low-frequency loudspeaker, front left -R21-	1872
1.13.1 Connector -T2fb-	1872
1.14 Tweeter, front right -R22-	1873
1.14.1 Connector -T2fp-	1873
1.15 Low-frequency loudspeaker, front right -R23-	1873
1.15.1 Connector -T2fc-	1873
1.16 Left antenna module -R108-	1874
1.16.1 Connector -T2hb-	1874
1.16.2 Connector -T4bt-	1874
1.17 Right antenna module -R109-	1875
1.17.1 Connector -T2ha-	1875
1.18 Aerial in rear bumper for entry and start system -R136-	1875
1.18.1 Connector -T2fd-	1875
1.19 Tailgate aerial for entry and start system -R137-	1876
1.19.1 Connector -T2ff-	1876
1.20 Interior aerial 1 for entry and start system -R138-	1876
1.20.1 Connector -T2fe-	1876
1.21 Centre loudspeaker -R208-	1877
1.21.1 Connector -T2fk-	1877
1.22 LTE antenna 3 -R330-	1877
1.22.1 Connector -T2fa-	1877

1.23 LTE antenna 2 -R306-	1878
1.23.1 Connector -T2fr-	1878
1.24 Speaker for emergency call module -R335-	1878
1.24.1 Connector -T2ci-	1878
1.25 Roof antenna -RX5-	1879
1.25.1 Connector -T2hf-	1879
1.25.2 Connector -T2hh-	1879
1.26 Speaker for parking assistant -R169-	1880
1.26.1 Connector -T2fi-	1880
840 - -Plug views: Parts with prefix S to U - 3	1881-1946
1. Plug views: Parts with prefix S to U	1881-1946
1.1 USB charging plug 2 -U38-	1882
1.1.1 Connector -T4ay-	1882
1.2 USB port 1 -U41-	1882
1.2.1 Connector -T7b-	1882
1.2.2 Connector -T7c-	1883
1.3 USB port 2 -U42-	1883
1.3.1 Connector -T7d-	1883
1.4 Internal socket, 230 V, 110 V -U11-	1884
1.4.1 Connector -T3bz-	1884
1.5 12 V socket -U5-	1884
1.5.1 Connector -T3cb-	1884
1.6 USB charging plug 1 -U37-	1885
1.6.1 Connector -T4ax-	1885
1.7 12 V socket 2 -U18-	1885
1.7.1 Connector -T3cc-	1885
1.8 Coupling point for exhaust valve control unit -TAGK-	1886
1.8.1 Connector -T5c-	1886
1.8.2 Connector -T5bh-	1886
1.9 Coupling point for gear oil cooling -TGOK-	1887
1.9.1 Connector -T5e-	1887
1.9.2 Connector -T5d-	1887
1.10 Coupling point on the roof -TH-	1888
1.10.1 Connector -T6a-	1888
1.10.2 Connector -T6bj-	1888
1.11 Coupling point on the tailgate on the left -THKL-	1889-1891
1.11.1 Connector -T10a-	1889
1.11.2 Connector -T10d-	1889
1.11.3 Connector -T10c-	1890
1.11.4 Connector -T10f-	1890
1.11.5 Connector -T10b-	1891
1.11.6 Connector -T10e-	1891
1.12 Coupling point in the left rear compartment -THRL-	1892
1.12.1 Connector -T14b-	1892
1.12.2 Connector -T14a-	1892
1.13 Coupling point in the bottom left interior -TIUL-	1893-1898
1.13.1 Connector -T5h-	1893
1.13.2 Connector -T5g-	1894
1.13.3 Connector -T17a-	1894
1.13.4 Connector -T17b-	1895
1.13.5 Connector -T17c-	1895
1.13.6 Connector -T17d-	1896
1.13.7 Connector -T17e-	1896
1.13.8 Connector -T17f-	1897
1.13.9 Connector -T17g-	1897
1.13.10 Connector -T17h-	1898
1.13.11 Connector -T17k-	1898
1.13.12 Connector -T17l-	1899
1.14 Coupling point in the bottom right interior -TIUR-	1899-1900
1.14.1 Connector -T17o-	1899
1.14.2 Connector -T17p-	1900
1.14.3 Connector -T17m-	1900
1.14.4 Connector -T17n-	1901
1.15 Coupling point in the left engine compartment -TML-	1901-1915
1.15.1 Connector -T4e-	1902
1.15.2 Connector -T4bz-	1903

1.15.3 Connector -T14f-	1903
1.15.4 Connector -T14c-	1904
1.15.5 Connector -T14d-	1904
1.15.6 Connector -T14y-	1905
1.15.7 Connector -T14g-	1905
1.15.8 Connector -T14q-	1906
1.15.9 Connector -T14ab-	1906
1.15.10 Connector -T14n-	1907
1.15.11 Connector -T6f-	1907
1.15.12 Connector -T6g-	1908
1.15.13 Connector -T4f-	1908
1.15.14 Connector -T4cf-	1909
1.15.15 Connector -T4cg-	1909
1.15.16 Connector -T4cc-	1910
1.15.17 Connector -T8a-	1910
1.15.18 Connector -T8c-	1911
1.15.19 Connector -T8b-	1911
1.15.20 Connector -T8ao-	1912
1.15.21 Connector -T8al-	1912
1.15.22 Connector -T10i-	1913
1.15.23 Connector -T10j-	1913
1.15.24 Connector -T14p-	1914
1.15.25 Connector -T4g-	1914
1.15.26 Connector -T4d-	1915
1.15.27 Connector -T5f-	1915
1.15.28 Connector -T5bv-	1916
1.16 Coupling point for four-wheel drive -TSAA-	1916
1.16.1 Connector -T6c-	1916
1.16.2 Connector -T6e-	1917
1.17 Coupling point for front left seat -TSVL-	1917-1920
1.17.1 Connector -T10p-	1918
1.17.2 Connector -T10o-	1918
1.17.3 Connector -T3ct-	1918
1.17.4 Connector -T3c-	1919
1.17.5 Connector -T2c-	1919
1.17.6 Connector -T2b-	1920
1.17.7 Connector -T4i-	1920
1.17.8 Connector -T4h-	1921
1.18 Coupling point for front right seat -TSVR-	1921-1925
1.18.1 Connector -T10r-	1922
1.18.2 Connector -T10q-	1922
1.18.3 Connector -T3b-	1922
1.18.4 Connector -T3d-	1923
1.18.5 Connector -T2hl-	1923
1.18.6 Connector -T2hr-	1924
1.18.7 Connector -T2d-	1924
1.18.8 Connector -T4k-	1925
1.18.9 Connector -T4j-	1925
1.19 Coupling point for rear left door -TTHL-	1926
1.19.1 Connector -T19b-	1926
1.19.2 Connector -T19a-	1926
1.20 Coupling point for rear right door -TTHR-	1927
1.20.1 Connector -T19d-	1927
1.20.2 Connector -T19c-	1927
1.21 Coupling point in the front left door -TTIVL-	1928-1929
1.21.1 Connector -T4cr-	1928
1.21.2 Connector -T4a-	1928
1.21.3 Connector -T5j-	1929
1.21.4 Connector -T5bq-	1929
1.22 Coupling point in the front right door -TTIVR-	1930-1931
1.22.1 Connector -T4cs-	1930
1.22.2 Connector -T4b-	1930
1.22.3 Connector -T5k-	1931
1.22.4 Connector -T5br-	1931
1.23 Coupling point for front left door -TTVL-	1932-1933
1.23.1 Connector -T29a-	1932

1.23.2 Connector -T29b-	1932
1.23.3 Connector -T27b-	1933
1.23.4 Connector -T27a-	1933
1.24 Coupling point for front right door -TTVR-	1934-1935
1.24.1 Connector -T29c-	1934
1.24.2 Connector -T29d-	1934
1.24.3 Connector -T27c-	1935
1.24.4 Connector -T27d-	1935
1.25 Coupling point for reducing agent metering system -TRMD-	1936-1937
1.25.1 Connector -T6j-	1936
1.25.2 Connector -T6b-	1936
1.25.3 Connector -T10m-	1937
1.25.4 Connector -T10n-	1937
1.26 Coupling point for rear seat -TSH-	1938-1941
1.26.1 Connector -T5a-	1938
1.26.2 Connector -T5ba-	1939
1.26.3 Connector -T5bb-	1939
1.26.4 Connector -T5bc-	1939
1.26.5 Connector -T5bd-	1940
1.26.6 Connector -T5bf-	1940
1.26.7 Connector -T5bg-	1941
1.26.8 Connector -T5be-	1941
1.27 Coupling point in the middle engine compartment -TMM-	1942
1.27.1 Connector -T8i-	1942
1.27.2 Connector -T8g-	1942
1.27.3 Connector -T14o-	1942
1.27.4 Connector -T14l-	1943
1.28 Coupling point for fuel delivery unit -TKFE-	1943
1.28.1 Connector -T3a-	1943
1.28.2 Connector -T4c-	1944
1.29 Socket for trailer operation -U10-	1944
1.29.1 Connector -T13a-	1944
1.30 Connection for diagnosis -U31-	1945
1.30.1 Connector -T16f-	1945
1.31 Fuse holder C -SC-	1945-1946
1.31.1 Connector -T2fu-	1945-1946
841 - -Plug views: Parts with prefix V - 3	1947-1975
1. Plug views: Parts with prefix V	1947-1975
1.1 Dosing pump -V54-	1948
1.1.1 Connector -T2a-	1948
1.2 Radiator fan -VX57-	1949
1.2.1 Connector -T4bh-	1949
1.3 Vacuum pump for brake -V192-	1949
1.3.1 Connector -T2fy-	1949
1.4 Driver side windscreen wiper motor -V216-	1950
1.4.1 Connector -T4az-	1950
1.5 Window regulator motor, driver side -V147-	1950
1.5.1 Connector -T3cd-	1950
1.6 Exterior mirror on the driver's side -VX4-	1951
1.6.1 Connector -T2gd-	1951
1.7 Window regulator motor, front passenger side -V148-	1951
1.7.1 Connector -T3ce-	1951
1.8 Passenger side external mirror -VX5-	1952
1.8.1 Connector -T2ge-	1952
1.9 Driver door locking unit -VX21-	1952
1.9.1 Connector -T8ad-	1952
1.10 Motor for sliding roof roller blind -V260-	1953
1.10.1 Connector -T8ar-	1953
1.11 Sliding sunroof motor -V1-	1953
1.11.1 Connector -T8aq-	1953
1.12 Hitch -VX15-	1954
1.12.1 Connector -T8ac-	1954
1.12.2 Connector -T13a-	1954
1.13 Backup heating pump -V488-	1955
1.13.1 Connector -T3ch-	1955
1.14 Rear left door locking unit -VX23-	1956

1.14.1 Connector -T8af-	1956
1.15 Window regulator motor, rear left -V26-	1956
1.15.1 Connector -T10ae-	1956
1.15.2 Connector -T3cf-	1957
1.16 Rear right door locking unit -VX24-	1957
1.16.1 Connector -T8ag-	1957
1.17 Window regulator motor, rear right -V27-	1958
1.17.1 Connector -T10af-	1958
1.17.2 Connector -T3cg-	1958
1.18 Rear window wiper motor -V12-	1959
1.18.1 Connector -T4ba-	1959
1.19 Towing aid for tailgate -VX16-	1959
1.19.1 Connector -T6bf-	1959
1.20 Actuator for radiator shutter -V544-	1960
1.20.1 Connector -T4be-	1960
1.21 Additional hydraulic pump 1 for gearbox oil -V475-	1960
1.21.1 Connector -T4bb-	1960
1.22 Motor for longitudinal adjustment of the driver's seat lumbar support -V125-	1961
1.22.1 Connector -T4bc-	1961
1.23 Motor for height adjustment of the driver's seat lumbar support -V129-	1961
1.23.1 Connector -T4bu-	1961
1.24 Motor for backrest adjustment of the driver's seat -V45-	1962
1.24.1 Connector -T5af-	1962
1.25 Engine for tilt adjustment of the driver's seat -V243-	1962
1.25.1 Connector -T5ah-	1962
1.26 Motor for longitudinal adjustment of the driver's seat -V28-	1963
1.26.1 Connector -T5ad-	1963
1.27 Motor for height adjustment of the driver's seat -V138-	1963
1.27.1 Connector -T5aj-	1963
1.28 Pump for charge air cooling -V188-	1964
1.28.1 Connector -T3ci-	1964
1.28.2 Connector -T3cw-	1964
1.29 Recirculation damper servomotor -V113-	1965
1.29.1 Connector -T6bm-	1965
1.30 Pump for headlight cleaning system -V11-	1965
1.30.1 Connector -T2fx-	1965
1.31 Left locking motor -V282-	1966
1.31.1 Connector -T2fz-	1966
1.32 Right locking motor -V283-	1966
1.32.1 Connector -T2ga-	1966
1.33 Passenger side closing unit -VX22-	1967
1.33.1 Connector -T8ae-	1967
1.34 Closing unit for tailgate -VX25-	1967
1.34.1 Connector -T4bg-	1967
1.35 Temperature flap -VX27-	1968
1.35.1 Connector -T6bn-	1968
1.36 Front left temperature flap -VX34-	1968
1.36.1 Connector -T6ax-	1968
1.37 Front right temperature flap -VX35-	1969
1.37.1 Connector -T6ay-	1969
1.38 Defrosting flap -VX47-	1969
1.38.1 Connector -T6av-	1969
1.39 Recirculation damper -VX52-	1970
1.39.1 Connector -T6ba-	1970
1.40 Air distribution flap -VX33-	1970
1.40.1 Connector -T6bo-	1970
1.40.2 Connector -T6az-	1971
1.41 Drive unit for tailgate -VX69-	1971
1.41.1 Connector -T10ad-	1971
1.42 Motor for gas cap lock -V155-	1972
1.42.1 Connector -T2l-	1972
1.43 Motor for adjusting the lumbar support at the front right -V492-	1972
1.43.1 Connector -T4bv-	1972
1.43.2 Connector -T4bd-	1973
1.44 Backrest adjustment motor of front passenger seat -V46-	1973
1.44.1 Connector -T5aa-	1973

1.45 Motor for tilt adjustment of the passenger seat -V244-	1974
1.45.1 Connector -T5ai-	1974
1.46 Longitudinal adjustment motor of front passenger seat -V31-	1974
1.46.1 Connector -T5ae-	1974
1.47 Motor for height adjustment of the passenger seat -V246-	1975
1.47.1 Connector -T5ak-	1975
842 - -Plug views: Parts with prefix W to Z - 3	1976-1991
1. Plug views: Parts with prefix W to Z	1976-1991
1.1 Rear left reading light -W11-	1976
1.1.1 Connector -T4bi-	1977
1.1.2 Connector -T3ck-	1977
1.2 Rear right reading light -W12-	1977
1.2.1 Connector -T4bj-	1977
1.2.2 Connector -T3cl-	1978
1.3 Auto-dimming rear-view mirror -Y7-	1978
1.3.1 Connector -T8u-	1978
1.4 Windscreen heater for front sensors -Z113-	1979
1.4.1 Connector -T2cg-	1979
1.5 Heated left backrest -Z11-	1979
1.5.1 Connector -T2gu-	1979
1.6 Heated right backrest -Z13-	1980
1.6.1 Connector -T2gv-	1980
1.7 Heated windscreen -Z2-	1980
1.7.1 Connector -T1pd-	1980
1.7.2 Connector -T1qs-	1981
1.8 Lamp for driver s side door ambient lighting -W86-	1981
1.8.1 Connector -T3cm-	1981
1.9 Lamp forpassenger side door ambient lighting -W87-	1982
1.9.1 Connector -T3cn-	1982
1.10 Heating for reducing agent line (heating circuit 2) -Z104-	1982
1.10.1 Connector -T2gr-	1982
1.11 Rear left seat heating -ZX10-	1983
1.11.1 Connector -T4bo-	1983
1.11.2 Connector -T4bp-	1983
1.12 Rear right seat heating -ZX12-	1984
1.12.1 Connector -T4bq-	1984
1.12.2 Connector -T4cw-	1984
1.13 Driver s side seat heating -ZX15-	1985
1.13.1 Connector -T4bm-	1985
1.14 Passenger side seat heating -ZX16-	1985
1.14.1 Connector -T4bn-	1985
1.15 Front interior light -WX1-	1986
1.15.1 Connector -T6bg-	1986
1.15.2 Connector -T6bl-	1986
1.16 Rear interior light -WX2-	1987
1.16.1 Connector -T3co-	1987
1.17 Left license plate light -X4-	1987
1.17.1 Connector -T2gp-	1987
1.18 Right license plate light -X5-	1988
1.18.1 Connector -T2gq-	1988
1.19 Driver side door warning light -W30-	1988
1.19.1 Connector -T2gn-	1988
1.20 Passenger side door warning light -W36-	1989
1.20.1 Connector -T2go-	1989
1.21 Right boot light -W35-	1989
1.21.1 Connector -T2gg-	1989
1.22 Lamp for driver s side door rear ambient lighting -W88-	1990
1.22.1 Connector -T3bi-	1990
1.23 Lamp for passenger side door rear ambient lighting -W89-	1990-1991
1.23.1 Connector -T3bj-	1990-1991