

Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety precautions when working on vehicles with start-stop system	1
1.2 Safety precautions during road tests in which testing and measuring equipment is used	1
1.3 Safety precautions when working on the assembly carrier	2
2 Repair notes	3
2.1 Leaks on shock absorbers	3
2.2 Noises on shock absorbers	3
2.3 Inspecting the removed shock absorber	4
2.4 Steering gear	5
2.5 Seals and sealing rings	5
2.6 Screws, nuts	5
2.7 Electrical components	5
2.8 Raise wheel bearing in unladen state on vehicles with coil springs	5
3 Accident vehicle assessment	9
3.1 Checklist for assessing the chassis of accident vehicles	9
4 Disposal	11
4.1 Degas front gas-filled shock absorber, and empty.	11
4.2 Degas rear gas-filled shock absorber, and empty.	12
40 - Front suspension	15
1 Front axle	15
1.1 Installation overview - front axle	15
2 Assembly carrier	16
2.1 Summary of components- assembly carrier	16
2.2 Removing and installing assembly carrier without steering gear	18
2.3 Removing and installing assembly carrier with steering gear	23
2.4 Repairing assembly carrier	38
2.5 Removing and installing the anti-roll bar	50
2.6 Removing and installing coupling rod	54
2.7 Repairing thread in longitudinal member	55
2.8 Fixing the assembly carrier	55
2.9 Lower assembly carrier	58
3 Suspension strut, upper suspension link	63
3.1 Assembly overview - suspension strut, upper suspension link	63
3.2 Removing and installing the suspension strut	65
3.3 Repairing suspension strut	73
4 Bottom track control arm, suspension link	77
4.1 Summary of components - Lower track control arm. suspension link	77
4.2 Removing and installing the lower track control arm	79
4.3 Inspecting the suspension link	87
4.4 Removing and installing the suspension link	88
4.5 Replacing the rubber-metal bearing for lower track control arm	92
5 Wheel bearing	100
5.1 Summary of components - Wheel bearing	100
5.2 Removing and installing wheel bearing housing	100
5.3 Removing and installing wheel-bearing unit	106
6 Drive shaft	111
6.1 Summary of components - cardan shaft	111
6.2 Removing and installing cardan shaft	123
6.3 Loosen and tighten cardan shaft screwed connection	138
6.4 Removing and installing heat shield for cardan shaft	140



6.5	Disassembling and assembling cardan shaft	142
6.6	Inspecting outer CV joint	167
6.7	Inspecting inner CV joint	168
42	Rear suspension	171
1	Rear axle	171
1.1	Overview - rear axle	171
1.2	Lowering rear axle	173
1.3	Removing and installing rear suspension	177
2	Axle beam	187
2.1	Summary of components- axle beam	187
2.2	Replacing rubber-metal bearing for axle beam	187
3	Assembly carrier	200
3.1	Summary of components- assembly carrier	200
3.2	Fixing the assembly carrier	200
3.3	Repairing assembly carrier	202
4	Anti-roll bar	226
4.1	Summary of components - anti-roll bar	226
4.2	Removing and installing the anti-roll bar	226
4.3	Removing and installing coupling rod	228
5	Suspension link, track rod for rear axle	231
5.1	Summary of components - suspension arm	231
5.2	Summary of components- Track rod for rear axle	233
5.3	Removing and installing top suspension arm	234
5.4	Removing and installing bottom suspension arm	235
5.5	Removing and installing track rod for rear axle	238
6	Suspension strut/shock absorber, spring	240
6.1	Summary of components - Suspension strut/shock absorber, spring	240
6.2	Removing and installing shock absorber	244
6.3	Repairing the shock absorber	250
6.4	Removing and installing spring	253
7	Wheel bearing, trailing arm	268
7.1	Summary of components - Wheel bearing	268
7.2	Summary of components - trailing arm	270
7.3	Removing and installing wheel bearing housing	271
7.4	Removing and installing wheel-bearing unit	278
7.5	Replacing the rubber-metal bearing for wheel-bearing housing	284
7.6	Removing and installing trailing arm with bracket	290
7.7	Repairing trailing arm	293
8	Drive shaft	299
8.1	Summary of components - cardan shaft	299
8.2	Removing and installing cardan shaft	301
8.3	Disassembling and assembling cardan shaft	310
8.4	Loosen and tighten cardan shaft screwed connection	318
8.5	Inspecting outer CV joint	320
8.6	Inspecting inner CV joint	321
43	Self-levelling suspension	324
1	Electronically controlled damping	324
1.1	Summary of components - Electronically controlled damping	324
1.2	Removing and installing control unit for electronically controlled damping J250	326
1.3	Removing and installing body acceleration sensor front G341/G342	328
1.4	Removing and installing body acceleration sensor rear G343	329
2	Vehicle level sensor	331

2.1	Summary of components - vehicle level sender front	331
2.2	Summary of components - vehicle level sender rear	332
2.3	Removing and installing vehicle level sender front G78/G289	333
2.4	Removing and installing vehicle level rear encoder G76	335
44	Wheels, tyres, vehicle geometry	338
1	Wheels, Tyres	338
1.1	Wheel change	338
1.2	Tightening torque of the wheel screws	343
1.3	Disposing of tyre sealant	343
1.4	Vehicles with breakdown set	343
2	Carry out axle alignment	344
2.1	Notes on axle alignment	344
2.2	Test conditions	345
2.3	Measurement preliminaries	346
2.4	Nominal values for the axle alignment	348
2.5	Need for axle alignment	356
2.6	Explanation of the consecutive number (PR number)	358
2.7	Adjusting camber at front wheels	358
2.8	Adjust the camber on the rear axle	360
2.9	Adjust the track on the rear axle	362
2.10	Adjust the track on the front axle	364
2.11	Wheel run-out compensation	365
2.12	Check the maximum steering angle	365
2.13	Checking and aligning position of steering wheel	366
2.14	Bring vehicle into initial position for surveying	367
3	Adaptive Cruise Control	369
3.1	Calibrating automatic distance control, static calibration	369
3.2	Calibrating automatic distance control, dynamic calibration	377
4	Front camera for driver assistance systems	379
4.1	Calibration of the front camera for driver assistance systems	379
48	Steering	387
1	Steering wheel	387
1.1	Steering wheel - Summary of components	387
1.2	Removing and installing the steering wheel	389
2	Steering column	391
2.1	Summary of components - steering column	391
2.2	Check the steering column for damage	392
2.3	Observe handling and transportation of the steering column	393
2.4	Removing and installing steering column	394
2.5	Removing and installing electronic steering column lock control unit J764	416
3	Steering gear	419
3.1	Summary of components - steering gear	419
3.2	Removing and installing steering gear	421
3.3	Removing and installing bellows	438
3.4	Removing and installing track rod	441
3.5	Removing and installing track rod ends	446
3.6	Repairing steering box	448
4	Sensors	451
4.1	Removing and installing steering angle sender G85	451