



Contents

1	Engine list	1
2	Service work	3
2.1	Information about flexible or fixed service	3
2.2	Service tables	5
2.3	Scopes of service	15
3	General information	31
3.1	Vehicle identification number	31
3.2	Vehicle data sticker	31
3.3	Severe operating conditions	32
3.4	Engine code and engine number	32
3.5	Countries with high levels of dust	32
3.6	Stickers	35
3.7	Entries in service schedule	36
4	Descriptions of work:	38
4.1	Automatic gearbox OCM: Changing oil	40
4.2	Lifting the vehicle	40
4.3	Swivel joints and suspension link mountings: inspecting	45
4.4	Reading ash mass (saturation level) of diesel particulate filter	47
4.5	Battery: checking with battery tester (always refer to workshop manual)	48
4.6	Battery: checking battery terminal clamps for secure seating	48
4.7	Charge battery (establish backup power supply)	51
4.8	Removing relay for battery disconnection (if fitted)	51
4.9	Front passenger airbag: checking key switch and "ON/OFF function"	55
4.10	Checking tyres: condition, wear pattern, tyre pressure, tread depth	56
4.11	Brake system: inspect for leaks and damage.	60
4.12	Checking thickness of brake pads and condition of brake discs and drum brake linings	60
4.13	Brake system and shock absorbers: inspecting for leaks and damage	62
4.14	Brake fluid: Change	62
4.15	Brake fluid level: checking	66
4.16	Climatronic: Set temperature to 22°C	68
4.17	Electric windows: initialising (activation)	68
4.18	Vehicle diagnostic tester	69
4.19	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	70
4.20	Four-wheel drive: Inserting fuse	71
4.21	Blower air supply for toothed belt drive: Renewing	74
4.22	Boots: inspecting	75
4.23	Dust and pollen filter: cleaning housing and renewing filter element	75
4.24	Poly V-belt: checking condition	77
4.25	Poly V-belt: renewing	81
4.26	Fuel filter: renewing (diesel engine)	81
4.27	Fuel system: Bleeding (diesel engine)	83
4.28	Fuel filter: draining water (diesel engine)	83
4.29	Cooling system: checking frost protection and coolant level	85
4.30	Air filter: cleaning housing and renewing filter element	88
4.31	Air filter with saturation indicator in dash panel insert	90
4.32	Air filter cartridge, air supply for toothed belt drive: Renewing	91
4.33	Engine oil level: checking	91
4.34	Engine oil: capacities and specifications	92
4.35	Engine oil: draining or extracting, renewing oil filter and replenishing engine oil	93
4.36	Multi-purpose additive for petrol fuel: adding	99
4.37	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	99
4.38	Bonnet catch: Cleaning and lubricating	100



4.39	Checking breakdown set	100
4.40	Carry out road test	101
4.41	Wheel securing bolts: Tightening to specified torque	102
4.42	Reading radio code	103
4.43	Radio / radio navigation system: Entering anti-theft coding PIN	105
4.44	Cleaning roll cover	106
4.45	Radio-navigation system: Insert navigation CD/DVD and perform update	106
4.46	Timing chain: Renewing	107
4.47	Windscreen wash/wipe system and headlight washer system: Checking function and settings	107
4.48	Wiper blades: checking park position	110
4.49	Headlight adjustment: check and adjust as necessary.	111
4.50	Tailboard catch: Cleaning and lubricating	115
4.51	Service interval display: resetting	116
4.52	Service interval display: Adapting	117
4.53	Transportation mode: switching off	118
4.54	Track rod ends: checking clearance, firm seating and boots	119
4.55	Power assisted steering: check fluid level.	120
4.56	Doors: grease door arrester	121
4.57	Interior and exterior body: inspecting for corrosion with doors and flaps open	121
4.58	Protective foil: Removing (if fitted)	121
4.59	Underbody protection: visual check for damage	122
4.60	Clock and date: setting	122
4.61	Camshaft drive toothed belt and toothed belt tensioning roller: Renewing	123
4.62	Camshaft drive toothed belt: check condition	123
4.63	Toothed belt drive for coolant pump: renew.	124
4.64	Toothed belt pulley for coolant pump: Renew	124
4.65	Spark plugs: renewing	124
4.66	Removing and installing skid plate	126
4.67	Steering: Check bellows/boots for leaks and damage	127
5	Exhaust emissions test	128
5.1	Exhaust emissions test for petrol engines	128
5.2	Exhaust emissions test for diesel engines	130