



Contents

00 - Technical data	1
1 Key vehicle data	1
1.1 Vehicle identification number	1
1.2 Type plate	3
1.3 Vehicle data sticker	3
2 Safety information	4
3 Moulded foam inserts	5
4 Gaps/shut lines	7
4.1 Body - front	7
4.2 Body - centre, vehicles with double cab	8
4.3 Body - centre, vehicles with single cab	9
4.4 Body - rear, vehicles with double cab	10
4.5 Body - rear, vehicles with single cab	11
4.6 Body add-on parts	12
5 Body dimensions	14
5.1 Double cab chassis dimensions	14
5.2 Single cab chassis dimensions	20
5.3 Double cab box dimensions	26
5.4 Single cab box dimensions	31
5.5 Double cab load surface dimensions	37
5.6 Single cab load surface dimensions	41
6 Alignment jig	45
6.1 Tools	45
6.2 Alignment bracket fixture overview of complete vehicle	45
6.3 Alignment bracket fixture overview of vehicle chassis	46
6.4 Alignment bracket fixture overview of vehicle cab	47
6.5 Alignment bracket fixture overview of vehicle cab	48
50 - Body - front	50
1 Renewing cross member	50
1.1 Tools	50
1.2 Removing	50
1.3 Installing	52
2 Renewing deformation element	55
2.1 Tools	55
2.2 Removing	55
2.3 Installing	56
3 Renewing engine mounting cross member	59
3.1 Tools	59
3.2 Removing	59
3.3 Installing	61
4 Renewing differential cross member	65
4.1 Tools	65
4.2 Removing	65
4.3 Installing	68
5 Renewing propshaft cross member	71
5.1 Tools	71
5.2 Removing	71
5.3 Installing	73
6 Renewing cross member for shock absorber mounting	78
6.1 Tools	78



6.2	Removing	78
6.3	Installing	81
7	Renewing suspension turret	87
7.1	Tools	88
7.2	Removing	88
7.3	Installing	90
8	Renewing anti-roll bar mountings	93
8.1	Tools	93
8.2	Removing	93
8.3	Installing	95
9	Renewing wing connecting plate	98
9.1	Tools	99
9.2	Removing	99
9.3	Installing	100
10	Renewing connection piece	103
10.1	Tools	103
10.2	Removing	103
10.3	Installing	105
11	Renewing headlight mounting	107
11.1	Tools	107
11.2	Removing	107
11.3	Installing	110
12	Renewing upper wheel housing longitudinal member	114
12.1	Tools	114
12.2	Removing	114
12.3	Installing	116
13	Renewing front wheel housing	119
13.1	Tools	119
13.2	Removing	119
13.3	Installing	120
14	Renewing front part of longitudinal member - part section 1-	123
14.1	Tools	123
14.2	Removing	123
14.3	Installing	125
15	Renewing longitudinal member - part section 2-	128
15.1	Tools	128
15.2	Removing	128
15.3	Installing	130
16	Renewing longitudinal member complete	136
16.1	Tools	137
16.2	Removing	137
16.3	Installing	144
51 - Body - centre		157
1	Renewing roof (double cab)	157
1.1	Tools	158
1.2	Removing	158
1.3	Installing	160
2	Renewing roof, single cab	164
2.1	Tools	165
2.2	Removing	165
2.3	Installing	166
3	Renewing roof side member, double cab	170
3.1	Tools	171



3.2	Removing	171
3.3	Installing	174
4	Renewing roof side member, single cab	180
4.1	Tools	181
4.2	Removing	181
4.3	Installing	182
5	Renewing front cross member for roof	186
5.1	Tools	186
5.2	Removing	186
5.3	Installing	188
6	Renewing roof reinforcement	191
6.1	Tools	191
6.2	Removing	191
6.3	Installing	193
7	Renewing rear roof cross member	196
7.1	Tools	196
7.2	Removing	196
7.3	Installing	198
8	Renewing rear window frame	201
8.1	Tools	202
8.2	Removing	202
8.3	Installing	203
9	Renewing cross member	207
9.1	Tools	207
9.2	Removing	207
9.3	Installing	209
10	Renewing outer side panel completely, double cab	212
10.1	Tools	213
10.2	Removing	213
10.3	Installing	216
11	Renewing outer side panel completely, single cab	223
11.1	Tools	223
11.2	Removing	224
11.3	Installing	227
12	Renewing complete side panel, cargo box	235
12.1	Tools	236
12.2	Removing	236
12.3	Installing	237
13	Renewing hinge pillar (A-pillar)	241
13.1	Tools	243
13.2	Removing	243
13.3	Installing	245
14	Renewing hinge pillar (A-pillar) reinforcement	251
14.1	Tools	252
14.2	Removing	252
14.3	Installing	253
15	Renewing centre pillar (B-pillar)	257
15.1	Tools	258
15.2	Removing	258
15.3	Installing	260
16	Renewing centre pillar (B-pillar) reinforcement	263
16.1	Tools	264
16.2	Removing	264



16.3	Installing	266
17	Renewing lock column, C-pillar, double cab	269
17.1	Tools	270
17.2	Removing	270
17.3	Installing	274
18	Renewing lock column, B-pillar, single cab	278
18.1	Tools	279
18.2	Removing	279
18.3	Installing	280
19	Renewing outer side member, double cab	284
19.1	Tools	285
19.2	Removing	285
19.3	Installing	287
20	Renewing outer side member, single cab	290
20.1	Tools	291
20.2	Removing	291
20.3	Installing	293
21	Renewing C-pillar reinforcement, double cab	297
21.1	Tools	298
21.2	Removing	298
21.3	Installing	299
22	Renewing mounting bracket for front seat	302
22.1	Tools	302
22.2	Removing	302
22.3	Installing	304
23	Renewing mounting bracket for driver cab	307
23.1	Tools	307
23.2	Removing	307
23.3	Installing	309
53 - Body - rear		312
1	Renewing rear apron	312
1.1	Tools	313
1.2	Removing	313
1.3	Installing	314
2	Renewing rear cross panel carrier	318
2.1	Tools	318
2.2	Removing	318
2.3	Installing	320
3	Renewing D-pillar	323
3.1	Tools	323
3.2	Removing	323
3.3	Installing	325
4	Renewing front leaf spring mounting bracket	328
4.1	Tools	328
4.2	Removing	328
4.3	Installing	330
5	Renewing rear leaf spring mounting bracket	332
5.1	Tools	332
5.2	Removing	332
5.3	Installing	334
6	Renewing cargo box shock absorber mounting	337
6.1	Tools	337
6.2	Removing	337



6.3	Installing	339
7	Renewing rear longitudinal member - part section 1	342
7.1	Tools	343
7.2	Removing	343
7.3	Installing	345
8	Renewing rear longitudinal member - part section 2	352
8.1	Tools	352
8.2	Removing	352
8.3	Installing	354
9	Renewing rear side panel	358
9.1	Tools	359
9.2	Removing	359
9.3	Installing	362
10	Renewing upper load surface cross member	367
10.1	Tools	368
10.2	Removing	368
10.3	Installing	370
11	Renewing lower load surface cross member	373
11.1	Tools	373
11.2	Removing	373
11.3	Installing	375
12	Renewing load surface floor panel, part section	378
12.1	Tools	379
12.2	Removing	379
12.3	Installing	380
13	Renewing load surface bulkhead	383
13.1	Tools	383
13.2	Removing	383
13.3	Installing	385