



Contents

00 - Technical data	1
1 Safety information	1
1.1 Rules for safety when working on the gearbox	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	3
1.4 Safety precautions when tow-starting or towing	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General repair instructions	4
2.3 Contact corrosion	5
2.4 Gaskets and seals	5
2.5 Nuts and bolts	5
3 Technical data	6
3.1 Capacities	6
3.2 Allocation gearbox - engine	6
4 Identification	9
4.1 Gearbox identification	9
4.2 Identification of torque converter	9
32 - Torque converter	10
1 Torque converter	10
1.1 Assembly overview - torque converter	10
1.2 Removing and installing torque converter	10
1.3 Draining torque converter	12
1.4 Removing and installing torque converter oil seal	13
37 - Controls, housing	14
1 ATF circuit	14
1.1 Assembly overview - ATF circuit	14
1.2 Removing and installing ATF cooler	15
1.3 Removing and installing ATF filter	17
1.4 Removing and installing ATF pipes	19
2 ATF	25
2.1 Checking ATF level	25
2.2 Draining and filling ATF	28
2.3 Purging ATF circuit	31
3 Removing and installing gearbox	33
3.1 Specified torques for gearbox	33
3.2 Removing gearbox	33
3.3 Installing gearbox	48
4 Assembly mountings	50
4.1 Assembly overview - assembly mountings, version A	50
4.2 Assembly overview - assembly mountings, version B	52
5 Transporting gearbox	54
6 Selector mechanism	55
6.1 Assembly overview - selector mechanism	55
6.2 Assembly overview - selector lever handle	56
6.3 Checking selector mechanism	57
6.4 Emergency release from position P	57
6.5 Removing and installing selector mechanism	58
6.6 Removing and installing selector lever handle	60
6.7 Removing and installing gear selector cable	63



6.8	Checking and adjusting selector lever cable	63
6.9	Removing and installing cable support bracket for selector lever cable	64
6.10	Removing and installing gearbox selector lever	67
38	Gears, control	68
1	ATF system	68
1.1	Assembly overview - sump/oil strainer	68
1.2	Removing and installing sump	69
1.3	Removing and installing hydraulic impulse oil storage with accumulator solenoid N485 ..	71
2	Oil seals in gearbox	73
2.1	Renewing oil seal in gearbox	73
3	Mechatronic unit	80
3.1	Removing and installing mechatronic unit	80