



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair notes	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	6
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	7
3.7 Fitting radiator and condensers	7
3.8 Checking vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine on engine and gearbox support	18
1.3 Installing engine	19
2 Assembly mountings	22
2.1 Removing and installing engine and gearbox mounting	22
13 - Crankshaft group	24
1 Cylinder block (pulley end)	24
1.1 Assembly overview - poly V-belt drive	24
1.2 Removing and installing tensioner for poly V-belt	26
1.3 Removing and installing poly-V belt	27
1.4 Removing and installing bracket for ancillaries	28
1.5 Removing and installing vibration damper	30
1.6 Renewing crankshaft oil seal - belt pulley end	36
2 Cylinder block, gearbox end	39
2.1 Assembly overview - cylinder block, gearbox end	39
2.2 Removing and installing drive plate	40
2.3 Renewing needle bearing in drive plate	42
2.4 Removing and installing sealing flange on gearbox side	43
3 Pistons and conrods	47
3.1 Assembly overview - pistons and conrods	47
3.2 Checking pistons and cylinder bores	49
3.3 Separating new conrod	50
4 Crankshaft	52
4.1 Assembly overview - crankshaft	52
4.2 Allocation of main bearing shells	53
4.3 Crankshaft dimensions	54
4.4 Measuring axial clearance of crankshaft	55
4.5 Measuring radial clearance of crankshaft	55
4.6 Renewing needle bearing in crankshaft	56



15 - Cylinder head, valve gear	58
1 Cylinder head	58
1.1 Assembly overview - cylinder head	58
1.2 Removing and installing cylinder head	61
1.3 Checking compression	74
1.4 Removing and installing vacuum pump	76
2 Cover for timing chain	78
2.1 Assembly overview - cover for timing chain	78
2.2 Removing and installing upper timing chain cover	80
2.3 Removing and installing timing chain cover (bottom)	80
3 Chain drive	85
3.1 Exploded view - camshaft timing chain	85
3.2 Assembly overview - balancer shaft timing chain	86
3.3 Removing and installing camshaft timing chain	88
3.4 Removing and installing balance shaft timing chain	92
3.5 Renewing balancer shaft for inlet camshaft	94
3.6 Renewing balancer shaft for exhaust camshaft	97
3.7 Checking valve timing	100
4 Valve gear	102
4.1 Assembly overview - valve gear	102
4.2 Removing and installing camshafts	103
4.3 Renewing valve stem seals with cylinder head installed	113
4.4 Renewing valve stem seals with cylinder head removed	118
4.5 Measuring axial clearance of camshaft	121
4.6 Removing and installing camshaft control valve 1 N205	122
5 Inlet and exhaust valves	123
5.1 Checking valve guides	123
5.2 Valve dimensions	124
17 - Lubrication	125
1 Sump, oil pump	125
1.1 Assembly overview - sump, oil pump	125
1.2 Removing and installing lower part of sump	127
1.3 Removing and installing upper part of sump	129
1.4 Removing and installing oil pump	133
1.5 Engine oil:	134
2 Crankcase ventilation	136
2.1 Removing and installing coarse oil separator	136
3 Oil filter, oil pressure switch	137
3.1 Assembly overview - oil filter housing, oil pressure switch	137
3.2 Removing and installing oil pressure switch F22	138
3.3 Checking oil pressure	138
4 Engine oil cooler	140
4.1 Removing and installing engine oil cooler	140
19 - Cooling	142
1 Cooling system/coolant	142
1.1 Draining and adding coolant	142
1.2 Checking cooling system for leaks	149
1.3 Connection diagram - coolant hoses	151
1.4 Coolant hose schematic diagram for vehicles with 2nd heat exchanger	152
2 Coolant pump, regulation of cooling system	153
2.1 Assembly overview - coolant hoses	153



2.2	Assembly overview - coolant pump, thermostat	155
2.3	Removing and installing continued coolant circulation pump V51	156
2.4	Removing and installing coolant temperature sender G62	157
2.5	Removing and installing toothed belt for coolant pump	159
2.6	Renewing oil seal for coolant pump drive	160
2.7	Removing and installing coolant pump	162
2.8	Removing and installing thermostat	163
3	Radiator, radiator fan	165
3.1	Assembly overview - radiator/ radiator fan V7	165
3.2	Assembly overview - radiator cowl and radiator fan V7	167
3.3	Removing and installing radiator cowl with radiator fan V7	167
3.4	Removing and installing radiator	169
21	Turbocharging/supercharging	172
1	Charge air system	172
1.1	Assembly overview - charge air cooling	172
1.2	Removing and installing pressure pipe	173
1.3	Removing and installing charge pressure sender G31	173
1.4	Removing and installing charge air cooler	173
1.5	Checking charge air system for leaks	176
2	Exhaust turbocharger	179
2.1	Assembly overview - turbocharger	179
2.2	Removing and installing turbocharger	184
2.3	Checking vacuum unit for turbocharger	187
24	Mixture preparation - injection	189
1	Injection system	189
1.1	Overview of fitting locations - injection system	189
2	Injectors	191
2.1	Assembly overview - fuel rail with injectors	191
2.2	Removing and installing injectors	192
2.3	Renewing seals on injectors	194
2.4	Cleaning injectors	196
3	Air filter	198
3.1	Assembly overview - air filter housing	198
3.2	Removing and installing air filter housing	200
3.3	Removing and installing air filter element	202
4	Senders and sensors	203
4.1	Removing and installing air mass meter G70	203
4.2	Removing and installing fuel pressure sender -G247-	204
4.3	Checking fuel pressure sender G247	205
4.4	Checking double non-return valve	208
5	Intake manifold	211
5.1	Assembly overview - intake manifold	211
5.2	Removing and installing intake manifold	212
5.3	Removing and installing throttle valve module J338	216
5.4	Cleaning throttle valve module J338	217
5.5	Checking intake manifold change-over	217
6	High-pressure pump	220
6.1	Assembly overview - high-pressure pump	220
6.2	Removing and installing high-pressure pump	221
6.3	Check fuel holding pressure upstream of high-pressure pump	223
7	Engine control unit	227
7.1	Removing and installing engine control unit	227



26 - Exhaust system	228
1 Exhaust pipes and silencers	228
1.1 Assembly overview - silencers	228
1.2 Removing and installing centre silencer	229
1.3 Removing and installing rear silencer	231
1.4 Check exhaust system for leaks	231
1.5 Aligning exhaust system free of stress	231
1.6 Installation position of clamp	233
2 Exhaust gas cleaning	234
2.1 Removing and installing catalytic converter	234
28 - Ignition system	236
1 Ignition system	236
1.1 Assembly overview - ignition system	236
1.2 Removing and installing ignition coils with output stage	237
1.3 Removing and installing spark plugs	238
1.4 Removing and installing knock sensor 1 G61	240
1.5 Removing and installing engine speed sender G28	240
1.6 Test data, spark plugs	241