

001 - Basic equipment	1-29
1. Basic equipment	1
2. Battery, Starter, Starter motor relay, Fuse 2 on fuse holder A	2
3. Terminal 58b relief relay, Voltage supply relay 2	3
4. Alternator with voltage regulator, Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit, Fuse 4 on fuse holder B	4
5. Ignition/starter switch, Onboard supply control unit	5
6. Light switch, Light switch illumination bulb, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	6
7. Light switch, Fuse 16 on fuse holder C, Fuse 53 on fuse holder C	7
8. Light switch, Switch and instrument illumination regulator, Headlight range control regulator, Fuse 28 on fuse holder C	8
9. Front left headlight	9
10. Left fog light bulb, Front left headlight, Left turn signal repeater bulb	10
11. Right fog light bulb, Front right headlight, Right turn signal repeater bulb	11
12. Front right headlight, Fuse 32 on fuse holder C, Fuse 55 on fuse holder C	12
13. Left tail light cluster, Left number plate light	13
14. Reversing light switch, Right tail light cluster, Right number plate light	14
15. Brake light switch	15
16. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	16
17. Steering column combination switch, Coil connector, Steering angle sender, Horn plate, Airbag control unit, Multifunction steering wheel control unit	17
18. Turn signal switch, Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	18
19. Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch	19
20. Heated rear window button, Heated rear window	20
21. Front interior light, Centre interior light	21
22. Hazard warning lights button, Treble horn, Bass horn	22
23. Dash panel insert, Windscreen wiper motor	23
24. Driver side belt switch, Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Warning lamp for airbag deactivated on driver side	24
25. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp	25
26. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine/motor control unit	26
27. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp, Radio	27
28. Parking brake contact switch, Dash panel insert, Handbrake warning lamp, Light 1 for front centre console background lighting, Electric socket, Cigarette lighter, 12 V socket, 12 V socket 2	28
29. Fuel tank filler flap central locking actuator, Bonnet contact switch, Onboard supply control unit, Driver door lock unit, Front passenger door lock unit, Rear left door lock unit, Rear right door lock unit	29
002 - Central locking, window regulators and mirror adjustment , (LOL)	30-40
1. Central locking, window regulators and mirror adjustment , (LOL)	30
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 20 on fuse holder C, Fuse 66 on fuse holder C	31
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	32
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	33
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	34
6. Mirror adjustment switch, Onboard supply control unit, Fuse 19 on fuse holder C, Fuse 33 on fuse holder C	35
7. Suppression filter, Onboard supply control unit, Driver side exterior mirror	36
8. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 48 on fuse holder C, Driver side window regulator motor	37
9. Front passenger side window regulator button, Front passenger door control unit, Fuse 49 on fuse holder C, Front passenger side window regulator motor	38
10. Switch and instrument illumination regulator, Fuse 28 on fuse holder C, Front passenger side exterior mirror	39
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Rear left window reaulator motor. Rear riight window reaulator motor	40

003 - Climatic	41-49
1. Climatic	41
2. Battery, Fuse 2 on fuse holder A, Fuse 42 on fuse holder C, Fuse 45 on fuse holder C	42
3. Auxiliary coolant heater relay, Fuse 62 on fuse holder C, Circulation pump	43
4. Fuse 15 on fuse holder C, Circulation pump	44
5. Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fuse 64 on fuse holder C, Fresh air blower	45
6. High-pressure sender, Air conditioning system control unit, Onboard supply control unit	46
7. Potentiometer for defroster flap control motor, Air conditioning system control unit, Air conditioner compressor regulating valve, Defroster flap control motor, Air recirculation flap control motor	47
8. Potentiometer for temperature flap control motor, Potentiometer for footwell vent control motor, Air conditioning system control unit, Temperature flap control motor, Footwell flap control motor	48
9. Centre vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Air distribution flap control motor	49
004 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	50-57
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	50
2. Battery, ABS control unit, Onboard supply control unit, Fuse 1 on fuse holder B, Fuse 2 in fuse holder A, Fuse 4 on fuse holder B, Fuse 20 on fuse holder C	51
3. Brake light switch, ABS control unit, Onboard supply control unit, Fuse 1 on fuse holder C	52
4. Button for TCS and electronic stabilisation program, ABS control unit	53
5. Driving program button, ABS control unit	54
6. ABS control unit, Dash panel insert, ABS warning lamp, Traction control system warning lamp, Driving program warning light, Diagnostic connection	55
7. ABS control unit	56
8. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	57
005 - Climatronic	58-68
1. Climatronic	58
2. Battery, Fuse 2 on fuse holder A, Fuse 42 on fuse holder C, Fuse 45 on fuse holder C, Fuse 64 on fuse holder C	59
3. Climatronic control unit, Fuse 62 on fuse holder C, Circulation pump	60
4. Climatronic control unit, Terminal 30 voltage supply relay, Continued coolant circulation pump	61
5. Fresh air blower control unit, Climatronic control unit, Fresh air blower	62
6. High-pressure sender, Air quality sensor, Climatronic control unit	63
7. Climatronic control unit, Onboard supply control unit, Air conditioner compressor regulating valve	64
8. Potentiometer for defroster flap control motor, Potentiometer for footwell vent control motor, Climatronic control unit, Defroster flap control motor, Footwell flap control motor	65
9. Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Climatronic control unit, Left temperature flap control motor, Right temperature flap control motor	66
10. Potentiometer for fresh air/air recirculation, air flow flap control motor, Potentiometer for air distribution flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Air distribution flap control motor	67
11. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit	68
006 - CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN	69-76
1. CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN	69
2. Control unit in dash panel insert, Onboard supply control unit, Engine control unit	70
3. Onboard supply control unit, Data bus diagnostic interface	71
4. Alternator with voltage regulator, Battery monitor control unit, Onboard supply control unit, Data bus diagnostic interface	72
5. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	73
6. Onboard supply control unit, Diagnostic connection	74
7. Onboard supply control unit, Telephone controls control unit	75
8. Anti-theft alarm sensor, Multifunction steering wheel control unit, Onboard supply control unit	76
007 - Airbag systems , (LOL)	77-82
1. Airbag systems , (LOL)	77
2. Battery, Ignition/starter switch, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 2 on fuse holder A, Fuse 9 on fuse holder C	78
3. Driver side belt switch. Key operated switch to deactivate airbaa on front bassenger side.	79

Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	80
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	81
6. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	82
008 - Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	83-93
1. Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	83
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 20 on fuse holder C, Fuse 66 on fuse holder C	84
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	85
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	86
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	87
6. Mirror adjustment switch, Onboard supply control unit, Fuse 19 on fuse holder C, Fuse 33 on fuse holder C, Driver side exterior mirror	88
7. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 48 on fuse holder C, Driver side window regulator motor	89
8. Suppression filter, Front passenger side exterior mirror	90
9. Front passenger side exterior mirror	91
10. Switch and instrument illumination regulator, Front passenger side window regulator button, Front passenger door control unit, Fuse 28 on fuse holder C, Fuse 49 on fuse holder C, Front passenger side window regulator motor	92
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	93
009 - Anti-theft alarm system	94-97
1. Anti-theft alarm system	94
2. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit, Rear left door lock unit	95
3. Bonnet contact switch, Alarm horn, Onboard supply control unit, Fuse 24 on fuse holder C, Rear right door lock unit	96
4. Interior monitoring switch, Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Onboard supply control unit	97
010 - All-wheel drive	98-103
1. All-wheel drive	98
2. Battery, Terminal 15 voltage supply relay, Fuse 2 in fuse holder A, Fuse 11 on fuse holder C, Fuse 42 on fuse holder C, Fuse 46 on fuse holder C	99
3. Rear differential lock switch, Axle differential lock Hall sender 1, Differential lock control unit, Control solenoid	100
4. Differential lock control unit, Control unit in dash panel insert, Transfer box control unit, Rear axle differential lock warning lamp, Inter-axle lock-up warning lamp	101
5. Running gear program switch, Transfer box control unit, Normal operation warning lamp in transfer box operating unit, Reduction gearing warning lamp in transfer box operating unit, Inter-axle lock-up warning lamp in transfer box operating unit	102
6. Transfer box inter-axle lock-up switch, Hall sender for transfer box, Transfer box control unit, Transfer box control motor	103
011 - Radio system , (8AN),(8AG)	104-108
1. Radio system , (8AN),(8AG)	104
2. Battery, Light switch, Radio, Fuse 2 in fuse holder A, Fuse 67 on fuse holder C	105
3. Ignition/starter switch, Dash panel insert, Radio, Front left loudspeaker, Front right loudspeaker, Diagnostic connection	106
4. Radio, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	107
5. Radio, Rear right loudspeaker, Aerial, Front right treble loudspeaker, Front right bass loudspeaker, Aerial amplifier	108
012 - Radio navigation system , (8AY),(7UC),(7UK)	109-114
1. Radio navigation system , (8AY),(7UC),(7UK)	109
2. Battery, Control unit with display for radio and navigation, Fuse 2 in fuse holder A, Fuse 67 on fuse holder C	110
3. Control unit with display for radio and navigation, Front left loudspeaker, Front right loudspeaker. Telephone microphone. Diaanostic connection	111

4. Control unit with display for radio and navigation, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	112
5. Control unit with display for radio and navigation, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	113
6. Control unit with display for radio and navigation, Aerial, Aerial amplifier, GPS aerial, Radio aerial 2	114
013 - Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently	115-120
1. Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently	115
2. Battery, Engine control unit, Fuse 2 on fuse holder A, Fuse 15 on fuse holder C, Fuse 36 on fuse holder C, Fresh air blower	116
3. Onboard supply control unit, Auxiliary coolant heater control unit, Fuse 62 on fuse holder C, Metering pump	117
4. Auxiliary coolant heater control unit, Circulation pump	118
5. Auxiliary coolant heater control unit, Glow plug for heater, Combustion air blower	119
6. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit	120
014 - Fuse assignment	121-148
1. Fuse assignment	121
2. Battery, Starter, Alternator with voltage regulator, Fuse 1 on fuse holder A	122
3. Blocking diode, Main relay, Terminal 15 voltage supply relay, Fuse 2 on fuse holder A	123
4. Current supply relay, Starter motor relay, Voltage supply relay 2	124
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	125
6. Auxiliary coolant heater relay, Circulation pump	126
7. Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 6 on fuse holder A, Radiator fan, Circulation pump	127
8. ABS control unit, Automatic glow period control unit, Onboard supply control unit, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 3 on fuse holder A, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder A	128
9. Ignition/starter switch, Left brake light bulb, Right brake light bulb, High-level brake light bulb, Heated exterior mirror on driver side, Heated exterior mirror on passenger side	129
10. Treble horn, Driver door control unit, Front passenger door control unit, Control unit for vehicle location system, Windscreen wiper motor, Front interior light	130
11. Rear left door control unit, Rear right door control unit, Auxiliary coolant heater control unit, Load area illumination bulb	131
12. Left headlight dipped beam bulb, Right headlight dipped beam bulb, Left headlight range control motor, Right headlight range control motor	132
13. Alarm horn, Differential lock control unit, Engine control unit, Heated rear window	133
14. Coil connector, Anti-theft alarm sensor, Control unit in dash panel insert, Multifunction steering wheel control unit, Transfer box control unit	134
15. Control unit with display for radio and navigation, Onboard supply control unit, Radio, Fuse 3 on fuse holder C, 10-pin connector	135
16. Washer pump switch (automatic wash/wipe and headlight washer system), Button for TCS and electronic stabilisation program, Steering column combination switch, Driving program button, Reversing light switch, Left washer jet heater element	136
17. Airbag control unit, Engine control unit, Front passenger side airbag deactivated warning lamp, Heater element for crankcase breather, Fuse 42 on fuse holder C	137
18. Light switch, Brake light switch, Oil level and oil temperature sender, Control unit in dash panel insert, Transfer box control unit, Control unit for vehicle location system, Normal operation warning lamp in transfer box operating unit	138
19. Automatic gearbox control unit, Selector lever sensors control unit, Telephone controls control unit, Fuse 70 on fuse holder C, Fuse 71 on fuse holder C, 6-pin connector, 10-pin connector	139
20. Button for left seat heating, Button for right seat heating, Seat heating control unit, 10-pin connector, Cigarette lighter	140
21. Mirror adjustment switch, Electric socket, 12 V socket	141
22. Air mass meter, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Fuel pressure regulating valve, Fuel metering valve, Intake manifold flap valve, Continued coolant circulation pump	142
23. Engine control unit, Lambda probe heater	143
24. Fuel pump control unit, Ignition coil 1 with output stage, Charge pressure control solenoid valve, Ignition coil 2 with output stage, Exhaust flap valve, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Exhaust gas recirculation cooler changeover valve	144
25. Left side light bulb, Right tail light bulb, Right side light bulb, Left tail light bulb, Right number plate light	145
26. Light switch. Rear fog light warning lamp. Left fog light bulb. Right fog light bulb. Rear left	146

fog light bulb, Rear right fog light bulb, Left daytime running light bulb, Right daytime running light bulb	
27. Steering column combination switch, Left headlight main beam bulb, Right headlight main beam bulb, Washer pump	147
28. Trailer detector control unit, Diagnostic connection	148
015 - Preparation for trailer coupling , (1D7)	149-153
1. Preparation for trailer coupling , (1D7)	149
2. Battery, Fuse 6 on fuse holder A, Fuse 6 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Diagnostic connection	150
3. Brake light switch	151
4. Light switch, Dash panel insert, Rear left fog light bulb	152
5. Reversing light switch, Left reversing light bulb, Fuse 3 on fuse holder C	153
016 - Preparation for radio	154-157
1. Preparation for radio	154
2. Battery, Ignition/starter switch, Light switch, Fuse 2 in fuse holder A, Fuse 67 on fuse holder C	155
3. Dash panel insert, Aerial, Aerial amplifier	156
4. Front left loudspeaker, Front right loudspeaker	157
017 - Seat heating	158-161
1. Seat heating	158
2. Battery, Onboard supply control unit, Voltage supply relay 2, Fuse 2 in fuse holder A, Fuse 4 on fuse holder B, Fuse 57 on fuse holder C	159
3. Light switch, Button for left seat heating, Button for right seat heating, Seat heating control unit	160
4. Seat heating control unit, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	161
018 - Passenger compartment heater and ventilation system	162-166
1. Passenger compartment heater and ventilation system	162
2. Battery, Heater/heat output switch, Current supply relay, Fuse holder A, Fuse holder C, Fuse 45 on fuse holder C, Fuse 64 on fuse holder C	163
3. Heater/heat output switch, Fuse holder C, Circulation pump	164
4. Heater/heat output switch, Fresh air blower series resistor with overheating fuse, Hot air blower	165
5. Light switch, Heater/heat output switch, Fresh air and air recirculation flap control motor	166
019 - Climatic, right-hand drive , (L0R),(9AP)	167-175
1. Climatic, right-hand drive , (L0R),(9AP)	167
2. Battery, Current supply relay, Air conditioning system control unit, Fuse 2 on fuse holder A, Fuse 45 on fuse holder C, Fuse 64 on fuse holder C	168
3. Ignition/starter switch, High-pressure sender, Air conditioning system control unit, Terminal 15 voltage supply relay, Fuse 42 on fuse holder C	169
4. Air conditioning system control unit, Auxiliary coolant heater relay, Diagnostic connection, Circulation pump	170
5. Air conditioning system control unit, Terminal 30 voltage supply relay, Continued coolant circulation pump	171
6. Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Air conditioner compressor regulating valve, Fresh air blower	172
7. Potentiometer for temperature flap control motor, Potentiometer for defroster flap control motor, Air conditioning system control unit, Temperature flap control motor, Defroster flap control motor	173
8. Potentiometer for footwell vent control motor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Footwell flap control motor, Air distribution flap control motor	174
9. Centre vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Air conditioning system control unit, Air recirculation flap control motor	175
020 - Climatronic, right-hand drive , (L0R),(9AD)	176-186
1. Climatronic, right-hand drive , (L0R),(9AD)	176
2. Battery, Fuse 2 on fuse holder A, Fuse 42 on fuse holder C, Fuse 45 on fuse holder C, Fuse 64 on fuse holder C	177
3. Climatronic control unit, Fuse 62 on fuse holder C, Circulation pump	178
4. Climatronic control unit, Terminal 30 voltage supply relay, Continued coolant circulation pump	179
5. Climatronic control unit, Air conditioner compressor regulating valve, Diagnostic connection	180
6. Fresh air blower control unit, Climatronic control unit, Fresh air blower	181
7. High-pressure sender, Potentiometer for defroster flap control motor, Air quality sensor, Climatronic control unit, Defroster flap control motor	182
8. Potentiometer for left temperature flap control motor, Potentiometer for footwell vent control motor, Climatronic control unit, Left temperature flap control motor, Footwell flap control motor	183
9. Potentiometer for right temperature flap control motor, Potentiometer for air distribution flap control motor, Climatronic control unit, Right temperature flap control motor, Air distribution flap control motor	184

10. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor	185
11. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit	186
021 - Interface for external use , (UF1)	187-195
1. Interface for external use , (UF1)	187
2. Battery, Ignition/starter switch, Fuse 2 in fuse holder A, Fuse 3 in fuse holder A, Fuse 70 on fuse holder C, Fuse 71 on fuse holder C	188
3. Earth point, lower part of right A-pillar, Earth point, lower part of left A-pillar	189
4. Starter motor relay, Onboard supply control unit, Voltage supply relay 2, Fuse 7 on fuse holder C, Fuse 69 on fuse holder C, Fuse 72 on fuse holder C	190
5. Onboard supply control unit, Left side light bulb, Left tail light bulb, Front left turn signal bulb, Rear left turn signal bulb, Front right turn signal bulb, Rear right turn signal bulb, Left turn signal repeater bulb, Right turn signal repeater bulb	191
6. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right reversing light bulb, Left headlight dipped beam bulb, Fuse 29 on fuse holder C, Fuse 53 on fuse holder C, Left headlight range control motor	192
7. Headlight range control regulator, Steering column combination switch, Brake light switch, Onboard supply control unit, Engine control unit, Right headlight dipped beam bulb, Fuse 55 on fuse holder C, Right headlight range control motor	193
8. Light switch, Onboard supply control unit, Right headlight main beam bulb, Fuse 32 on fuse holder C	194
9. Parking brake contact switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Left headlight main beam bulb, Radio, Fuse 30 on fuse holder C	195
022 - 2.0l diesel engine , CDDBA	196-212
1. 2.0l diesel engine , CDDBA	196
2. Battery, Starter, Starter motor relay	197
3. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder B, Fuse 5 on fuse holder A	198
4. Main relay, Engine control unit, Heater element for crankcase breather, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	199
5. Engine control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 65 on fuse holder C	200
6. Charge pressure sender, Intake air temperature sender, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	201
7. Lambda probe, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	202
8. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	203
9. Coolant temperature sender, Air mass meter, Accelerator position sender, Accelerator position sender 2, Engine control unit	204
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Fuel pressure sender, Engine control unit, Exhaust gas recirculation control motor	205
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Position sender for charge pressure positioner, Throttle valve module, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	206
12. Brake light switch, Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	207
13. Engine control unit	208
14. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine control unit, Continued coolant circulation pump	209
15. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine control unit	210
16. Fuel gauge sender, Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	211
17. Oil pressure switch, Dash panel insert	212
023 - 2.0l diesel engine , CDCA	213-229
1. 2.0l diesel engine , CDCA	213
2. Battery, Starter, Starter motor relay	214
3. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder B, Fuse 5 on fuse holder A	215
4. Main relav. Engine control unit. Heater element for crankcase breather. Fuse 10 on fuse holder C.	216

Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	
5. Engine control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 65 on fuse holder C	217
6. Charge pressure sender, Intake air temperature sender, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	218
7. Lambda probe, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	219
8. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	220
9. Coolant temperature sender, Air mass meter, Accelerator position sender, Accelerator position sender 2, Engine control unit	221
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine control unit, Exhaust gas recirculation control motor	222
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	223
12. Brake light switch, Engine control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	224
13. Engine control unit	225
14. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine control unit, Continued coolant circulation pump	226
15. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine control unit	227
16. Fuel gauge sender, Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	228
17. Oil pressure switch, Dash panel insert	229
024 - Preparation for trailer coupling , (L0R)	230-234
1. Preparation for trailer coupling , (L0R)	230
2. Battery, Trailer detector control unit, Fuse 6 on fuse holder A, Fuse 6 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Diagnostic connection	231
3. Brake light switch, Trailer detector control unit	232
4. Reversing light switch, Left tail light cluster, Fuse 3 on fuse holder C	233
5. Light switch, Dash panel insert, Rear fog light warning lamp, Right tail light cluster	234
025 - Vehicle location system , (B1D)	235-237
1. Vehicle location system , (B1D)	235
2. Control unit in dash panel insert, Control unit for vehicle location system, Dash panel insert, Fuse 22 on fuse holder C, Fuse 42 on fuse holder C, Diagnostic connection	236
3. Control unit for vehicle location system, GPS aerial, GSM aerial	237
026 - Basic equipment, right-hand drive	238-266
1. Basic equipment, right-hand drive	238
2. Battery, Starter	239
3. Terminal 58b relief relay, Voltage supply relay 2	240
4. Alternator with voltage regulator, Terminal 15 voltage supply relay, Onboard supply control unit	241
5. Ignition/starter switch, Onboard supply control unit	242
6. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay	243
7. Light switch, Button illumination bulb, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	244
8. Light switch, Fuse 16 on fuse holder C, Fuse 53 on fuse holder C	245
9. Light switch, Switch and instrument illumination regulator, Headlight range control regulator, Fuse 28 on fuse holder C	246
10. Front left headlight	247
11. Left fog light bulb, Front left headlight, Left turn signal repeater bulb	248
12. Right fog light bulb, Front right headlight, Right turn signal repeater bulb	249
13. Front right headlight, Fuse 32 on fuse holder C, Fuse 55 on fuse holder C	250
14. Reversing light switch, Left tail light cluster, Fuse 3 on fuse holder C, Left number plate light	251
15. Right tail light cluster, Right number plate light	252
16. Brake light switch	253
17. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	254
18. Steering column combination switch, Steering angle sender, Horn plate	255
19. Turn signal switch, Steering column combination switch, Washer pump	256
20. Multifunction display call-up button, Cruise control system (CCS) SET button, Steering column combination switch	257
21. Heated rear window button, Light 1 for front centre console background lighting, Fuse 44 on fuse holder C, Heated rear window	258
22. Front interior light. Centre interior light	259

23. Hazard warning lights button, Windscreen wiper motor	260
24. Fuel tank filler flap central locking actuator, Bonnet contact switch, Treble horn	261
25. Dash panel insert, Driver door lock unit, Front passenger door lock unit, Rear left door lock unit, Rear right door lock unit	262
26. Driver side belt switch, Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp	263
27. Fuel pump, Fuel pump control unit, Dash panel insert	264
28. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Dash panel insert, Radio	265
29. Parking brake contact switch, Dash panel insert, Handbrake warning lamp, Fuse 38 on fuse holder C, Fuse 52 on fuse holder C, Fuse 54 on fuse holder C, Electric socket, Cigarette lighter, 12 V socket, 12 V socket 2	266
027 - Airbag systems for RHD vehicles , (L0R)	267-272
1. Airbag systems for RHD vehicles , (L0R)	267
2. Battery, Ignition/starter switch, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 2 on fuse holder A, Fuse 9 on fuse holder C	268
3. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	269
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	270
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	271
6. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Diagnostic connection	272
028 - Radio navigation system , (L0R),(8AY),(7UC),(7UK)	273-278
1. Radio navigation system , (L0R),(8AY),(7UC),(7UK)	273
2. Battery, Control unit with display for radio and navigation, Fuse 2 in fuse holder A, Fuse 67 on fuse holder C	274
3. Control unit with display for radio and navigation, Front left loudspeaker, Front right loudspeaker, Telephone microphone, Diagnostic connection	275
4. Control unit with display for radio and navigation, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	276
5. Control unit with display for radio and navigation, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	277
6. Control unit with display for radio and navigation, Aerial, GPS aerial	278
029 - Radio system , (L0R),(8AN),(8AG)	279-284
1. Radio system , (L0R),(8AN),(8AG)	279
2. Battery, Light switch, Radio, Fuse 2 in fuse holder A, Fuse 67 on fuse holder C	280
3. Dash panel insert, Radio, Front left loudspeaker, Front right loudspeaker, Diagnostic connection	281
4. Radio, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	282
5. Radio, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	283
6. Radio, Aerial	284
030 - Parking aid (PDC)	285-290
1. Parking aid (PDC)	285
2. Parking aid control unit	286
3. Parking aid button, Parking aid control unit	287
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	288
5. Rear parking aid warning buzzer, Front parking aid warning buzzer, Warning buzzer 2 for rear parking aid, Parking aid control unit	289
6. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	290
031 - Radio system , (8UA),(8AE),(8DD)	291-296
1. Radio system , (8UA),(8AE),(8DD)	291
2. Battery, Radio, Fuse 2 in fuse holder A, Fuse 67 on fuse holder C	292
3. Radio, Front left loudspeaker, Front right loudspeaker, Telephone microphone, Diagnostic connection	293
4. Radio, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	294
5. Radio, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	295
6. Radio, Aerial, Aerial amplifier	296
032 - 2.0l petrol engine , CFPA	297-312
1. 2.0l petrol engine , CFPA	297
2. Batterv. Starter. Starter motor relav	298

3. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse 14 on fuse holder C, Continued coolant circulation pump	299
4. Main relay, Engine control unit, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	300
5. Clutch pedal switch, Intake manifold pressure sender, Engine control unit, Fuel pressure regulating valve, Fuse 12 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	301
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	302
7. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	303
8. Air mass meter, Engine control unit, Circulation pump	304
9. Lambda probe, Lambda probe after catalytic converter, Engine control unit	305
10. Accelerator position sender, Throttle valve drive for electric throttle, Throttle valve module, Engine control unit	306
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	307
12. Engine speed sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Engine control unit	308
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	309
14. Cruise control system switch, Steering column combination switch, Brake light switch, ABS control unit, Engine control unit	310
15. Radiator fan control unit, Engine control unit, Radiator fan	311
16. Oil pressure switch, Fuel system pressurisation pump, Fuel pump control unit, Dash panel insert	312
033 - Auxiliary coolant heater , CFPA	313-318
1. Auxiliary coolant heater , CFPA	313
2. Battery, Engine control unit, Fuse 2 on fuse holder A, Fuse 15 on fuse holder C, Fuse 36 on fuse holder C, Fresh air blower	314
3. Onboard supply control unit, Auxiliary coolant heater control unit, Fuse 62 on fuse holder C, Metering pump	315
4. Auxiliary coolant heater control unit, Continued coolant circulation pump	316
5. Auxiliary coolant heater control unit, Glow plug for heater, Combustion air blower	317
6. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit	318
034 - Radio system , (L0R),(8UA),(8AE),(8DD)	319-324
1. Radio system , (L0R),(8UA),(8AE),(8DD)	319
2. Radio, Fuse 67 on fuse holder C	320
3. Radio, Front left loudspeaker, Front right loudspeaker, Diagnostic connection	321
4. Radio, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	322
5. Radio, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	323
6. Radio, Aerial, Aerial amplifier	324
035 - Hardtop	325-329
1. Hardtop	325
2. Heated rear window button, Brake light switch, Onboard supply control unit, Fuse 42 on fuse holder C	326
3. Heated rear window relay, Onboard supply control unit, Fuse 5 on fuse holder B, Heated rear window, Heated rear window for hardtop	327
4. Load area illumination switch, Fuse 63 on fuse holder C	328
5. Rear interior light button, Control unit for special installations, Additional brake light bulb, Load area illumination bulb	329
036 - Exterior lighting , (7L6)	330-341
1. Exterior lighting , (7L6)	330
2. Onboard supply control unit, Data bus diagnostic interface	331
3. Light switch, Onboard supply control unit	332
4. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit	333
5. Onboard supply control unit, Front left headlight	334
6. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	335
7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	336
8. Onboard supply control unit, Front right headlight	337
9. Left tail light, Left number plate light	338
10. Reversina liacht switch. Riacht tail liacht. Riacht number plate liacht	339

11. Headlight dipper and flasher switch, Brake light switch, Dash panel insert, Fuse 42 on fuse holder C	340
12. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	341
037 - Exterior lighting , (7L3)	342-354
1. Exterior lighting , (7L3)	342
2. Ignition/starter switch, Terminal 15 voltage supply relay, Terminal 58b relief relay, Voltage supply relay 2, Fuse 29 on fuse holder C, Fuse 55 on fuse holder C	343
3. Light switch, Light switch illumination bulb, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	344
4. Light switch, Headlight dipper and flasher switch, Fuse 16 on fuse holder C, Fuse 53 on fuse holder C	345
5. Light switch, Switch and instrument illumination regulator, Headlight range control regulator, Fuse 28 on fuse holder C	346
6. Front left headlight	347
7. Left fog light bulb, Front left headlight, Left turn signal repeater bulb	348
8. Right fog light bulb, Front right headlight, Right turn signal repeater bulb	349
9. Front right headlight, Fuse 32 on fuse holder C	350
10. Left tail light, Left number plate light	351
11. Reversing light switch, Right tail light, Right number plate light	352
12. Brake light switch, Control unit in dash panel insert, Engine control unit, Dash panel insert	353
13. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	354
038 - Fuse assignment for models with start/stop system , (7L6)	355-377
1. Fuse assignment for models with start/stop system , (7L6)	355
2. Starter, Light switch, Starter relay 1, Starter relay 2	356
3. Battery, Alternator with voltage regulator, Battery monitor control unit, Data bus diagnostic interface, Fuse 1 on fuse holder A	357
4. Starter motor relay, Fuse 2 on fuse holder A	358
5. Headlight dipper and flasher switch, Headlight relay, Blocking diode, Terminal 15 voltage supply relay, Voltage supply relay 1	359
6. Automatic glow period control unit, Main relay, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A	360
7. Fuel pump relay, ABS control unit, Terminal 30 voltage supply relay, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B	361
8. Auxiliary coolant heater relay, 10-pin connector, Washer pump, Circulation pump	362
9. Ignition/starter switch, Left brake light bulb, Right brake light bulb, High-level brake light bulb, Heated exterior mirror on driver side, Heated exterior mirror on passenger side	363
10. Treble horn, Driver door control unit, Front passenger door control unit, Control unit for vehicle location system, Windscreen wiper motor, Front interior light	364
11. Rear left door control unit, Rear right door control unit, Onboard supply control unit, Auxiliary coolant heater control unit, Load area illumination bulb	365
12. Alarm horn, Differential lock control unit, Heated rear window	366
13. Coil connector, Anti-theft alarm sensor, Multifunction steering wheel control unit, Transfer box control unit	367
14. Number plate light	368
15. Washer pump switch (automatic wash/wipe and headlight washer system), Button for TCS and electronic stabilisation program, Steering column combination switch, Driving program button, Reversing light switch, Parking aid control unit, Left washer jet heater element	369
16. Brake light switch, Airbag control unit, Front passenger side airbag deactivated warning lamp, Normal operation warning lamp in transfer box operating unit, Heater element for crankcase breather, Fuse 42 on fuse holder C	370
17. Oil level and oil temperature sender, Control unit in dash panel insert, Transfer box control unit, Control unit for vehicle location system	371
18. Automatic gearbox control unit, Selector lever sensors control unit, Ignition key withdrawal lock solenoid, Fuse 70 on fuse holder C, Fuse 71 on fuse holder C, 6-pin connector, 10-pin connector	372
19. Button for left seat heating, Button for right seat heating, Voltage supply relay 2, Seat heating control unit, 10-pin connector, Cigarette lighter	373
20. Mirror adjustment switch, Current supply relay, Electric socket, 12 V socket, 12 V socket 2	374
21. Air mass meter, Charge pressure control solenoid valve, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Continued coolant circulation pump	375
22. Lambda probe heater	376
23. Trailer detector control unit	377
039 - 2.0l diesel engine , CNFA	378-394
1. 2.0l diesel engine , CNFA	378
2. Battery, Starter, Starter motor relay, Main relay	379
3. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relav. Engine control unit. Fuse 1 on fuse holder A. Fuse 2 on fuse holder B. Fuse 4	380

on fuse holder A, Fuse 5 on fuse holder A	
4. Engine control unit, Heater element for crankcase breather, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	381
5. Air mass meter, Engine control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 65 on fuse holder C	382
6. Automatic glow period control unit, Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	383
7. Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine control unit	384
8. Charge pressure sender, Intake air temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	385
9. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	386
10. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	387
11. Brake light switch, Clutch pedal switch, Engine control unit	388
12. Engine control unit, Continued coolant circulation pump	389
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Fuel pressure sender, Engine control unit, Exhaust gas recirculation control motor	390
14. Throttle valve module, Engine speed sender, Throttle valve potentiometer, Fuel temperature sender, Position sender for charge pressure positioner, Throttle valve module, Engine control unit	391
15. Cruise control system switch, Onboard supply control unit, Engine control unit	392
16. Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert	393
17. Oil pressure switch, Oil level and oil temperature sender, Dash panel insert	394
040 - Basic equipment	395-415
1. Basic equipment	395
2. Battery, Starter, Starter motor relay, Fuse 2 on fuse holder A	396
3. Light switch, Terminal 15 voltage supply relay, Terminal 58b relief relay, Voltage supply relay 2	397
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine/motor control unit	398
5. Alternator with voltage regulator, Heated rear window button, Fuse 4 on fuse holder B, Heated rear window	399
6. Ignition/starter switch	400
7. Steering column combination switch, Steering angle sender	401
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	402
9. Turn signal switch, Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	403
10. Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch	404
11. Driver door lock unit, Front passenger door lock unit	405
12. Fuel tank filler flap central locking actuator, Bonnet contact switch, Rear left door lock unit, Rear right door lock unit	406
13. Front interior light, Centre interior light	407
14. Hazard warning lights button, Treble horn, Bass horn	408
15. Windscreen wiper motor	409
16. Dash panel insert	410
17. Driver side belt switch, Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Warning lamp for airbag deactivated on driver side	411
18. Fuel gauge, Fuel pump, Ignition and starter key warning system buzzer and gong, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp	412
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	413
20. Parking brake contact switch, Dash panel insert, Radio, Electric socket, Cigarette lighter	414
21. Light switch, Light 1 for front centre console background lighting, 12 V socket, Left washer jet heater element	415
041 - Preparation for mobile telephone , (9W7)	416-418
1. Preparation for mobile telephone , (9W7)	416
2. Onboard supply control unit, Data bus diagnostic interface, Telephone controls control unit, Fuse 68 on fuse holder C	417
3. Emergency assistance call button, Telephone controls control unit, Radio/RNS, Telephone microphone	418
042 - 8-speed automatic gearbox with Tiptronic . CSHA.(G1G)	419-424

1. 8-speed automatic gearbox with Tiptronic , CSHA,(G1G)	419
2. Automatic gearbox control unit, Selector lever sensors control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Ignition key withdrawal lock solenoid, Fuse 58 on fuse holder C, Selector lever position display	420
3. Automatic gearbox control unit, Selector lever sensors control unit, Automatic gearbox pressure regulating valve 6, Automatic gearbox pressure regulating valve 7, Accumulator solenoid, Fuse 31 on fuse holder C	421
4. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Gear sensor, Automatic gearbox control unit, Engine control unit, Dash panel insert	422
5. Data bus diagnostic interface, Diagnostic connection	423
6. Ignition/starter switch, Starter motor relay, Left reversing light bulb, Right reversing light bulb	424
043 - 2.0l diesel engine , CNEA, CSHA	425-441
1. 2.0l diesel engine , CNEA, CSHA	425
2. Battery, Starter, Starter motor relay, Main relay	426
3. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder B, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A	427
4. Engine control unit, Heater element for crankcase breather, Fuse 3 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	428
5. Air mass meter, Engine control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 65 on fuse holder C	429
6. Automatic glow period control unit, Engine control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	430
7. Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine control unit	431
8. Charge pressure sender, Intake air temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	432
9. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	433
10. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	434
11. Brake light switch, Clutch pedal switch, Engine control unit	435
12. Engine control unit, Continued coolant circulation pump	436
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine control unit, Exhaust gas recirculation control motor	437
14. Throttle valve module, Engine speed sender, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine control unit	438
15. Cruise control system switch, Automatic gearbox control unit, Onboard supply control unit, Engine control unit	439
16. Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert	440
17. Oil pressure switch, Oil level and oil temperature sender, Dash panel insert	441
044 - 2.0l diesel engine , CNEA,CSHA,(7L6)	442-463
1. 2.0l diesel engine , CNEA,CSHA,(7L6)	442
2. Terminal 15 voltage supply relay, Voltage supply relay 2, Fuse 54 on fuse holder C	443
3. Battery, Starter, Starter relay 1, Starter relay 2, Fuse 1 on fuse holder A, Fuse 5 on fuse holder A	444
4. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Battery monitor control unit, Auxiliary coolant heater relay, Data bus diagnostic interface, Fuse 2 on fuse holder B	445
5. Voltage stabiliser, Data bus diagnostic interface, Fuse 16 on fuse holder C, Fuse 67 on fuse holder C	446
6. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Data bus diagnostic interface	447
7. Data bus diagnostic interface, Diagnostic connection	448
8. Heater element for crankcase breather, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	449
9. Main relay, Engine control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 65 on fuse holder C	450
10. Lambda probe. Automatic glow period control unit. Engine control unit. Glow plug 1. Glow plug 2.	451

Glow plug 3, Glow plug 4	
11. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	452
12. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	453
13. Start/Stop operation button, Air mass meter, Engine control unit	454
14. Accelerator position sender, Accelerator position sender 2, Engine control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	455
15. Brake light switch, Charge pressure sender, Intake air temperature sender, Engine control unit	456
16. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine control unit, Continued coolant circulation pump	457
17. Radiator fan control unit, Engine control unit, Radiator fan	458
18. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine control unit, Exhaust gas recirculation control motor	459
19. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine control unit	460
20. Cruise control system switch, Steering column combination switch, Clutch pedal switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	461
21. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert, Fuse 42 on fuse holder C	462
22. Oil pressure switch, Dash panel insert	463
045 - Multifunction steering wheel	464-466
1. Multifunction steering wheel	464
2. Multifunction buttons on left in steering wheel, Steering column combination switch, Airbag control unit, Multifunction steering wheel control unit, Fuse 42 on fuse holder C, Fuse 45 on fuse holder C	465
3. Steering column combination switch, Multifunction steering wheel control unit	466
046 - Seat heating	467-470
1. Seat heating	467
2. Battery, Onboard supply control unit, Voltage supply relay 2, Fuse 2 in fuse holder A, Fuse 4 on fuse holder B, Fuse 57 on fuse holder C	468
3. Light switch, Button for left seat heating, Button for right seat heating, Seat heating control unit	469
4. Seat heating control unit, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	470
047 - Passenger compartment heater and ventilation system , (9AA)	471-473
1. Passenger compartment heater and ventilation system , (9AA)	471
2. Heater/heat output switch, Onboard supply control unit, Fuse 3 on fuse holder C, Fuse 45 on fuse holder C, Fuse 68 on fuse holder C, Fresh air and air recirculation flap control motor	472
3. Heater/heat output switch, Terminal 30 voltage supply relay, Fresh air blower series resistor with overheating fuse, Fresh air blower, Circulation pump	473
048 - Climatic , (9AP)	474-480
1. Climatic , (9AP)	474
2. Air conditioning system control unit, Auxiliary coolant heater relay, Fuse 3 on fuse holder C, Fuse 45 on fuse holder C, Fuse 62 on fuse holder C, Fuse 68 on fuse holder C	475
3. Air conditioning system control unit, Terminal 30 voltage supply relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 36 on fuse holder C, Continued coolant circulation pump, Circulation pump	476
4. Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	477
5. High-pressure sender, Air conditioning system control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	478
6. Centre vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Air conditioning system control unit, Defroster flap control motor	479
7. Air conditioning system control unit, Temperature flap control motor, Air recirculation flap control motor, Footwell flap control motor, Air distribution flap control motor	480
049 - Climatronic	481-490
1. Climatronic	481
2. Climatronic control unit, Circulation pump	482
3. Climatronic control unit, Continued coolant circulation pump	483
4. Fresh air blower control unit, Climatronic control unit, Fresh air blower	484
5. High-pressure sender, Air quality sensor, Climatronic control unit, Fuse 42 on fuse holder C	485
6. Climatronic control unit, Onboard supply control unit, Air conditioner compressor regulating valve	486
7. Potentiometer for defroster flap control motor. Potentiometer for footwell vent control motor.	487

Climatronic control unit, Defroster flap control motor, Footwell flap control motor	
8. Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Climatronic control unit, Left temperature flap control motor, Right temperature flap control motor	488
9. Potentiometer for fresh air/air recirculation, air flow flap control motor, Potentiometer for air distribution flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Air distribution flap control motor	489
10. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit	490
050 - Basic equipment	491-511
1. Basic equipment	491
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	492
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	493
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine/motor control unit	494
5. Alternator with voltage regulator, Fuse 4 on fuse holder B	495
6. Ignition/starter switch	496
7. Steering column combination switch, Steering angle sender	497
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	498
9. Turn signal switch, Intermittent wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	499
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch	500
11. Driver door lock unit, Front passenger door lock unit	501
12. Heated rear window button, Bonnet contact switch, Rear left door lock unit, Rear right door lock unit, Heated rear window	502
13. Front interior light, Centre interior light	503
14. Hazard warning lights button, Treble horn, Bass horn	504
15.	505
16. Dash panel insert, Windscreen wiper motor	506
17. Driver side belt switch, Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Warning lamp for airbag deactivated on driver side	507
18. Fuel gauge, Fuel pump, Ignition and starter key warning system buzzer and gong, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp	508
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	509
20. Parking brake contact switch, Dash panel insert, Radio, Electric socket, Cigarette lighter	510
21. Light switch, Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	511
051 - CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN	512-519
1. CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN	512
2. Onboard supply control unit	513
3. Onboard supply control unit	514
4. Onboard supply control unit	515
5. Onboard supply control unit	516
6. Onboard supply control unit, Fuse 29 on fuse holder C, Diagnostic connection	517
7. Onboard supply control unit	518
8. Alternator with voltage regulator, Onboard supply control unit	519
052 - Airbag systems , (L0L)	520-525
1. Airbag systems , (L0L)	520
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 1 on fuse holder C	521
3. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	522
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	523
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	524
6. Airbag control unit, Onboard supply control unit, Dash panel insert, Diagnostic connection	525
053 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	526-531

1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	526
2. Brake light switch, ABS control unit, Fuse holder B, Fuse 1 on fuse holder B	527
3. TCS and ESP button, Driving program button, ABS control unit, Fuse 1 on fuse holder C	528
4. ABS control unit, Onboard supply control unit, Dash panel insert, ABS warning lamp, Traction control system warning lamp, Driving program warning light	529
5. ABS control unit	530
6. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Diagnostic connection	531
054 - All-wheel drive	532-537
1. All-wheel drive	532
2. Axle differential lock Hall sender 1, Differential lock control unit, Control solenoid	533
3. Rear differential lock switch, Differential lock control unit, Transfer box control unit, Fuse 11 on fuse holder C, Fuse 42 on fuse holder C, Fuse 46 on fuse holder C	534
4. Running gear program switch, Transfer box control unit, Normal operation warning lamp in transfer box operating unit, Reduction gearing warning lamp in transfer box operating unit, Inter-axle lock-up warning lamp in transfer box operating unit	535
5. Transfer box inter-axle lock-up switch, Hall sender for transfer box, Transfer box control unit, Transfer box control motor	536
6. Onboard supply control unit, Transfer box control unit, Dash panel insert, Reduction gearing warning lamp	537
055 - Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (9M5),(7VL),(7VE)	538-543
1. Auxiliary coolant heater, supplementary heater, supplementary heater which can be operated independently , (9M5),(7VL),(7VE)	538
2. Fresh air blower relay, Electric fuel pump 2 relay, Auxiliary coolant heater control unit	539
3. Auxiliary coolant heater control unit, Heater coolant shut-off valve, Circulation pump	540
4. Auxiliary coolant heater control unit, Glow plug for heater, Remote control receiver for auxiliary coolant heater, Metering pump	541
5. Onboard supply control unit, Roof display unit, Auxiliary coolant heater control unit	542
6. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit, Combustion air blower	543
056 - Central locking, window regulators and mirror adjustment , (L0L)	544-554
1. Central locking, window regulators and mirror adjustment , (L0L)	544
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 20 on fuse holder C, Fuse 66 on fuse holder C	545
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	546
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	547
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	548
6. Mirror adjustment switch, Onboard supply control unit, Fuse 19 on fuse holder C, Fuse 33 on fuse holder C	549
7. Suppression filter, Onboard supply control unit, Driver side exterior mirror	550
8. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 48 on fuse holder C, Driver side window regulator motor	551
9. Front passenger side window regulator button, Front passenger door control unit, Fuse 49 on fuse holder C, Front passenger side window regulator motor	552
10. Switch and instrument illumination regulator, Fuse 28 on fuse holder C, Front passenger side exterior mirror	553
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	554
057 - Fuse assignment , (7L3)	555-585
1. Fuse assignment , (7L3)	555
2. Battery, Starter, Alternator with voltage regulator, Fuse holder A	556
3. Terminal 15 voltage supply relay, Fuse holder A	557
4. Automatic glow period control unit, Fuse holder A, Fuse 38 on fuse holder C, Radiator fan	558
5. ABS control unit, Fuse 1 on fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 6 on fuse holder B	559
6. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 2 on fuse holder B	560
7. Main relay, Fuse 14 on fuse holder C, Fuse 37 on fuse holder C, Fuse 56 on fuse holder C	561
8. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	562
9. Fuse 2 on fuse holder C. Fuse 12 on fuse holder C. Fuse 71 on fuse holder C	563

10. Fuse 34 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	564
11. Fuse 1 on fuse holder C, Fuse 10 on fuse holder C	565
12. Fuse 6 on fuse holder C, Fuse 16 on fuse holder C, Fuse 25 on fuse holder C, Fuse 31 on fuse holder C	566
13. Coil connector, Multifunction steering wheel control unit, Fuse 42 on fuse holder C, Fuse 63 on fuse holder C	567
14. Reversing light switch, Tachograph, Air quality sensor, Oil level and oil temperature sender	568
15. Headlight relay, Fuse 7 on fuse holder C, Fuse 53 on fuse holder C	569
16. Starter motor relay, Terminal 58b relief relay	570
17. Fuse 29 on fuse holder C, Fuse 55 on fuse holder C	571
18. Fuse 17 on fuse holder C, Fuse 28 on fuse holder C	572
19. Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 60 on fuse holder C	573
20. Fuse 3 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 61 on fuse holder C	574
21. Fuse 18 on fuse holder C, Fuse 30 on fuse holder C, Fuse 32 on fuse holder C	575
22. Fuse 62 on fuse holder C, Fuse 65 on fuse holder C	576
23. Fuse 8 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	577
24. Fuse 19 on fuse holder C, Fuse 20 on fuse holder C, Fuse 21 on fuse holder C, Fuse 43 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C	578
25. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Fuse 58 on fuse holder C	579
26. Voltage supply relay 2, Fuse 54 on fuse holder C, Fuse 57 on fuse holder C, Fuse 69 on fuse holder C	580
27. Current supply relay, Fuse 13 on fuse holder C, Fuse 33 on fuse holder C, Fuse 72 on fuse holder C	581
28. Fuse 52 on fuse holder C, Fuse 59 on fuse holder C, Fuse 68 on fuse holder C	582
29. Fuse 9 on fuse holder C, Fuse 11 on fuse holder C, Fuse 46 on fuse holder C, Fuse 66 on fuse holder C	583
30. Rain and light sensor, Anti-theft alarm sensor, Telephone controls control unit, Dash panel insert, Fuse 45 on fuse holder C, Diagnostic connection	584
31. Fuse 44 on fuse holder C, Fuse 64 on fuse holder C, Fuse 67 on fuse holder C	585
058 - Seat heating	586-588
1. Seat heating	586
2. Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat heating control unit, Fuse 13 on fuse holder C	587
3. Seat heating control unit, Fuse 57 on fuse holder C, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	588
059 - Exterior lighting , (7L3),(8K0),(8K1)	589-602
1. Exterior lighting , (7L3),(8K0),(8K1)	589
2. Light switch, Headlight dipper and flasher switch	590
3. Light switch, Fuse 16 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 60 on fuse holder C	591
4. Light switch, Switch and instrument illumination regulator, Headlight range control regulator, Fuse 28 on fuse holder C	592
5. Onboard supply control unit	593
6. Onboard supply control unit, Front left headlight, Fuse 29 on fuse holder C	594
7. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	595
8. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	596
9. Front right headlight, Fuse 32 on fuse holder C, Fuse 55 on fuse holder C	597
10. Left tail light	598
11. Right tail light, Left number plate light, Right number plate light	599
12. Reversing light switch, Control unit in dash panel insert, Dash panel insert	600
13. Brake light switch, Engine control unit	601
14. Load area illumination switch, Additional brake light bulb, Load area illumination bulb	602
060 - Exterior lighting , (7L3),(7L6),(8k3),(8k8)	603-616
1. Exterior lighting , (7L3),(7L6),(8k3),(8k8)	603
2. Light switch, Onboard supply control unit	604
3. Light switch, Onboard supply control unit	605
4. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit	606
5. Onboard supply control unit, Front left headlight	607
6. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	608

7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	609
8. Onboard supply control unit, Front right headlight	610
9. Onboard supply control unit	611
10. Left tail light	612
11. Right tail light, Left number plate light, Right number plate light	613
12. Reversing light switch, Dash panel insert, Automatic anti-dazzle interior mirror	614
13. Brake light switch, Fuse 42 on fuse holder C	615
14. Load area illumination switch, Additional brake light bulb, Load area illumination bulb	616
061 - Electronic logbook, chip card reader unit , (9ND)	617-619
1. Electronic logbook, chip card reader unit , (9ND)	617
2. Tachograph, Onboard supply control unit, Fuse 28 on fuse holder C, Fuse 42 on fuse holder C, Fuse 45 on fuse holder C	618
3. Tachograph, Tachograph sender, Onboard supply control unit	619
062 - Trailer coupling , (1D1),(1D7)	620-623
1. Trailer coupling , (1D1),(1D7)	620
2. Trailer detector control unit, Fuse 6 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	621
3. Brake light switch, Trailer detector control unit, Onboard supply control unit, Trailer socket	622
4. Rear fog light cut-out contact switch, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	623
063 - 2.0l petrol engine , CFPA	624-640
1. 2.0l petrol engine , CFPA	624
2. Battery, Starter, Alternator with voltage regulator, Starter motor relay, Fuse 1 on fuse holder A	625
3. Main relay, Engine control unit, Fuse 4 on fuse holder A, Fuse 23 on fuse holder C, Fuse 38 on fuse holder C	626
4. Engine control unit, Fuse 12 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	627
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 14 on fuse holder C, Continued coolant circulation pump	628
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	629
7. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	630
8. Throttle valve module, Accelerator position sender, Throttle valve drive for electric throttle, Engine control unit	631
9. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine control unit	632
10. Intake air temperature sender, Coolant temperature sender, Engine control unit, Circulation pump	633
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	634
12. Clutch pedal switch, Air mass meter, Intake manifold pressure sender, Terminal 15 voltage supply relay, Engine control unit, Fuel pressure regulating valve	635
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	636
14. Brake light switch, ABS control unit, Engine control unit	637
15. Cruise control system switch, Engine control unit	638
16. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit, Dash panel insert	639
17. Oil pressure switch, Dash panel insert	640
064 - 2.0l diesel engine , CNFA,CNFB	641-656
1. 2.0l diesel engine , CNFA,CNFB	641
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 38 on fuse holder C	642
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	643
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	644
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	645
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	646
7. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 5 on fuse holder C, Fuse 35 on fuse holder C	647
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1. Exhaust gas temperature sender 3. Exhaust gas temperature sender 4. Engine/motor control	648

unit	
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	649
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	650
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	651
12. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	652
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuse 42 on fuse holder C	653
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	654
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	655
16. Oil pressure switch, Dash panel insert	656
065 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	657-674
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	657
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	658
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	659
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	660
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 16 on fuse holder C, Fuse 67 on fuse holder C	661
6. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	662
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	663
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	664
9. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 5 on fuse holder C, Fuse 35 on fuse holder C	665
10. Start/Stop operation button, Engine/motor control unit	666
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	667
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	668
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	669
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	670
15. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	671
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	672
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	673
18. Oil pressure switch, Dash panel insert	674
066 - Fuse assignment for models with start/stop system , (7L6)	675-702
1. Fuse assignment for models with start/stop system , (7L6)	675
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	676
3. Ignition/starter switch, Starter motor relay, Terminal 15 voltage supply relay, Fuse holder A	677
4. Automatic glow period control unit, Fuse holder A, Fuse 38 on fuse holder C, Radiator fan	678
5. ABS control unit, Fuse 1 on fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 6 on fuse holder B	679
6. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 2 on fuse holder B	680
7. Voltage stabiliser, Engine control unit, Starter relay 1, Starter relay 2	681
8. Headlight relay, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C	682
9. Main relay, Fuse 37 on fuse holder C, Fuse 56 on fuse holder C	683
10. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	684
11. Fuse 2 on fuse holder C, Fuse 12 on fuse holder C, Fuse 71 on fuse holder C	685
12. Fuse 34 on fuse holder C. Fuse 35 on fuse holder C. Fuse 36 on fuse holder C	686

13. Fuse 1 on fuse holder C, Fuse 10 on fuse holder C, Fuse 25 on fuse holder C	687
14. Fuse 6 on fuse holder C, Fuse 16 on fuse holder C, Fuse 31 on fuse holder C, Fuse 63 on fuse holder C	688
15. Brake light switch, Coil connector, Multifunction steering wheel control unit, Fuse 42 on fuse holder C	689
16. Reversing light switch, Tachograph, Air quality sensor, Oil level and oil temperature sender, Transfer box control unit, High-level brake light bulb, Diagnostic connection	690
17. Fuse 14 on fuse holder C, Fuse 53 on fuse holder C, Fuse 55 on fuse holder C	691
18. Fuse 9 on fuse holder C, Fuse 11 on fuse holder C, Fuse 28 on fuse holder C, Fuse 29 on fuse holder C	692
19. Fuse 7 on fuse holder C, Fuse 18 on fuse holder C, Fuse 30 on fuse holder C, Fuse 32 on fuse holder C	693
20. Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Fuse 62 on fuse holder C	694
21. Fuse 8 on fuse holder C, Fuse 19 on fuse holder C, Fuse 65 on fuse holder C	695
22. Fuse 20 on fuse holder C, Fuse 21 on fuse holder C, Fuse 43 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C	696
23. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Fuse 58 on fuse holder C	697
24. Current supply relay, Voltage supply relay 2, Fuse 57 on fuse holder C, Fuse 69 on fuse holder C, Fuse 72 on fuse holder C	698
25. Fuse 13 on fuse holder C, Fuse 33 on fuse holder C, Fuse 52 on fuse holder C	699
26. Fuse 46 on fuse holder C, Fuse 59 on fuse holder C, Fuse 66 on fuse holder C, Fuse 68 on fuse holder C	700
27. Rain and light sensor, Anti-theft alarm sensor, Telephone controls control unit, Fuse 45 on fuse holder C, Diagnostic connection	701
28. Fuse 44 on fuse holder C, Fuse 64 on fuse holder C, Fuse 67 on fuse holder C	702
067 - Parking aid (PDC)	703-707
1. Parking aid (PDC)	703
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Warning buzzer 2 for rear parking aid, Parking aid control unit	704
3. Parking aid button, Parking aid control unit, Onboard supply control unit	705
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	706
5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	707
068 - 2.0l diesel engine with start/stop system , CNFA,(7L6)	708-729
1. 2.0l diesel engine with start/stop system , CNFA,(7L6)	708
2. Terminal 15 voltage supply relay, Voltage supply relay 2, Fuse 54 on fuse holder C	709
3. Battery, Starter, Starter relay 1, Starter relay 2, Fuse 1 on fuse holder A, Fuse 5 on fuse holder A	710
4. Alternator with voltage regulator, Fuel pump relay, Terminal 30 voltage supply relay, Battery monitor control unit, Auxiliary coolant heater relay, Data bus diagnostic interface, Fuse 2 on fuse holder B	711
5. Voltage stabiliser, Data bus diagnostic interface, Fuse 16 on fuse holder C, Fuse 67 on fuse holder C	712
6. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Data bus diagnostic interface	713
7. Data bus diagnostic interface, Diagnostic connection	714
8. Heater element for crankcase breather, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 25 on fuse holder C	715
9. Main relay, Engine control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 65 on fuse holder C	716
10. Lambda probe, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	717
11. Coolant temperature sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	718
12. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	719
13. Start/Stop operation button, Air mass meter, Engine control unit	720
14. Accelerator position sender, Accelerator position sender 2, Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	721
15. Brake light switch, Charge pressure sender, Intake air temperature sender, Engine control unit	722
16. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine control unit. Continued coolant circulation pump	723

17. Radiator fan control unit, Engine control unit, Radiator fan	724
18. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine control unit, Exhaust gas recirculation control motor	725
19. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine control unit	726
20. Cruise control system switch, Steering column combination switch, Clutch pedal switch, Clutch pedal switch for stop/start system, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	727
21. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert, Fuse 42 on fuse holder C	728
22. Oil pressure switch, Dash panel insert	729
069 - Anti-theft alarm system	730-733
1. Anti-theft alarm system	730
2. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit, Rear left door lock unit	731
3. Bonnet contact switch, Alarm horn, Onboard supply control unit, Rear right door lock unit	732
4. Interior monitoring switch, Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Onboard supply control unit	733
070 - 2.0l diesel engine , CNEA,CSHA	734-749
1. 2.0l diesel engine , CNEA,CSHA	734
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 38 on fuse holder C	735
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	736
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	737
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	738
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	739
7. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 5 on fuse holder C, Fuse 35 on fuse holder C	740
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	741
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	742
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	743
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	744
12. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	745
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuse 42 on fuse holder C	746
14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	747
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	748
16. Oil pressure switch, Dash panel insert	749
071 - Multifunction steering wheel	750-752
1. Multifunction steering wheel	750
2. Multifunction buttons on left in steering wheel, Steering column combination switch, Multifunction steering wheel control unit, Fuse 42 on fuse holder C	751
3. Steering column combination switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit	752
072 - 8-speed automatic gearbox with Tiptronic , (G1G)	753-757
1. 8-speed automatic gearbox with Tiptronic , (G1G)	753
2. Automatic gearbox control unit, Selector lever sensors control unit, Solenoid valve 1, Selector lever lock solenoid, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Ignition key withdrawal lock solenoid, Fuse 58 on fuse holder C, Selector lever position display	754
3. Gear selector position P switch, Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Automatic gearbox pressure regulating valve 6, Selector lever position P solenoid. Automatic gearbox pressure regulating valve 7. Accumulator	755

solenoid, Fuse 10 on fuse holder C	
4. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Gear sensor, Automatic gearbox control unit, Engine control unit, Dash panel insert	756
5. Ignition/starter switch, Starter motor relay, Left reversing light bulb, Right reversing light bulb, Diagnostic connection	757
073 - Hardtop	758-762
1. Hardtop	758
2. Heated rear window button, Brake light switch, Onboard supply control unit, Fuse 42 on fuse holder C, Fuse 44 on fuse holder C	759
3. Heated rear window relay, Onboard supply control unit, Fuse 5 on fuse holder B, Heated rear window, Heated rear window for hardtop	760
4. Load area illumination switch, Fuse 9 on fuse holder C	761
5. Rear interior light button, Control unit for special installations, Additional brake light bulb, Load area illumination bulb	762
074 - Interface for external use , (UF1)	763-770
1. Interface for external use , (UF1)	763
2. Onboard supply control unit, Voltage supply relay 2, Fuse 2 on fuse holder A, Fuse 31 on fuse holder C, Fuse 69 on fuse holder C, Fuse 72 on fuse holder C	764
3. Onboard supply control unit, Fuse 7 on fuse holder C, Fuse 30 on fuse holder C, Fuse 32 on fuse holder C, Fuse 71 on fuse holder C	765
4. Onboard supply control unit	766
5. Onboard supply control unit	767
6. Light switch, Onboard supply control unit	768
7. Onboard supply control unit, Fuse 29 on fuse holder C, Fuse 55 on fuse holder C	769
8. Parking brake contact switch, Dash panel insert, Radio	770
075 - Preparation for mobile telephone , (9W7)	771-773
1. Preparation for mobile telephone , (9W7)	771
2. Emergency assistance call button, Onboard supply control unit, Telephone controls control unit, Fuse 45 on fuse holder C	772
3. Telephone controls control unit, Radio/RNS, Telephone microphone	773
076 - Preparation for radio , (8UB)	774-777
1. Preparation for radio , (8UB)	774
2. Voltage stabiliser, Fuse 67 on fuse holder C	775
3. Ignition/starter switch, Dash panel insert	776
4. Front left loudspeaker, Front right loudspeaker, Aerial, Aerial amplifier	777
077 - Radio system , (8AN),(8AG)	778-782
1. Radio system , (8AN),(8AG)	778
2. Ignition/starter switch, Onboard supply control unit, Radio, Fuse 67 on fuse holder C	779
3. Dash panel insert, Radio, Front left loudspeaker, Front right loudspeaker, Diagnostic connection	780
4. Radio, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	781
5. Radio, Rear right loudspeaker, Aerial, Front right treble loudspeaker, Front right bass loudspeaker, Aerial amplifier	782
078 - Radio system , (8DD),(8UA),(8UE),(IG6)	783-789
1. Radio system , (8DD),(8UA),(8UE),(IG6)	783
2. Radio, Connection for external audio sources	784
3. Onboard supply control unit, Voltage stabiliser, Telephone controls control unit, Radio, Fuse 67 on fuse holder C	785
4. Telephone controls control unit, Radio, Telephone microphone	786
5. Radio, Front left loudspeaker, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	787
6. Radio, Front right loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	788
7. Radio, Aerial, Aerial amplifier	789
079 - Radio navigation system , (8AY),(7UC),(7UK),(7T6)	790-796
1. Radio navigation system , (8AY),(7UC),(7UK),(7T6)	790
2. Control unit with display for radio and navigation, Connection for external audio sources	791
3. Control unit with display for radio and navigation, Onboard supply control unit, Voltage stabiliser, Telephone controls control unit, Fuse 67 on fuse holder C	792
4. Control unit with display for radio and navigation, Telephone controls control unit, Telephone microphone	793
5. Control unit with display for radio and navigation, Front left loudspeaker, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	794
6. Control unit with display for radio and navigation, Front right loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	795
7. Control unit with display for radio and navigation, Aerial, Aerial amplifier, GPS aerial	796
080 - Air supply for toothed belt drive (engine dust kit) . (7L3).(7L6).(S1D)	797-798

1. Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	797
2. Brake light switch, Blower relay, Engine control unit, Fuse 5 on fuse holder B, Fuse 42 on fuse holder C, Air supply blower	798
081 - Supplementary heater , CNFA,CNFB,CNEA,CSHA,(9M5)	799-801
1. Supplementary heater , CNFA,CNFB,CNEA,CSHA,(9M5)	799
2. Onboard supply control unit, Auxiliary coolant heater control unit, Fuse 62 on fuse holder C, Metering pump	800
3. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit, Glow plug for heater, Combustion air blower	801
082 - Reversing camera (Rear Assist)	802-804
1. Reversing camera (Rear Assist)	802
2. Onboard supply control unit, Reversing camera system control unit, Reversing camera	803
3. Control unit with display for radio and navigation, Reversing camera system control unit	804
083 - Interface for external use , (UF1)	805-811
1. Interface for external use , (UF1)	805
2. Voltage supply relay 2, Fuse 6 on fuse holder B, Fuse 31 on fuse holder C, Fuse 69 on fuse holder C, Fuse 72 on fuse holder C	806
3. Parking brake contact switch, Dash panel insert, Radio	807
4. Onboard supply control unit, Fuse 30 on fuse holder C	808
5. Reversing light switch, Onboard supply control unit	809
6. Light switch, Terminal 58b relief relay, Onboard supply control unit	810
7. Onboard supply control unit, Fuse 7 on fuse holder C, Fuse 71 on fuse holder C	811
084 - 8-speed automatic gearbox with Tiptronic , (G1G)	812-817
1. 8-speed automatic gearbox with Tiptronic , (G1G)	812
2. Selector lever locked in position P switch, Selector lever sensors control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Ignition key withdrawal lock solenoid, Fuse 3 on fuse holder C, Fuse 45 on fuse holder C	813
3. Switch and instrument illumination regulator, Gear selector position P switch, Selector lever sensors control unit, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Fuse 28 on fuse holder C, Selector lever position display	814
4. Gearbox oil temperature sender, Gear sensor, Selector lever sensors control unit, Engine control unit, Selector lever lock solenoid, Selector lever position P solenoid, Automatic gearbox pressure regulating valve 7, Accumulator solenoid, Fuse 10 on fuse holder C	815
5. Gearbox input speed sender, Gearbox output speed sender, Onboard supply control unit, Dash panel insert	816
6. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Left reversing light bulb, Right reversing light bulb	817
085 - 2.0l diesel engine , CNEA,CSHA	818-833
1. 2.0l diesel engine , CNEA,CSHA	818
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 38 on fuse holder C	819
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	820
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	821
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	822
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	823
7. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 35 on fuse holder C	824
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	825
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	826
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	827
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	828
12. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	829
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuse 42 on fuse holder C	830

14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	831
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	832
16. Oil pressure switch, Dash panel insert	833
086 - Climatronic , (9AD)	834-841
1. Climatronic , (9AD)	834
2. Coolant pump relay, Climatronic control unit, Auxiliary coolant heater relay, Onboard supply control unit, Fuse 3 on fuse holder C, Fuse 62 on fuse holder C	835
3. Climatronic control unit, Terminal 30 voltage supply relay, Fuse 15 on fuse holder C, Fuse 36 on fuse holder C, Continued coolant circulation pump, Circulation pump	836
4. Fresh air blower control unit, Climatronic control unit, Fuse 64 on fuse holder C, Fresh air blower	837
5. High-pressure sender, Air quality sensor, Climatronic control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	838
6. Climatronic control unit, Defroster flap control motor, Left temperature flap control motor, Footwell flap control motor	839
7. Climatronic control unit, Right temperature flap control motor, Fresh air/air recirculation, air flow flap control motor, Air distribution flap control motor	840
8. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit	841
087 - Basic equipment	842-862
1. Basic equipment	842
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	843
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	844
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine/motor control unit	845
5. Alternator with voltage regulator, Fuse 4 on fuse holder B, Fuse 16 on fuse holder C	846
6. Ignition/starter switch	847
7. Steering column combination switch, Steering angle sender	848
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	849
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	850
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Headlight relay	851
11. Bonnet contact switch, Driver door lock unit, Front passenger door lock unit	852
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	853
13. Front interior light, Centre interior light	854
14. Hazard warning lights button, Reversing light switch	855
15. Brake light switch, Bass horn	856
16. Dash panel insert, Windscreen wiper motor	857
17. Driver side belt switch, Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Warning lamp for airbag deactivated on driver side	858
18. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp	859
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	860
20. Parking brake contact switch, Dash panel insert, Radio, Electric socket, Cigarette lighter	861
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	862
088 - Auxiliary coolant heater , (7VE),(7VL)	863-868
1. Auxiliary coolant heater , (7VE),(7VL)	863
2. Air conditioning system control unit, Fresh air blower isolation relay, Fresh air blower series resistor with overheating fuse, Fuse 68 on fuse holder C, Fresh air blower	864
3. Fuel delivery unit, Fresh air blower relay, Electric fuel pump 2 relay, Auxiliary coolant heater control unit, Fuse 2 on fuse holder B	865
4. Auxiliary coolant heater control unit, Heater coolant shut-off valve, Fuse 62 on fuse holder C, Metering pump, Circulation pump	866
5. Onboard supply control unit, Roof display unit, Auxiliary coolant heater control unit, Aerial, Remote control receiver for auxiliary coolant heater, Fuse 45 on fuse holder C	867
6. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit. Glow plug for heater. Combustion air blower. Coolant circulation pump 2	868

089 - Central locking, window regulators and mirror adjustment , (L0L)	869-879
1. Central locking, window regulators and mirror adjustment , (L0L)	869
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 20 on fuse holder C, Fuse 66 on fuse holder C	870
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	871
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	872
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	873
6. Mirror adjustment switch, Onboard supply control unit, Fuse 19 on fuse holder C, Fuse 33 on fuse holder C	874
7. Suppression filter, Onboard supply control unit, Driver side exterior mirror	875
8. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 48 on fuse holder C, Driver side window regulator motor	876
9. Front passenger side window regulator button, Front passenger door control unit, Fuse 49 on fuse holder C, Front passenger side window regulator motor	877
10. Switch and instrument illumination regulator, Fuse 28 on fuse holder C, Front passenger side exterior mirror	878
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	879
090 - Fuse assignment , (7L3)	880-911
1. Fuse assignment , (7L3)	880
2. Battery, Starter, Alternator with voltage regulator, Fuse holder A	881
3. Terminal 15 voltage supply relay, Fuse holder A	882
4. Automatic glow period control unit, Fuse holder A, Fuse 38 on fuse holder C, Radiator fan	883
5. ABS control unit, Fuse 1 on fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 6 on fuse holder B	884
6. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 2 on fuse holder B	885
7. Main relay, Fuse 14 on fuse holder C, Fuse 56 on fuse holder C	886
8. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	887
9. Fuse 2 on fuse holder C, Fuse 12 on fuse holder C, Fuse 71 on fuse holder C	888
10. Fuse 34 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	889
11. Fuse 1 on fuse holder C, Fuse 10 on fuse holder C	890
12. Fuse 6 on fuse holder C, Fuse 16 on fuse holder C, Fuse 25 on fuse holder C, Fuse 31 on fuse holder C	891
13. Coil connector, Multifunction steering wheel control unit, Fuse 42 on fuse holder C, Fuse 63 on fuse holder C	892
14. Reversing light switch, Tachograph, Air quality sensor, Oil level and oil temperature sender	893
15. Headlight relay, Fuse 7 on fuse holder C, Fuse 53 on fuse holder C	894
16. Starter motor relay, Terminal 58b relief relay	895
17. Fuse 28 on fuse holder C, Fuse 55 on fuse holder C	896
18. Fuse 28 on fuse holder C, Fuse 29 on fuse holder C	897
19. Fuse 17 on fuse holder C	898
20. Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 60 on fuse holder C	899
21. Fuse 3 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 61 on fuse holder C	900
22. Fuse 18 on fuse holder C, Fuse 30 on fuse holder C, Fuse 32 on fuse holder C	901
23. Fuse 62 on fuse holder C, Fuse 65 on fuse holder C	902
24. Fuse 8 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	903
25. Fuse 19 on fuse holder C, Fuse 20 on fuse holder C, Fuse 21 on fuse holder C, Fuse 43 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C	904
26. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Fuse 58 on fuse holder C	905
27. Voltage supply relay 2, Fuse 54 on fuse holder C, Fuse 57 on fuse holder C, Fuse 69 on fuse holder C	906
28. Current supply relay, Fuse 13 on fuse holder C, Fuse 33 on fuse holder C, Fuse 72 on fuse holder C	907
29. Fuse 52 on fuse holder C, Fuse 59 on fuse holder C, Fuse 68 on fuse holder C	908
30. Fuse 9 on fuse holder C, Fuse 11 on fuse holder C, Fuse 22 on fuse holder C, Fuse 46 on fuse holder C, Fuse 66 on fuse holder C	909
31. Rain and light sensor, Anti-theft alarm sensor, Telephone controls control unit, Dash panel insert. Fuse 37 on fuse holder C. Fuse 45 on fuse holder C. Diaanostic connection	910

32. Fuse 44 on fuse holder C, Fuse 64 on fuse holder C, Fuse 67 on fuse holder C	911
091 - Fuse assignment for models with start/stop system , (7L6)	912-940
1. Fuse assignment for models with start/stop system , (7L6)	912
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	913
3. Ignition/starter switch, Starter motor relay, Terminal 15 voltage supply relay, Fuse holder A	914
4. Automatic glow period control unit, Fuse holder A, Fuse 38 on fuse holder C, Radiator fan	915
5. ABS control unit, Fuse 1 on fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 6 on fuse holder B	916
6. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 2 on fuse holder B	917
7. Voltage stabiliser, Engine control unit, Starter relay 1, Starter relay 2	918
8. Fuse 3 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C	919
9. Headlight relay, Main relay, Fuse 56 on fuse holder C	920
10. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C	921
11. Fuse 2 on fuse holder C, Fuse 12 on fuse holder C, Fuse 71 on fuse holder C	922
12. Fuse 34 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	923
13. Fuse 1 on fuse holder C, Fuse 10 on fuse holder C, Fuse 25 on fuse holder C	924
14. Fuse 6 on fuse holder C, Fuse 16 on fuse holder C, Fuse 31 on fuse holder C, Fuse 63 on fuse holder C	925
15. Brake light switch, Coil connector, Multifunction steering wheel control unit, Fuse 42 on fuse holder C	926
16. Start/Stop operation button, Reversing light switch, Tachograph, Air quality sensor, Oil level and oil temperature sender, Transfer box control unit, High-level brake light bulb, Diagnostic connection	927
17. Fuse 14 on fuse holder C, Fuse 53 on fuse holder C, Fuse 55 on fuse holder C	928
18. Fuse 9 on fuse holder C, Fuse 11 on fuse holder C, Fuse 28 on fuse holder C, Fuse 29 on fuse holder C	929
19. Fuse 7 on fuse holder C, Fuse 18 on fuse holder C, Fuse 30 on fuse holder C, Fuse 32 on fuse holder C	930
20. Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Fuse 62 on fuse holder C	931
21. Fuse 8 on fuse holder C, Fuse 19 on fuse holder C, Fuse 65 on fuse holder C	932
22. Fuse 20 on fuse holder C, Fuse 21 on fuse holder C, Fuse 43 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C	933
23. Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Fuse 58 on fuse holder C	934
24. Voltage supply relay 2, Fuse 57 on fuse holder C, Fuse 69 on fuse holder C	935
25. Fuse 13 on fuse holder C, Fuse 33 on fuse holder C	936
26. Current supply relay, Fuse 52 on fuse holder C, Fuse 59 on fuse holder C, Fuse 72 on fuse holder C	937
27. Fuse 46 on fuse holder C, Fuse 66 on fuse holder C, Fuse 68 on fuse holder C	938
28. Rain and light sensor, Anti-theft alarm sensor, Telephone controls control unit, Fuse 37 on fuse holder C, Fuse 45 on fuse holder C, Diagnostic connection	939
29. Fuse 44 on fuse holder C, Fuse 64 on fuse holder C, Fuse 67 on fuse holder C	940
092 - Exterior lighting , (7L3/8K0/8K1)	941-952
1. Exterior lighting , (7L3/8K0/8K1)	941
2. Steering column combination switch, Dash panel insert, Fuse holder C	942
3. Terminal 58b relief relay, Fuse holder C	943
4. Light switch, Onboard supply control unit	944
5. Onboard supply control unit, Fuse 17 on fuse holder C, Fuse 28 on fuse holder C	945
6. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	946
7. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	947
8. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	948
9. Onboard supply control unit, Left tail light, Right tail light	949
10. Onboard supply control unit, Left number plate light, Right number plate light	950
11. Brake light switch, Reversing light switch, Onboard supply control unit, Engine control unit	951
12. Load area illumination switch, Additional brake light bulb, Load area illumination bulb	952
093 - Exterior lighting , (7L3/8K3/8K8),(7L6/8K0/8K1/8K3/8K8)	953-963
1. Exterior lighting , (7L3/8K3/8K8),(7L6/8K0/8K1/8K3/8K8)	953
2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	954

3. Onboard supply control unit	955
4. Light switch, Onboard supply control unit	956
5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	957
6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	958
7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	959
8. Onboard supply control unit, Left tail light, Right tail light	960
9. Onboard supply control unit, Left number plate light, Right number plate light	961
10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	962
11. Load area illumination switch, Additional brake light bulb, Load area illumination bulb	963
094 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	964-981
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	964
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	965
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	966
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	967
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 16 on fuse holder C, Fuse 43 on fuse holder C	968
6. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	969
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	970
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	971
9. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 35 on fuse holder C	972
10. Start/Stop operation button, Engine/motor control unit	973
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	974
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	975
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	976
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	977
15. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	978
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	979
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	980
18. Oil pressure switch, Dash panel insert	981
095 - Auxiliary lights , (2Y1),(E5W)	982-983
1. Auxiliary lights , (2Y1),(E5W)	982
2. Steering column combination switch, Headlight main beam relay, Fuse 5 on fuse holder B	983
096 - Trailer coupling , (1D1),(1D7)	984-987
1. Trailer coupling , (1D1),(1D7)	984
2. Trailer detector control unit, Fuse 6 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	985
3. Brake light switch, Trailer detector control unit, Onboard supply control unit, Trailer socket	986
4. Rear fog light cut-out contact switch, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	987
097 - Trailer coupling , (1D1),(1D7)	988-991
1. Trailer coupling , (1D1),(1D7)	988
2. Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	989
3. Brake light switch, Trailer detector control unit, Onboard supply control unit, Trailer socket	990
4. Rear fog light cut-out contact switch, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	991

098 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	992-997
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS)	992
2. Brake light switch, ABS control unit, Fuse 3 on fuse holder B, ABS control unit fuse 1	993
3. Button for TCS and electronic stabilisation program, Driving program button, ABS control unit, Fuse 40 on fuse holder C	994
4. ABS control unit, Onboard supply control unit, Dash panel insert, ABS warning lamp, Traction control system warning lamp, Driving program warning light	995
5. ABS control unit	996
6. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	997
099 - Exterior lighting , (7L3),(8K0),(8K1)	998-1009
1. Exterior lighting , (7L3),(8K0),(8K1)	998
2. Steering column combination switch, Dash panel insert, Fuse holder C	999
3. Terminal 58b relief relay, Fuse holder C	1000
4. Light switch, Onboard supply control unit	1001
5. Onboard supply control unit, Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1002
6. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1003
7. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1004
8. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1005
9. Onboard supply control unit, Left tail light, Right tail light	1006
10. Onboard supply control unit, Left number plate light, Right number plate light	1007
11. Brake light switch, Reversing light switch, Onboard supply control unit, Engine control unit	1008
12. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1009
100 - Exterior lighting , (7L3/8K3/8K8),(7L6/8K0/8K1/8K3/8K8)	1010-1020
1. Exterior lighting , (7L3/8K3/8K8),(7L6/8K0/8K1/8K3/8K8)	1010
2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	1011
3. Onboard supply control unit	1012
4. Light switch, Onboard supply control unit	1013
5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1014
6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1015
7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1016
8. Onboard supply control unit, Left tail light, Right tail light	1017
9. Onboard supply control unit, Left number plate light, Right number plate light	1018
10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1019
11. Load area illumination switch, Additional brake light bulb, Load area illumination bulb	1020
101 - Interface for external use , (UF1)	1021-1027
1. Interface for external use , (UF1)	1021
2. Voltage supply relay 2, Fuse 6 on fuse holder B, Fuse 37 on fuse holder C, Fuse 47 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	1022
3. Parking brake contact switch, Dash panel insert, Radio	1023
4. Onboard supply control unit, Fuse 27 on fuse holder C	1024
5. Reversing light switch, Onboard supply control unit	1025
6. Light switch, Terminal 58b relief relay, Onboard supply control unit	1026
7. Onboard supply control unit, Fuse 31 on fuse holder C, Fuse 52 on fuse holder C	1027
102 - 8-speed automatic gearbox with Tiptronic , (G1G)	1028-1033
1. 8-speed automatic gearbox with Tiptronic , (G1G)	1028
2. Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Ignition key withdrawal lock solenoid, Fuse 2 on fuse holder C, Fuse 59 on fuse holder C	1029
3. Switch and instrument illumination regulator, Gear selector position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6. Fuse 22 on fuse holder C. Selector lever position	1030

display	
4. Gearbox oil temperature sender, Gear sensor, Automatic gearbox control unit, Selector lever sensors control unit, Engine control unit, Selector lever lock solenoid, Selector lever position P solenoid, Automatic gearbox pressure regulating valve 7, Accumulator solenoid, Fuse 38 on fuse holder C	1031
5. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Onboard supply control unit, Dash panel insert	1032
6. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Left reversing light bulb, Right reversing light bulb	1033
103 - Automatic anti-dazzle interior mirror, rain sensor	1034-1035
1. Automatic anti-dazzle interior mirror, rain sensor	1034
2. Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	1035
104 - Automatic anti-dazzle interior mirror, rain sensor	1036-1038
1. Automatic anti-dazzle interior mirror, rain sensor	1036
2. Onboard supply control unit, Automatic anti-dazzle interior mirror	1037
3. Rain and light sensor, Onboard supply control unit	1038
105 - Seat heating	1039-1041
1. Seat heating	1039
2. Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat heating control unit, Fuse 13 on fuse holder C	1040
3. Seat heating control unit, Fuse 57 on fuse holder C, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	1041
106 - Seat heating	1042-1044
1. Seat heating	1042
2. Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat heating control unit, Fuse 35 on fuse holder C, Fuse 45 on fuse holder C	1043
3. Seat heating control unit, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	1044
107 - Multifunction steering wheel	1045-1047
1. Multifunction steering wheel	1045
2. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Steering column combination switch, Multifunction steering wheel control unit, Fuse 42 on fuse holder C	1046
3. Steering column combination switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit	1047
108 - 2.0l diesel engine , CNFA,CNFB	1048-1063
1. 2.0l diesel engine , CNFA,CNFB	1048
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 38 on fuse holder C	1049
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	1050
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	1051
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1052
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	1053
7. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 35 on fuse holder C	1054
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1055
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	1056
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1057
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1058
12. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	1059
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1060
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1061

15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1062
16. Oil pressure switch, Dash panel insert	1063
109 - 2.0l diesel engine , CNFB	1064-1079
1. 2.0l diesel engine , CNFB	1064
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 9 on fuse holder C	1065
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1066
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C	1067
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1068
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Fuse 41 on fuse holder C	1069
7. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 32 on fuse holder C	1070
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1071
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1072
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1073
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1074
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1075
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1076
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1077
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1078
16. Oil pressure switch, Dash panel insert	1079
110 - 2.0l petrol engine , CFPA	1080-1096
1. 2.0l petrol engine , CFPA	1080
2. Battery, Starter, Alternator with voltage regulator, Starter motor relay, Fuse 1 on fuse holder A	1081
3. Main relay, Engine control unit, Fuse 4 on fuse holder A, Fuse 23 on fuse holder C, Fuse 38 on fuse holder C	1082
4. Engine control unit, Fuse 12 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	1083
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Fuse 14 on fuse holder C, Continued coolant circulation pump	1084
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	1085
7. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1086
8. Throttle valve module, Accelerator position sender, Throttle valve drive for electric throttle, Engine control unit	1087
9. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine control unit	1088
10. Intake air temperature sender, Coolant temperature sender, Engine control unit, Circulation pump	1089
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	1090
12. Clutch pedal switch, Air mass meter, Intake manifold pressure sender, Terminal 15 voltage supply relay, Engine control unit, Fuel pressure regulating valve	1091
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	1092
14. Brake light switch, ABS control unit, Engine control unit	1093
15. Cruise control system switch, Engine control unit	1094
16. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit, Dash panel insert	1095
17. Oil pressure switch, Dash panel insert	1096
111 - 2.0l petrol engine , CFPA	1097-1113
1. 2.0l petrol engine , CFPA	1097
2. Batterv. Starter. Alternator with voltaae regulator. Starter motor relav. Fuse 1 on fuse holder A.	1098

Fuse 4 on fuse holder A	
3. Main relay, Engine control unit, Fuse 15 on fuse holder C, Fuse 57 on fuse holder C	1099
4. Engine control unit, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C	1100
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Continued coolant circulation pump	1101
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	1102
7. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1103
8. Throttle valve module, Accelerator position sender, Throttle valve drive for electric throttle, Engine control unit	1104
9. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine control unit	1105
10. Intake air temperature sender, Coolant temperature sender, Engine control unit, Circulation pump	1106
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	1107
12. Clutch pedal switch, Air mass meter, Intake manifold pressure sender, Terminal 15 voltage supply relay, Engine control unit, Fuel pressure regulating valve, Fuse 38 on fuse holder C	1108
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	1109
14. Brake light switch, ABS control unit, Engine control unit	1110
15. Cruise control system switch, Engine control unit	1111
16. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit, Dash panel insert	1112
17. Oil pressure switch, Dash panel insert	1113
112 - 2.0l diesel engine , CNEA,CSHA	1114-1129
1. 2.0l diesel engine , CNEA,CSHA	1114
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 9 on fuse holder C	1115
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1116
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C	1117
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1118
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 41 on fuse holder C	1119
7. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 32 on fuse holder C	1120
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1121
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1122
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1123
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1124
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1125
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1126
14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	1127
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1128
16. Oil pressure switch, Dash panel insert	1129
113 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1130-1147
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1130
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1131
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1132
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C	1133
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser. Engine/motor control unit. Fuse 18 on fuse holder C. Fuse 38 on fuse holder C. Fuse 48	1134

on fuse holder C, Fuse 61 on fuse holder C	
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1135
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1136
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve, Fuse 41 on fuse holder C	1137
9. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 32 on fuse holder C	1138
10. Start/Stop operation button, Engine/motor control unit	1139
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1140
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1141
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1142
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1143
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1144
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1145
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1146
18. Oil pressure switch, Dash panel insert	1147
114 - 2.0l diesel engine with start/stop system , CNFA,CNFB,(7L6)	1148-1165
1. 2.0l diesel engine with start/stop system , CNFA,CNFB,(7L6)	1148
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1149
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	1150
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	1151
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 16 on fuse holder C, Fuse 67 on fuse holder C	1152
6. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1153
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1154
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	1155
9. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 5 on fuse holder C, Fuse 35 on fuse holder C	1156
10. Start/Stop operation button, Engine/motor control unit	1157
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1158
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	1159
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1160
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1161
15. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	1162
16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	1163
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1164
18. Oil pressure switch, Dash panel insert	1165
115 - 2.0l diesel engine with start/stop system , CNFA,CNFB,(7L6)	1166-1183
1. 2.0l diesel engine with start/stop system , CNFA,CNFB,(7L6)	1166
2. Batterv. Starter. Starter relav 1. Starter relav 2. Fuse holder A. Fuse 5 on fuse holder A	1167

3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 36 on fuse holder C	1168
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 10 on fuse holder C, Fuse 15 on fuse holder C, Fuse 23 on fuse holder C	1169
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 16 on fuse holder C, Fuse 43 on fuse holder C	1170
6. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1171
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1172
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Fuse 25 on fuse holder C	1173
9. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 35 on fuse holder C	1174
10. Start/Stop operation button, Engine/motor control unit	1175
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1176
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 12 on fuse holder C	1177
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1178
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1179
15. Radiator fan control unit, Engine/motor control unit, Fuse 34 on fuse holder C, Continued coolant circulation pump	1180
16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	1181
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1182
18. Oil pressure switch, Dash panel insert	1183
116 - 2.0l diesel engine with start/stop system , CNFB,(7L6)	1184-1201
1. 2.0l diesel engine with start/stop system , CNFB,(7L6)	1184
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1185
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1186
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C	1187
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1188
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1189
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1190
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Fuse 41 on fuse holder C	1191
9. Charge pressure sender, Lambda probe, Intake air temperature sender, Air mass meter, Engine/motor control unit, Fuse 32 on fuse holder C	1192
10. Start/Stop operation button, Engine/motor control unit	1193
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1194
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1195
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1196
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1197
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1198

16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	1199
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1200
18. Oil pressure switch, Dash panel insert	1201
117 - Airbag systems for RHD vehicles , (L0R)	1202-1207
1. Airbag systems for RHD vehicles , (L0R)	1202
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 1 on fuse holder C	1203
3. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	1204
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	1205
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1206
6. Airbag control unit, Onboard supply control unit, Dash panel insert, Diagnostic connection	1207
118 - Electronic logbook, chip card reader unit , (9ND)	1208-1210
1. Electronic logbook, chip card reader unit , (9ND)	1208
2. Tachograph, Onboard supply control unit, Fuse 22 on fuse holder C, Fuse 42 on fuse holder C, Fuse 53 on fuse holder C, Fuse 59 on fuse holder C	1209
3. Tachograph, Tachograph sender, Onboard supply control unit	1210
119 - Hardtop	1211-1215
1. Hardtop	1211
2. Heated rear window button, Brake light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1212
3. Heated rear window relay, Onboard supply control unit, Fuse 5 on fuse holder B, Fuse 62 on fuse holder C, Heated rear window, Heated rear window for hardtop	1213
4. Load area illumination switch, Onboard supply control unit	1214
5. Rear interior light button, Control unit for special installations, High-level brake light bulb, Load area illumination bulb, Fuse 53 on fuse holder C, Fuse 59 on fuse holder C	1215
120 - All-wheel drive	1216-1221
1. All-wheel drive	1216
2. Axle differential lock Hall sender 1, Differential lock control unit, Control solenoid	1217
3. Rear differential lock switch, Differential lock control unit, Transfer box control unit, Fuse 5 on fuse holder C, Fuse 12 on fuse holder C, Fuse 42 on fuse holder C	1218
4. Running gear program switch, Transfer box control unit, Normal operation warning lamp in transfer box operating unit, Reduction gearing warning lamp in transfer box operating unit, Inter-axle lock-up warning lamp in transfer box operating unit	1219
5. Transfer box inter-axle lock-up switch, Hall sender for transfer box, Transfer box control unit, Transfer box control motor	1220
6. Onboard supply control unit, Transfer box control unit, Dash panel insert, Reduction gearing warning lamp	1221
121 - Preparation for mobile telephone , (9W7),(9ZR)	1222-1224
1. Preparation for mobile telephone , (9W7),(9ZR)	1222
2. Emergency assistance call button, Onboard supply control unit, Telephone controls control unit, Fuse 59 on fuse holder C	1223
3. Telephone controls control unit, Radio/RNS, Telephone microphone	1224
122 - Preparation for mobile telephone , (9W0),(9ZI),(9ZS)	1225-1226
1. Preparation for mobile telephone , (9W0),(9ZI),(9ZS)	1225
2. Radio/RNS, Telephone microphone	1226
123 - Reversing camera (Rear Assist)	1227-1229
1. Reversing camera (Rear Assist)	1227
2. Onboard supply control unit, Reversing camera system control unit, Reversing camera	1228
3. Control unit with display for radio and navigation, Reversing camera system control unit	1229
124 - Fuse assignment	1230-1260
1. Fuse assignment	1230
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1231
3. Main relay, ABS control unit fuse 1, Fuse holder B	1232
4. Headlight main beam relay, Fuse holder B	1233
5. Current supply relay, Fresh air blower isolation relay, Fresh air blower fuse 1	1234
6. Headlight relay, Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1235
7. Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	1236
8. Ignition/starter switch	1237
9. Ignition/starter switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C, Fuse 5 on fuse holder C. Fuse 6 on fuse holder C. Fuse 7 on fuse holder C	1238

10. Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C	1239
11. Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	1240
12. Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C	1241
13. Fuse 21 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	1242
14. Fuse 19 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	1243
15. Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	1244
16. Fuse 31 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C	1245
17. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	1246
18. Reversing light switch, Dash panel insert	1247
19. Fuse 42 on fuse holder C	1248
20. Starter relay 1, Starter relay 2, Fuse 44 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	1249
21. Fuse 43 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C	1250
22. Fuse 53 on fuse holder C, Fuse 54 on fuse holder C, Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C	1251
23. Fuse 58 on fuse holder C, Fuse 59 on fuse holder C, Fuse 60 on fuse holder C	1252
24. Heated rear window relay, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	1253
25. Fuse 63 on fuse holder C, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	1254
26. Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1255
27. Connection 3 (58d), in main wiring harness	1256
28. Connection 3 (58d), in main wiring harness	1257
29. Coolant pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Continued coolant circulation pump	1258
30. Fresh air blower relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine control unit	1259
31. Fuel pump relay, Electric fuel pump 2 relay, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	1260
125 - Vehicle location system , (B1D),(711)	1261-1263
1. Vehicle location system , (B1D),(711)	1261
2. Control unit in dash panel insert, Control unit for vehicle location system, Dash panel insert, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 8 on fuse holder C, Fuse 42 on fuse holder C, Diagnostic connection	1262
3. Control unit for vehicle location system, GSM aerial, GPS aerial 2	1263
126 - Preparation for radio , (8UB)	1264-1267
1. Preparation for radio , (8UB)	1264
2. Dash panel insert, Fuse 17 on fuse holder C, Fuse 48 on fuse holder C	1265
3. Ignition/starter switch	1266
4. Front left loudspeaker, Front right loudspeaker, Aerial, Aerial amplifier	1267
127 - Radio system , (8AE),(8DD),(8UA),(8UE),(I6G),(I6I),(I7A),(I7D)	1268-1274
1. Radio system , (8AE),(8DD),(8UA),(8UE),(I6G),(I6I),(I7A),(I7D)	1268
2. Radio, Connection for external audio sources	1269
3. Telephone controls control unit, Radio, Telephone microphone, Fuse 17 on fuse holder C, Fuse 48 on fuse holder C	1270
4. Onboard supply control unit, Telephone controls control unit, Radio, Front left loudspeaker, Front right loudspeaker	1271
5. Radio, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1272
6. Radio, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	1273
7. Radio, Aerial, Aerial amplifier	1274
128 - Radio navigation system , (8AY),(7UC),(7UK),(7T6)	1275-1281
1. Radio navigation system , (8AY),(7UC),(7UK),(7T6)	1275
2. Control unit with display for radio and navigation, Connection for external audio sources	1276
3. Control unit with display for radio and navigation, Telephone controls control unit, Telephone microphone, Fuse 17 on fuse holder C, Fuse 48 on fuse holder C	1277
4. Control unit with display for radio and navigation, Onboard supply control unit, Telephone controls control unit, Front left loudspeaker, Front right loudspeaker	1278
5. Control unit with display for radio and navigation, Rear left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	1279
6. Control unit with display for radio and navigation. Rear right loudspeaker. Front right treble	1280

	loudspeaker, Front right bass loudspeaker	
	7. Control unit with display for radio and navigation, Aerial, Aerial amplifier, GPS aerial	1281
129 -	Anti-theft alarm system	1282-1285
	1. Anti-theft alarm system	1282
	2. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit, Rear left door lock unit	1283
	3. Bonnet contact switch, Alarm horn, Onboard supply control unit, Fuse 4 on fuse holder C, Rear right door lock unit	1284
	4. Interior monitoring switch, Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Onboard supply control unit	1285
130 -	Central locking, window regulators and mirror adjustment , (L0L)	1286-1296
	1. Central locking, window regulators and mirror adjustment , (L0L)	1286
	2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 60 on fuse holder C	1287
	3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	1288
	4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	1289
	5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	1290
	6. Mirror adjustment switch, Onboard supply control unit, Fuse 36 on fuse holder C, Fuse 55 on fuse holder C	1291
	7. Suppression filter, Onboard supply control unit, Driver side exterior mirror	1292
	8. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 13 on fuse holder C, Driver side window regulator motor	1293
	9. Front passenger side window regulator button, Front passenger door control unit, Fuse 14 on fuse holder C, Front passenger side exterior mirror, Front passenger side window regulator motor	1294
	10. Switch and instrument illumination regulator, Fuse 22 on fuse holder C	1295
	11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	1296
131 -	Passenger compartment heater and ventilation system , (9AA)	1297-1299
	1. Passenger compartment heater and ventilation system , (9AA)	1297
	2. Heater/heat output switch, Current supply relay, Onboard supply control unit, Fuse 2 on fuse holder C, Fresh air blower fuse 1	1298
	3. Heater/heat output switch, Terminal 30 voltage supply relay, Fresh air blower series resistor with overheating fuse, Fresh air blower, Circulation pump, Fresh air and air recirculation flap control motor	1299
132 -	Climatic , (9AP)	1300-1306
	1. Climatic , (9AP)	1300
	2. Air conditioning system control unit, Auxiliary coolant heater relay, Fuse 2 on fuse holder C, Fuse 15 on fuse holder C, Fuse 53 on fuse holder C, Fresh air blower fuse 1	1301
	3. Air conditioning system control unit, Terminal 30 voltage supply relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 23 on fuse holder C, Continued coolant circulation pump, Circulation pump	1302
	4. Fresh air blower relay, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	1303
	5. High-pressure sender, Air conditioning system control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	1304
	6. Centre vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Air conditioning system control unit, Defroster flap control motor	1305
	7. Air conditioning system control unit, Temperature flap control motor, Air recirculation flap control motor, Footwell flap control motor, Air distribution flap control motor	1306
133 -	Climatronic , (9AD)	1307-1314
	1. Climatronic , (9AD)	1307
	2. Coolant pump relay, Climatronic control unit, Auxiliary coolant heater relay, Onboard supply control unit, Fuse 15 on fuse holder C	1308
	3. Climatronic control unit, Terminal 30 voltage supply relay, Fuse 4 on fuse holder C, Fuse 23 on fuse holder C, Continued coolant circulation pump, Circulation pump	1309
	4. Fresh air blower control unit, Climatronic control unit, Fuse 2 on fuse holder C, Fuse 53 on fuse holder C, Fresh air blower fuse 1, Fresh air blower	1310
	5. High-pressure sender, Air quality sensor, Climatronic control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	1311
	6. Climatronic control unit, Defroster flap control motor, Left temperature flap control motor, Footwell flap control motor	1312
	7. Climatronic control unit. Riight temperature flap control motor. Fresh air/air recirculation. air	1313

flow flap control motor, Air distribution flap control motor	
8. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit	1314
134 - Supplementary heater , (9M5)	1315-1317
1. Supplementary heater , (9M5)	1315
2. Onboard supply control unit, Auxiliary coolant heater control unit, Glow plug for heater, Fuse 62 on fuse holder C, Metering pump	1316
3. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit, Combustion air blower	1317
135 - Auxiliary coolant heater , (7VE),(7VL)	1318-1323
1. Auxiliary coolant heater , (7VE),(7VL)	1318
2. Current supply relay, Air conditioning system control unit, Fresh air blower isolation relay, Fresh air blower series resistor with overheating fuse, Fresh air blower fuse 1, Fresh air blower	1319
3. Fuel delivery unit, Fresh air blower relay, Electric fuel pump 2 relay, Auxiliary coolant heater control unit, Fuse 2 on fuse holder B	1320
4. Auxiliary coolant heater control unit, Heater coolant shut-off valve, Fuse 15 on fuse holder C, Metering pump, Circulation pump	1321
5. Onboard supply control unit, Roof display unit, Auxiliary coolant heater control unit, Aerial, Remote control receiver for auxiliary coolant heater, Fuse 59 on fuse holder C	1322
6. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit, Glow plug for heater, Combustion air blower, Coolant circulation pump 2	1323
136 - Basic equipment	1324-1344
1. Basic equipment	1324
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1325
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1326
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	1327
5. Alternator with voltage regulator, Fuse 4 on fuse holder B, Fuse 19 on fuse holder C	1328
6. Ignition/starter switch	1329
7. Steering column combination switch, Steering angle sender	1330
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	1331
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	1332
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Headlight relay	1333
11. Bonnet contact switch, Front passenger door lock unit	1334
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	1335
13. Front interior light, Centre interior light	1336
14. Hazard warning lights button, Reversing light switch	1337
15. Brake light switch, Bass horn	1338
16. Dash panel insert, Windscreen wiper motor	1339
17. Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Driver side airbag deactivated warning lamp	1340
18. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp, Radio	1341
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	1342
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter	1343
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	1344
137 - Trailer coupling , (1D1),(1M0)	1345-1348
1. Trailer coupling , (1D1),(1M0)	1345
2. Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 41 on fuse holder C, Trailer socket	1346
3. Brake light switch, Trailer detector control unit, Onboard supply control unit, Trailer socket	1347
4. Rear fog light cut-out contact switch, Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	1348
138 - Trailer coupling , (1D7)	1349-1352
1. Trailer coupling , (1D7)	1349
2. Trailer detector control unit, Fuse 8 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C. Fuse 41 on fuse holder C	1350

3. Brake light switch, Trailer detector control unit, Onboard supply control unit	1351
4. Onboard supply control unit, Rear fog light warning lamp, Rear left fog light bulb	1352
139 - 8-speed automatic gearbox with Tiptronic , (G1G)	1353-1358
1. 8-speed automatic gearbox with Tiptronic , (G1G)	1353
2. Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Ignition key withdrawal lock solenoid, Fuse 2 on fuse holder C, Fuse 59 on fuse holder C	1354
3. Switch and instrument illumination regulator, Gear selector position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Fuse 22 on fuse holder C, Selector lever position display	1355
4. Gearbox oil temperature sender, Gear sensor, Automatic gearbox control unit, Selector lever sensors control unit, Engine control unit, Selector lever lock solenoid, Selector lever position P solenoid, Automatic gearbox pressure regulating valve 7, Accumulator solenoid, Fuse 38 on fuse holder C	1356
5. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Onboard supply control unit, Dash panel insert	1357
6. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Left reversing light bulb, Right reversing light bulb	1358
140 - Exterior lighting , (7L3/8K0/8K1)	1359-1370
1. Exterior lighting , (7L3/8K0/8K1)	1359
2. Steering column combination switch, Dash panel insert, Fuse holder C	1360
3. Terminal 58b relief relay, Fuse holder C	1361
4. Light switch, Onboard supply control unit	1362
5. Onboard supply control unit, Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1363
6. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1364
7. Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1365
8. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1366
9. Onboard supply control unit, Left tail light, Right tail light	1367
10. Onboard supply control unit, Left number plate light, Right number plate light	1368
11. Brake light switch, Reversing light switch, Onboard supply control unit, Engine control unit	1369
12. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1370
141 - Exterior lighting , (7L3/8K3/8K8),(7L6/8K0/8K1/8K3/8K8)	1371-1381
1. Exterior lighting , (7L3/8K3/8K8),(7L6/8K0/8K1/8K3/8K8)	1371
2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	1372
3. Onboard supply control unit	1373
4. Light switch, Onboard supply control unit	1374
5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1375
6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1376
7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1377
8. Onboard supply control unit, Left tail light, Right tail light	1378
9. Onboard supply control unit, Left number plate light, Right number plate light	1379
10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1380
11. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1381
142 - 2.0l diesel engine , CNFB	1382-1397
1. 2.0l diesel engine , CNFB	1382
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 9 on fuse holder C	1383
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1384
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C	1385
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1386
6. Charge pressure sender. Intake air temperature sender. Air mass meter. Engine/motor control unit.	1387

Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	1388
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1388
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1389
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1390
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1391
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1392
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1393
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	1394
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1395
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1396
16. Oil pressure switch, Dash panel insert	1397
143 - 2.0l diesel engine with start/stop system , CNFB,(7L6)	1398-1415
1. 2.0l diesel engine with start/stop system , CNFB,(7L6)	1398
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1399
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1400
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C	1401
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1402
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1403
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1404
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	1405
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1406
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	1407
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1408
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1409
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1410
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1411
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1412
16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	1413
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1414
18. Oil pressure switch, Dash panel insert	1415
144 - 2.0l diesel engine , CNEA,CSHA	1416-1431
1. 2.0l diesel engine , CNEA,CSHA	1416
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 9 on fuse holder C	1417
3. Alternator with voltage regulator, Fuel pump relay, Main relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1418
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C. Fuse 33 on fuse holder C. Fuse 38 on fuse holder C. Fuse 57 on fuse holder C	1419

5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1420
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	1421
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1422
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1423
9. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1424
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1425
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1426
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1427
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	1428
14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	1429
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1430
16. Oil pressure switch, Dash panel insert	1431
145 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1432-1449
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1432
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1433
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1434
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C	1435
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1436
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1437
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1438
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	1439
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1440
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	1441
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1442
12. Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1443
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1444
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1445
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1446
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1447
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1448
18. Oil pressure switch, Dash panel insert	1449
146 - 2.0l petrol engine , CFPA	1450-1466
1. 2.0l petrol engine , CFPA	1450
2. Battery, Starter, Alternator with voltage regulator, Starter motor relay, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A	1451
3. Main relav. Engine control unit. Fuse 15 on fuse holder C. Fuse 57 on fuse holder C	1452

4. Engine control unit, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C	1453
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Continued coolant circulation pump	1454
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	1455
7. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1456
8. Throttle valve module, Accelerator position sender, Throttle valve drive for electric throttle, Engine control unit	1457
9. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine control unit	1458
10. Intake air temperature sender, Coolant temperature sender, Engine control unit, Circulation pump	1459
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	1460
12. Clutch pedal switch, Air mass meter, Intake manifold pressure sender, Terminal 15 voltage supply relay, Engine control unit, Fuel pressure regulating valve, Fuse 38 on fuse holder C	1461
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	1462
14. Brake light switch, ABS control unit, Engine control unit	1463
15. Cruise control system switch, Engine control unit	1464
16. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit, Dash panel insert	1465
17. Oil pressure switch, Dash panel insert	1466
147 - Passenger compartment heater and ventilation system , (9AA)	1467-1470
1. Passenger compartment heater and ventilation system , (9AA)	1467
2. Ignition/starter switch, Heater/heat output switch, Onboard supply control unit, Fuse 53 on fuse holder C	1468
3. Heater/heat output switch, Current supply relay, Fresh air blower series resistor with overheating fuse, Fresh air blower fuse 1, Fresh air blower	1469
4. Heater/heat output switch, Terminal 30 voltage supply relay, Circulation pump, Fresh air and air recirculation flap control motor	1470
148 - Basic equipment	1471-1491
1. Basic equipment	1471
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1472
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1473
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	1474
5. Alternator with voltage regulator, Fuse 4 on fuse holder B, Fuse 19 on fuse holder C	1475
6. Ignition/starter switch	1476
7. Steering column combination switch, Steering angle sender	1477
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	1478
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	1479
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Headlight relay	1480
11. Bonnet contact switch, Front passenger door lock unit	1481
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	1482
13. Front interior light, Centre interior light	1483
14. Hazard warning lights button, Reversing light switch	1484
15. Brake light switch, Bass horn	1485
16. Dash panel insert, Windscreen wiper motor	1486
17. Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Driver side airbag deactivated warning lamp	1487
18. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp, Radio	1488
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	1489
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter	1490
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	1491
149 - Fuse assignment	1492-1523
1. Fuse assignment	1492

2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1493
3. Main relay, ABS control unit fuse 1, Fuse holder B	1494
4. Headlight main beam relay, Fuse holder B	1495
5. Current supply relay, Fresh air blower isolation relay, Fresh air blower fuse 1	1496
6. Headlight relay, Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1497
7. Ignition/starter switch, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	1498
8. Ignition/starter switch, Fuse 3 on fuse holder C	1499
9. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C	1500
10. Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C	1501
11. Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	1502
12. Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C	1503
13. Fuse 21 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	1504
14. Fuse 19 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	1505
15. Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	1506
16. Fuse 31 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C	1507
17. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	1508
18. Reversing light switch, Dash panel insert	1509
19. Fuse 42 on fuse holder C	1510
20. Starter relay 1, Starter relay 2, Fuse 44 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	1511
21. Fuse 43 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	1512
22. Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C, Fuse 53 on fuse holder C	1513
23. Fuse 54 on fuse holder C, Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C	1514
24. Fuse 59 on fuse holder C, Fuse 60 on fuse holder C	1515
25. Heated rear window relay, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	1516
26. Fuse 63 on fuse holder C, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	1517
27. Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1518
28. Connection 3 (58d), in main wiring harness	1519
29. Connection 3 (58d), in main wiring harness	1520
30. Coolant pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Continued coolant circulation pump	1521
31. Fresh air blower relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine control unit	1522
32. Fuel pump relay, Electric fuel pump 2 relay, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	1523
150 - Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	1524-1525
1. Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	1524
2. Steering column combination switch, Blower relay, Right turn signal repeater bulb, Fuse 5 on fuse holder B, Fuse 41 on fuse holder C, Washer pump, Air supply blower	1525
151 - Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	1526-1536
1. Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	1526
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 20 on fuse holder C, Fuse 66 on fuse holder C	1527
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	1528
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	1529
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	1530
6. Mirror adjustment switch, Onboard supply control unit, Fuse 19 on fuse holder C, Fuse 33 on fuse holder C, Driver side exterior mirror	1531
7. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 48 on fuse holder C, Driver side window regulator motor	1532
8. Suppression filter, Front passenger side exterior mirror	1533
9. Switch and instrument illumination regulator, Fuse 28 on fuse holder C, Front passenger side exterior mirror	1534

10. Front passenger side window regulator button, Front passenger door control unit, Fuse 49 on fuse holder C, Front passenger side window regulator motor	1535
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	1536
152 - Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	1537-1547
1. Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	1537
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 20 on fuse holder C, Fuse 66 on fuse holder C	1538
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	1539
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	1540
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	1541
6. Mirror adjustment switch, Onboard supply control unit, Fuse 19 on fuse holder C, Fuse 33 on fuse holder C, Driver side exterior mirror	1542
7. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 48 on fuse holder C, Driver side window regulator motor	1543
8. Suppression filter, Front passenger side exterior mirror	1544
9. Front passenger side window regulator button, Front passenger door control unit, Fuse 49 on fuse holder C, Front passenger side exterior mirror, Front passenger side window regulator motor	1545
10. Switch and instrument illumination regulator, Fuse 28 on fuse holder C	1546
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	1547
153 - Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	1548-1558
1. Central locking, window regulators and mirror adjustment, RHD vehicles , (L0R)	1548
2. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Fuse 2 on fuse holder C, Fuse 3 on fuse holder C, Fuse 60 on fuse holder C	1549
3. Central locking button, Fuel tank filler flap central locking actuator, Onboard supply control unit	1550
4. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	1551
5. Onboard supply control unit, Rear left door lock unit, Rear right door lock unit	1552
6. Mirror adjustment switch, Onboard supply control unit, Fuse 36 on fuse holder C, Fuse 55 on fuse holder C, Driver side exterior mirror	1553
7. Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, On oard supply control unit, Fuse 13 on fuse holder C, Driver side window regulator motor	1554
8. Suppression filter, Front passenger side exterior mirror	1555
9. Suppression filter, Front passenger side window regulator button, Front passenger door control unit, Fuse 14 on fuse holder C, Front passenger side exterior mirror, Front passenger side window regulator motor	1556
10. Switch and instrument illumination regulator, Fuse 22 on fuse holder C	1557
11. Rear driver side window regulator button, Rear passenger side window regulator button, Rear left door control unit, Rear right door control unit, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Rear left window regulator motor, Rear right window regulator motor	1558
154 - Fuse assignment	1559-1590
1. Fuse assignment	1559
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1560
3. Main relay, ABS control unit fuse 1, Fuse holder B	1561
4. Headlight main beam relay, Fuse holder B	1562
5. Current supply relay, Fresh air blower isolation relay, Fresh air blower fuse 1	1563
6. Headlight relay, Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1564
7. Ignition/starter switch, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	1565
8. Ignition/starter switch, Fuse 3 on fuse holder C	1566
9. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C	1567
10. Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C	1568
11. Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	1569
12. Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C	1570
13. Fuse 21 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	1571

14. Fuse 19 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C	1572
15. Fuse 30 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	1573
16. Fuse 31 on fuse holder C, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C	1574
17. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	1575
18. Reversing light switch, Dash panel insert	1576
19. Fuse 42 on fuse holder C	1577
20. Starter relay 1, Starter relay 2, Fuse 44 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	1578
21. Fuse 43 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	1579
22. Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C, Fuse 53 on fuse holder C	1580
23. Fuse 54 on fuse holder C, Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C	1581
24. Fuse 59 on fuse holder C, Fuse 60 on fuse holder C	1582
25. Heated rear window relay, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	1583
26. Alarm system relay 1, Fuse 63 on fuse holder C, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	1584
27. Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1585
28. Connection 3 (58d), in main wiring harness	1586
29. Connection 3 (58d), in main wiring harness	1587
30. Coolant pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Continued coolant circulation pump	1588
31. Fresh air blower relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine control unit	1589
32. Fuel pump relay, Electric fuel pump 2 relay, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	1590
155 - Electronic logbook, chip card reader unit , (9ND)	1591-1593
1. Electronic logbook, chip card reader unit , (9ND)	1591
2. Tachograph, Onboard supply control unit, Fuse 22 on fuse holder C, Fuse 29 on fuse holder C, Fuse 42 on fuse holder C, Fuse 53 on fuse holder C	1592
3. Tachograph, Tachograph sender, Onboard supply control unit	1593
156 - Interface for external use , (UF1)	1594-1600
1. Interface for external use , (UF1)	1594
2. Voltage supply relay 2, Fuse 6 on fuse holder B, Fuse 37 on fuse holder C, Fuse 47 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	1595
3. Parking brake contact switch, Dash panel insert, Radio	1596
4. Onboard supply control unit, Fuse 27 on fuse holder C	1597
5. Reversing light switch, Alarm system relay 1, Onboard supply control unit	1598
6. Light switch, Terminal 58b relief relay, Onboard supply control unit	1599
7. Onboard supply control unit, Fuse 31 on fuse holder C, Fuse 52 on fuse holder C	1600
157 - Anti-theft alarm system	1601-1605
1. Anti-theft alarm system	1601
2. Onboard supply control unit, Driver door lock unit, Rear left door lock unit	1602
3. Bonnet contact switch, Onboard supply control unit, Front passenger door lock unit, Rear right door lock unit	1603
4. Alarm horn, Alarm system relay 1, Onboard supply control unit	1604
5. Interior monitoring switch, Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Onboard supply control unit	1605
158 - Basic equipment	1606-1626
1. Basic equipment	1606
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1607
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1608
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	1609
5. Alternator with voltage regulator, Fuse 4 on fuse holder B, Fuse 19 on fuse holder C	1610
6. Ignition/starter switch	1611
7. Steering column combination switch, Steering angle sender	1612
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	1613
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	1614
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Headlight relay	1615
11. Bonnet contact switch. Front passenger door lock unit	1616

12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	1617
13. Brake light switch, Front interior light, Centre interior light	1618
14. Hazard warning lights button, Reversing light switch	1619
15. Bass horn	1620
16. Dash panel insert, Windscreen wiper motor	1621
17. Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Washer fluid level warning lamp, Driver side airbag deactivated warning lamp	1622
18. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp, Radio	1623
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	1624
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter	1625
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	1626
159 - Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	1627-1629
1. Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	1627
2. Blower relay, Right turn signal repeater bulb, Fuse 5 on fuse holder B, Fuse 41 on fuse holder C, Air supply blower	1628
3. Steering column combination switch, Windscreen washer fluid level sender, Dash panel insert, Washer fluid level warning lamp, Washer pump	1629
160 - Exterior lighting , (8ID/7L3/8K0/8K1)	1630-1641
1. Exterior lighting , (8ID/7L3/8K0/8K1)	1630
2. Steering column combination switch, Dash panel insert, Fuse holder C	1631
3. Terminal 58b relief relay, Fuse holder C	1632
4. Light switch, Onboard supply control unit	1633
5. Onboard supply control unit, Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1634
6. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1635
7. Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1636
8. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1637
9. Onboard supply control unit, Left tail light, Right tail light	1638
10. Onboard supply control unit, Left number plate light, Right number plate light	1639
11. Brake light switch, Reversing light switch, Onboard supply control unit, Engine control unit	1640
12. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1641
161 - Exterior lighting , (8ID/7L3/8K3/8K8),(8ID/7L6/8K0/8K1/8K3/8K8)	1642-1652
1. Exterior lighting , (8ID/7L3/8K3/8K8),(8ID/7L6/8K0/8K1/8K3/8K8)	1642
2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	1643
3. Onboard supply control unit	1644
4. Light switch, Onboard supply control unit	1645
5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1646
6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1647
7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1648
8. Onboard supply control unit, Left tail light, Right tail light	1649
9. Onboard supply control unit, Left number plate light, Right number plate light	1650
10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1651
11. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1652
162 - Exterior lighting , (8IH)	1653-1663
1. Exterior lighting , (8IH)	1653
2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	1654
3. Onboard supply control unit	1655
4. Light switch, Onboard supply control unit	1656
5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1657

6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1658
7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1659
8. Onboard supply control unit, Left tail light cluster, Right tail light cluster	1660
9. Onboard supply control unit, Left number plate light, Right number plate light	1661
10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1662
11. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1663
163 - 2.0l diesel engine , CNFB	1664-1679
1. 2.0l diesel engine , CNFB	1664
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 9 on fuse holder C	1665
3. Alternator with voltage regulator, Fuel pump relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1666
4. Main relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C	1667
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1668
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	1669
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1670
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1671
9. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1672
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1673
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1674
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1675
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	1676
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1677
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1678
16. Oil pressure switch, Dash panel insert	1679
164 - 2.0l diesel engine with start/stop system , CNFB,(7L6)	1680-1697
1. 2.0l diesel engine with start/stop system , CNFB,(7L6)	1680
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1681
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1682
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C	1683
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1684
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1685
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1686
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	1687
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1688
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	1689
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1. Exhaust gas temperature sender 3. Exhaust gas temperature sender 4. Engine/motor control	1690

unit	
12. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1691
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1692
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1693
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1694
16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	1695
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1696
18. Oil pressure switch, Dash panel insert	1697
165 - 2.0l diesel engine , CNEA,CSHA	1698-1713
1. 2.0l diesel engine , CNEA,CSHA	1698
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 5 on fuse holder A, Fuse 9 on fuse holder C	1699
3. Alternator with voltage regulator, Fuel pump relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1700
4. Main relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C	1701
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1702
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	1703
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1704
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1705
9. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1706
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1707
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1708
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1709
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	1710
14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	1711
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1712
16. Oil pressure switch, Dash panel insert	1713
166 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1714-1731
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1714
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A, Fuse 5 on fuse holder A	1715
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1716
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 15 on fuse holder C, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C	1717
5. Ignition/starter switch, Starter motor relay, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1718
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1719
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1720
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	1721

9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1722
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	1723
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1724
12. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1725
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1726
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1727
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1728
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1729
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1730
18. Oil pressure switch, Dash panel insert	1731
167 - Airbag systems , (L0L)	1732-1737
1. Airbag systems , (L0L)	1732
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 1 on fuse holder C, Fuse 39 on fuse holder C	1733
3. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	1734
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	1735
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1736
6. Airbag control unit, Onboard supply control unit, Dash panel insert, Diagnostic connection	1737
168 - Airbag systems for RHD vehicles , (L0R)	1738-1743
1. Airbag systems for RHD vehicles , (L0R)	1738
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 1 on fuse holder C, Fuse 39 on fuse holder C	1739
3. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Steering column combination switch, Coil connector, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	1740
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	1741
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1742
6. Airbag control unit, Onboard supply control unit, Dash panel insert, Diagnostic connection	1743
169 - Climatic , (9AP)	1744-1750
1. Climatic , (9AP)	1744
2. Air conditioning system control unit, Auxiliary coolant heater relay, Fuse 53 on fuse holder C, Fuse 59 on fuse holder C, Fresh air blower fuse 1	1745
3. Air conditioning system control unit, Terminal 30 voltage supply relay, Engine/motor control unit, Fuse 4 on fuse holder C, Fuse 23 on fuse holder C, Continued coolant circulation pump, Circulation pump	1746
4. Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	1747
5. High-pressure sender, Air conditioning system control unit, Air conditioner compressor regulating valve, Fuse 42 on fuse holder C	1748
6. Centre vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Air conditioning system control unit, Defroster flap control motor	1749
7. Air conditioning system control unit, Temperature flap control motor, Air recirculation flap control motor, Footwell flap control motor, Air distribution flap control motor	1750
170 - Climatronic , (9AD)	1751-1758
1. Climatronic , (9AD)	1751
2. Coolant pump relay, Climatronic control unit, Auxiliary coolant heater relay, Onboard supply control unit, Fuse 59 on fuse holder C	1752
3. Climatronic control unit. Terminal 30 voltage supply relay. Fuse 4 on fuse holder C. Fuse 23 on	1753

fuse holder C, Continued coolant circulation pump, Circulation pump	
4. Fresh air blower control unit, Climatronic control unit, Air conditioner compressor regulating valve, Fuse 53 on fuse holder C, Fresh air blower fuse 1, Fresh air blower	1754
5. High-pressure sender, Air quality sensor, Climatronic control unit, Fuse 42 on fuse holder C	1755
6. Climatronic control unit, Defroster flap control motor, Left temperature flap control motor, Footwell flap control motor	1756
7. Climatronic control unit, Right temperature flap control motor, Fresh air/air recirculation, air flow flap control motor, Air distribution flap control motor	1757
8. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Climatronic control unit	1758
171 - Supplementary heater , (9M5)	1759-1761
1. Supplementary heater , (9M5)	1759
2. Onboard supply control unit, Auxiliary coolant heater control unit, Glow plug for heater, Fuse 15 on fuse holder C, Metering pump	1760
3. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit, Combustion air blower	1761
172 - Auxiliary coolant heater , (7VE),(7VL)	1762-1765
1. Auxiliary coolant heater , (7VE),(7VL)	1762
2. Fuel delivery unit, Electric fuel pump 2 relay, Auxiliary coolant heater control unit, Heater coolant shut-off valve, Fuse 2 on fuse holder B, Fuse 15 on fuse holder C, Fuse 59 on fuse holder C, Metering pump	1763
3. Onboard supply control unit, Roof display unit, Auxiliary coolant heater control unit, Aerial, Remote control receiver for auxiliary coolant heater, Fuse 29 on fuse holder C	1764
4. Flame monitor, Overheating sensor, Coolant temperature sender for heater, Auxiliary coolant heater control unit, Glow plug for heater, Combustion air blower, Coolant circulation pump 2	1765
173 - Passenger compartment heater and ventilation system , (9AA)	1766-1768
1. Passenger compartment heater and ventilation system , (9AA)	1766
2. Heater/heat output switch, Terminal 30 voltage supply relay, Onboard supply control unit, Fuse 53 on fuse holder C, Circulation pump	1767
3. Heater/heat output switch, Current supply relay, Fresh air blower series resistor with overheating fuse, Fresh air blower fuse 1, Fresh air blower, Fresh air and air recirculation flap control motor	1768
174 - 8-speed automatic gearbox with Tiptronic , (G1G)	1769-1774
1. 8-speed automatic gearbox with Tiptronic , (G1G)	1769
2. Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Ignition key withdrawal lock solenoid, Fuse 2 on fuse holder C, Fuse 29 on fuse holder C	1770
3. Switch and instrument illumination regulator, Gear selector position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Fuse 22 on fuse holder C, Selector lever position display	1771
4. Gearbox oil temperature sender, Gear sensor, Automatic gearbox control unit, Selector lever sensors control unit, Engine control unit, Selector lever lock solenoid, Selector lever position P solenoid, Automatic gearbox pressure regulating valve 7, Accumulator solenoid, Fuse 38 on fuse holder C	1772
5. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Onboard supply control unit, Dash panel insert	1773
6. Ignition/starter switch, Starter motor relay, Onboard supply control unit, Left reversing light bulb, Right reversing light bulb	1774
175 - Interface for external use , (UF1)	1775-1781
1. Interface for external use , (UF1)	1775
2. Voltage supply relay 2, Fuse 6 on fuse holder B, Fuse 37 on fuse holder C, Fuse 47 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	1776
3. Parking brake contact switch, Dash panel insert, Radio	1777
4. Onboard supply control unit, Fuse 27 on fuse holder C	1778
5. Reversing light switch, Alarm system relay 1, Onboard supply control unit	1779
6. Light switch, Terminal 58b relief relay, Onboard supply control unit	1780
7. Onboard supply control unit, Fuse 31 on fuse holder C, Fuse 52 on fuse holder C	1781
176 - Basic equipment	1782-1802
1. Basic equipment	1782
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1783
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1784
4. Clutch pedal switch. Fuel pump relav. Terminal 30 voltage supply relav. Engine control unit	1785

5. Alternator with voltage regulator, Fuse 4 on fuse holder B, Fuse 19 on fuse holder C	1786
6. Ignition/starter switch	1787
7. Steering column combination switch, Steering angle sender	1788
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	1789
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	1790
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Headlight relay	1791
11. Bonnet contact switch, Front passenger door lock unit	1792
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	1793
13. Brake light switch, Front interior light, Centre interior light	1794
14. Hazard warning lights button, Reversing light switch	1795
15. Bass horn	1796
16. Dash panel insert, Windscreen wiper motor	1797
17. Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Washer fluid level warning lamp, Driver side airbag deactivated warning lamp	1798
18. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp, Radio	1799
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	1800
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter	1801
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	1802
177 - 2.0l petrol engine , CFPA	1803-1819
1. 2.0l petrol engine , CFPA	1803
2. Battery, Starter, Alternator with voltage regulator, Starter motor relay, Fuse holder A	1804
3. Main relay, Engine control unit, Fuse holder A, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	1805
4. Engine control unit, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C	1806
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Continued coolant circulation pump	1807
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	1808
7. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1809
8. Throttle valve module, Accelerator position sender, Throttle valve drive for electric throttle, Engine control unit	1810
9. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine control unit	1811
10. Intake air temperature sender, Coolant temperature sender, Engine control unit, Circulation pump	1812
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	1813
12. Clutch pedal switch, Air mass meter, Intake manifold pressure sender, Terminal 15 voltage supply relay, Engine control unit, Fuel pressure regulating valve, Fuse 38 on fuse holder C	1814
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	1815
14. Brake light switch, ABS control unit, Engine control unit	1816
15. Cruise control system switch, Engine control unit	1817
16. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit, Dash panel insert	1818
17. Oil pressure switch, Dash panel insert	1819
178 - 2.0l diesel engine , CNFB	1820-1835
1. 2.0l diesel engine , CNFB	1820
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 9 on fuse holder C	1821
3. Alternator with voltage regulator, Fuel pump relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1822
4. Main relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	1823

5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1824
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	1825
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1826
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1827
9. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1828
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1829
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1830
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1831
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	1832
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1833
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1834
16. Oil pressure switch, Dash panel insert	1835
179 - 2.0l diesel engine with start/stop system , CNFB,(7L6)	1836-1853
1. 2.0l diesel engine with start/stop system , CNFB,(7L6)	1836
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A	1837
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1838
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	1839
5. Ignition/starter switch, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1840
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1841
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1842
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	1843
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1844
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	1845
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1846
12. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1847
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	1848
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1849
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1850
16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	1851
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1852
18. Oil pressure switch, Dash panel insert	1853
180 - 2.0l diesel engine , CNEA,CSHA	1854-1869
1. 2.0l diesel engine , CNEA,CSHA	1854
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 9 on fuse holder C	1855

3. Alternator with voltage regulator, Fuel pump relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1856
4. Main relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	1857
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1858
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	1859
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1860
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1861
9. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1862
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1863
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1864
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1865
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	1866
14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	1867
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	1868
16. Oil pressure switch, Dash panel insert	1869
181 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1870-1887
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	1870
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A	1871
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	1872
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	1873
5. Ignition/starter switch, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	1874
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	1875
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1876
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	1877
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	1878
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	1879
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1880
12. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	1881
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	1882
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	1883
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	1884
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	1885
17. Fuel system pressurisation pump. Oil level and oil temperature sender. Dash panel insert	1886

18. Oil pressure switch, Dash panel insert	1887
182 - Fuse assignment	1888-1919
1. Fuse assignment	1888
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1889
3. Main relay, Fuse holder B, ABS control unit fuse 1	1890
4. Headlight main beam relay, Fuse holder B	1891
5. Current supply relay, Fresh air blower fuse 1	1892
6. Headlight relay, Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1893
7. Ignition/starter switch, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	1894
8. Ignition/starter switch, Fuse 3 on fuse holder C	1895
9. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C	1896
10. Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C	1897
11. Fuse 15 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C	1898
12. Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C	1899
13. Fuse 21 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	1900
14. Fuse 19 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	1901
15. Fuse 28 on fuse holder C, Fuse 29 on fuse holder C	1902
16. Fuse 30 on fuse holder C, Fuse 31 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C	1903
17. Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C	1904
18. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	1905
19. Reversing light switch, Dash panel insert	1906
20. Fuse 42 on fuse holder C	1907
21. Starter relay 1, Starter relay 2, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	1908
22. Fuse 43 on fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	1909
23. Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C, Fuse 53 on fuse holder C, Fuse 54 on fuse holder C	1910
24. Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C	1911
25. Fuse 59 on fuse holder C, Fuse 60 on fuse holder C	1912
26. Heated rear window relay, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	1913
27. Alarm system relay 1, Fuse 63 on fuse holder C, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	1914
28. Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1915
29. Connection 3 (58d), in main wiring harness	1916
30. Connection 3 (58d), in main wiring harness	1917
31. Fuel pump relay, Electric fuel pump 2 relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Onboard supply control unit, Engine control unit	1918
32. Fuel pump relay, Coolant pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Continued coolant circulation pump	1919
183 - Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	1920-1922
1. Air supply for toothed belt drive (engine dust kit) , (7L3),(7L6),(S1D)	1920
2. Control unit for air supply to toothed belt drive, Indicator lamp for air supply to toothed belt drive, Fuse 41 on fuse holder C, Air supply blower	1921
3. Steering column combination switch, Windscreen washer fluid level sender, Dash panel insert, Washer fluid level warning lamp, Right turn signal repeater bulb, Washer pump	1922
184 - Fuse assignment	1923-1954
1. Fuse assignment	1923
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	1924
3. Main relay, Fuse holder B, ABS control unit fuse 1	1925
4. Headlight main beam relay, Fuse holder B	1926
5. Current supply relay, Fresh air blower fuse 1	1927
6. Headlight relay, Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	1928
7. Ignition/starter switch, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	1929
8. Ignition/starter switch, Fuse 3 on fuse holder C	1930
9. Fuse 4 on fuse holder C, Fuse 5 on fuse holder C, Fuse 6 on fuse holder C, Fuse 7 on fuse holder C	1931
10. Fuse 8 on fuse holder C, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C, Fuse 14 on fuse holder C	1932
11. Fuse 15 on fuse holder C. Fuse 16 on fuse holder C. Fuse 17 on fuse holder C. Fuse 18 on fuse	1933

holder C	
12. Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C	1934
13. Fuse 21 on fuse holder C, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C	1935
14. Fuse 19 on fuse holder C, Fuse 26 on fuse holder C, Fuse 27 on fuse holder C	1936
15. Fuse 28 on fuse holder C, Fuse 29 on fuse holder C	1937
16. Fuse 30 on fuse holder C, Fuse 31 on fuse holder C, Fuse 35 on fuse holder C, Fuse 36 on fuse holder C, Fuse 37 on fuse holder C	1938
17. Fuse 38 on fuse holder C, Fuse 39 on fuse holder C	1939
18. Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	1940
19. Reversing light switch, Dash panel insert	1941
20. Fuse 42 on fuse holder C	1942
21. Starter relay 1, Starter relay 2, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	1943
22. Fuse 43 on fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	1944
23. Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 52 on fuse holder C, Fuse 53 on fuse holder C, Fuse 54 on fuse holder C	1945
24. Fuse 55 on fuse holder C, Fuse 56 on fuse holder C, Fuse 57 on fuse holder C, Fuse 58 on fuse holder C	1946
25. Fuse 59 on fuse holder C, Fuse 60 on fuse holder C	1947
26. Heated rear window relay, Fuse 61 on fuse holder C, Fuse 62 on fuse holder C	1948
27. Alarm system relay 1, Fuse 63 on fuse holder C, Fuse 64 on fuse holder C, Fuse 65 on fuse holder C, Fuse 66 on fuse holder C, Fuse 67 on fuse holder C, Fuse 68 on fuse holder C	1949
28. Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1950
29. Connection 3 (58d), in main wiring harness	1951
30. Connection 3 (58d), in main wiring harness	1952
31. Fuel pump relay, Electric fuel pump 2 relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Onboard supply control unit, Engine control unit	1953
32. Fuel pump relay, Coolant pump relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Continued coolant circulation pump	1954
185 - CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN	1955-1962
1. CAN and LIN bus networking, powertrain CAN, diagnosis CAN, dash panel CAN, convenience CAN	1955
2. Onboard supply control unit	1956
3. Onboard supply control unit	1957
4. Onboard supply control unit	1958
5. Onboard supply control unit	1959
6. Onboard supply control unit, Fuse 29 on fuse holder C, Diagnostic connection	1960
7. Onboard supply control unit	1961
8. Alternator with voltage regulator, Onboard supply control unit	1962
186 - Parking aid (PDC)	1963-1967
1. Parking aid (PDC)	1963
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Warning buzzer 2 for rear parking aid, Parking aid control unit	1964
3. Parking aid button, Parking aid control unit, Onboard supply control unit	1965
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	1966
5. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	1967
187 - Seat heating	1968-1970
1. Seat heating	1968
2. Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat heating control unit, Fuse 35 on fuse holder C, Fuse 45 on fuse holder C	1969
3. Seat heating control unit, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	1970
188 - Hardtop	1971-1975
1. Hardtop	1971
2. Heated rear window button, Brake light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1972
3. Heated rear window relay, Onboard supply control unit, Fuse 5 on fuse holder B, Fuse 62 on fuse holder C, Heated rear window, Heated rear window for hardtop	1973
4. Load area illumination switch, Onboard supply control unit	1974
5. Rear interior light button, Control unit for special installations, High-level brake light bulb, Load area illumination bulb, Fuse 59 on fuse holder C	1975
189 - Electronic logbook, chip card reader unit , (9ND)	1976-1978
1. Electronic logbook. chip card reader unit . (9ND)	1976

	2. Tachograph, Onboard supply control unit, Fuse 22 on fuse holder C, Fuse 29 on fuse holder C, Fuse 42 on fuse holder C	1977
	3. Tachograph, Tachograph sender, Onboard supply control unit	1978
190 -	Exterior lighting , (8ID/7L3/F4D/F4H)	1979-1989
	1. Exterior lighting , (8ID/7L3/F4D/F4H)	1979
	2. Steering column combination switch, Terminal 58b relief relay, Dash panel insert, Fuse holder C	1980
	3. Light switch, Onboard supply control unit	1981
	4. Onboard supply control unit, Fuse 20 on fuse holder C, Fuse 22 on fuse holder C	1982
	5. Onboard supply control unit, Front left headlight, Left turn signal repeater bulb	1983
	6. Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1984
	7. Onboard supply control unit, Front right headlight, Right turn signal repeater bulb	1985
	8. Onboard supply control unit, Left tail light, Right tail light	1986
	9. Onboard supply control unit, Left number plate light, Right number plate light	1987
	10. Brake light switch, Reversing light switch, Onboard supply control unit, Engine control unit	1988
	11. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	1989
191 -	Exterior lighting , (8ID/7L3/F0A/F4R),(8ID/7L6)	1990-2000
	1. Exterior lighting , (8ID/7L3/F0A/F4R),(8ID/7L6)	1990
	2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	1991
	3. Onboard supply control unit	1992
	4. Light switch, Onboard supply control unit	1993
	5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	1994
	6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	1995
	7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	1996
	8. Onboard supply control unit, Left tail light, Right tail light	1997
	9. Onboard supply control unit, Left number plate light, Right number plate light	1998
	10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	1999
	11. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	2000
192 -	Exterior lighting , (8IH)	2001-2011
	1. Exterior lighting , (8IH)	2001
	2. Steering column combination switch, Headlight relay, Onboard supply control unit, Dash panel insert	2002
	3. Onboard supply control unit	2003
	4. Light switch, Onboard supply control unit	2004
	5. Onboard supply control unit, Left fog light bulb, Front left headlight, Left turn signal repeater bulb	2005
	6. Switch and instrument illumination regulator, Headlight range control regulator, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	2006
	7. Onboard supply control unit, Right fog light bulb, Front right headlight, Right turn signal repeater bulb	2007
	8. Onboard supply control unit, Left tail light cluster, Right tail light cluster	2008
	9. Onboard supply control unit, Left number plate light, Right number plate light	2009
	10. Brake light switch, Reversing light switch, Onboard supply control unit, Fuse 42 on fuse holder C	2010
	11. Load area illumination switch, High-level brake light bulb, Load area illumination bulb	2011
193 -	Airbag systems , (L0L)	2012-2016
	1. Airbag systems , (L0L)	2012
	2. Driver side belt switch, Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 39 on fuse holder C	2013
	3. Steering column combination switch, Coil connector, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	2014
	4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	2015
	5. Airbag control unit, Onboard supply control unit, Dash panel insert, Diagnostic connection	2016
194 -	Airbag systems for RHD vehicles , (L0R)	2017-2021
	1. Airbag systems for RHD vehicles , (L0R)	2017
	2. Driver side belt switch. Key operated switch to deactivate airbag on front passenger side. Airbag	2018

control unit, Warning lamp for airbag deactivated on front passenger side, Fuse 39 on fuse holder C	
3. Steering column combination switch, Coil connector, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	2019
4. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	2020
5. Airbag control unit, Onboard supply control unit, Dash panel insert, Diagnostic connection	2021
195 - Interface for external use , (UF1)	2022-2028
1. Interface for external use , (UF1)	2022
2. Voltage supply relay 2, Fuse 6 on fuse holder B, Fuse 37 on fuse holder C, Fuse 47 on fuse holder C, Fuse 49 on fuse holder C, Fuse 50 on fuse holder C	2023
3. Parking brake contact switch, Dash panel insert, Radio	2024
4. Onboard supply control unit, Fuse 27 on fuse holder C	2025
5. Reversing light switch, Alarm system relay 1, Onboard supply control unit	2026
6. Terminal 58b relief relay, Onboard supply control unit	2027
7. Onboard supply control unit, Fuse 31 on fuse holder C, Fuse 52 on fuse holder C	2028
196 - Basic equipment	2029-2049
1. Basic equipment	2029
2. Battery, Starter, Terminal 15 voltage supply relay, Fuse holder A	2030
3. Starter motor relay, Terminal 58b relief relay, Voltage supply relay 2	2031
4. Clutch pedal switch, Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	2032
5. Alternator with voltage regulator, Fuse 4 on fuse holder B, Fuse 19 on fuse holder C	2033
6. Ignition/starter switch	2034
7. Steering column combination switch, Steering angle sender	2035
8. Steering column combination switch, Coil connector, Horn plate, Airbag control unit, Multifunction steering wheel control unit	2036
9. Windscreen wiper switch, Turn signal switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Washer pump	2037
10. Light switch, Headlight dipper and flasher switch, Cruise control system switch, Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Headlight relay	2038
11. Bonnet contact switch, Front passenger door lock unit	2039
12. Heated rear window button, Rear left door lock unit, Rear right door lock unit, Heated rear window	2040
13. Brake light switch, Front interior light, Centre interior light	2041
14. Hazard warning lights button, Reversing light switch	2042
15. Bass horn	2043
16. Dash panel insert, Windscreen wiper motor	2044
17. Brake fluid level warning contact, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Ambient temperature indicator, Multifunction indicator, Dash panel insert, Brake fluid level warning lamp, Washer fluid level warning lamp, Driver side airbag deactivated warning lamp	2045
18. Fuel gauge, Fuel pump, Fuel pump control unit, Dash panel insert, Reserve fuel warning lamp, Radio	2046
19. Immobiliser reader coil, Oil pressure switch, Oil level and oil temperature sender, Ignition and starter key warning system buzzer and gong, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp	2047
20. Parking brake contact switch, Dash panel insert, Electric socket, Cigarette lighter	2048
21. Light 1 for front centre console background lighting, 12 V socket 2, Left washer jet heater element	2049
197 - 2.0l petrol engine , CFPA	2050-2066
1. 2.0l petrol engine , CFPA	2050
2. Battery, Starter, Alternator with voltage regulator, Starter motor relay, Fuse holder A	2051
3. Main relay, Engine control unit, Fuse holder A, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	2052
4. Engine control unit, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C	2053
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit, Continued coolant circulation pump	2054
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	2055
7. Engine speed sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	2056
8. Throttle valve module, Accelerator position sender, Throttle valve drive for electric throttle, Engine control unit	2057

9. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine control unit	2058
10. Intake air temperature sender, Coolant temperature sender, Engine control unit, Circulation pump	2059
11. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	2060
12. Clutch pedal switch, Air mass meter, Intake manifold pressure sender, Terminal 15 voltage supply relay, Engine control unit, Fuel pressure regulating valve, Fuse 38 on fuse holder C	2061
13. Charge pressure sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	2062
14. Brake light switch, ABS control unit, Engine control unit	2063
15. Cruise control system switch, Engine control unit	2064
16. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit, Dash panel insert	2065
17. Oil pressure switch, Dash panel insert	2066
198 - 2.0l diesel engine , CNFB	2067-2082
1. 2.0l diesel engine , CNFB	2067
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 9 on fuse holder C	2068
3. Alternator with voltage regulator, Fuel pump relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	2069
4. Main relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	2070
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	2071
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	2072
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	2073
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	2074
9. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	2075
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	2076
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	2077
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	2078
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	2079
14. Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	2080
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	2081
16. Oil pressure switch, Dash panel insert	2082
199 - 2.0l diesel engine with start/stop system , CNFB,(7L6)	2083-2100
1. 2.0l diesel engine with start/stop system , CNFB,(7L6)	2083
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A	2084
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	2085
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	2086
5. Ignition/starter switch, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 40 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	2087
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	2088
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	2089
8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve	2090
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	2091
10. Start/Stop operation button. Engine/motor control unit. Heater element for crankcase breather.	2092

Fuse 41 on fuse holder C	
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	2093
12. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	2094
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor	2095
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	2096
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	2097
16. Brake light switch, Clutch pedal switch for stop/start system, Engine/motor control unit, Fuse 42 on fuse holder C	2098
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	2099
18. Oil pressure switch, Dash panel insert	2100
200 - 2.0l diesel engine , CNEA,CSHA	2101-2116
1. 2.0l diesel engine , CNEA,CSHA	2101
2. Battery, Starter, Ignition/starter switch, Starter motor relay, Fuse holder A, Fuse 9 on fuse holder C	2102
3. Alternator with voltage regulator, Fuel pump relay, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	2103
4. Main relay, Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 38 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	2104
5. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	2105
6. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	2106
7. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	2107
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	2108
9. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	2109
10. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	2110
11. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	2111
12. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	2112
13. Brake light switch, Onboard supply control unit, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C, Fuse 42 on fuse holder C	2113
14. Cruise control system switch, Steering column combination switch, Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	2114
15. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	2115
16. Oil pressure switch, Dash panel insert	2116
201 - 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	2117-2134
1. 2.0l diesel engine with start/stop system , CNEA,CSHA,(7L6)	2117
2. Battery, Starter, Starter relay 1, Starter relay 2, Fuse holder A	2118
3. Alternator with voltage regulator, Fuel pump relay, Battery monitor control unit, Engine/motor control unit, Fuse holder A, Fuse holder B, Fuse 23 on fuse holder C	2119
4. Terminal 30 voltage supply relay, Auxiliary coolant heater relay, Engine/motor control unit, Fuse 33 on fuse holder C, Fuse 57 on fuse holder C, Fuse 59 on fuse holder C	2120
5. Ignition/starter switch, Main relay, Onboard supply control unit, Voltage stabiliser, Engine/motor control unit, Fuse 18 on fuse holder C, Fuse 38 on fuse holder C, Fuse 40 on fuse holder C, Fuse 48 on fuse holder C, Fuse 61 on fuse holder C	2121
6. Switch and instrument illumination regulator, Cruise control system switch, Steering column combination switch, Onboard supply control unit, Engine/motor control unit	2122
7. Accelerator position sender, Accelerator position sender 2, Automatic glow period control unit, Engine/motor control unit. Glow plug 1. Glow plug 2. Glow plug 3. Glow plug 4	2123

8. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine/motor control unit, Charge pressure control solenoid valve, Exhaust flap valve, Exhaust gas recirculation cooler changeover valve	2124
9. Lambda probe, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuse 32 on fuse holder C	2125
10. Start/Stop operation button, Engine/motor control unit, Heater element for crankcase breather, Fuse 41 on fuse holder C	2126
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	2127
12. Water separator sender, Intake manifold pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Fuse 24 on fuse holder C	2128
13. Exhaust gas recirculation valve 1, Hall sender, Exhaust gas recirculation potentiometer, Charge pressure sender 2, Engine/motor control unit, Exhaust gas recirculation control motor	2129
14. Throttle valve module, Throttle valve potentiometer, Fuel temperature sender, Fuel pressure sender, Regulating flap potentiometer, Throttle valve module, Engine/motor control unit	2130
15. Radiator fan control unit, Engine/motor control unit, Fuse 25 on fuse holder C, Continued coolant circulation pump	2131
16. Brake light switch, Clutch pedal switch for stop/start system, Automatic gearbox control unit, Engine/motor control unit, Fuse 42 on fuse holder C	2132
17. Fuel system pressurisation pump, Oil level and oil temperature sender, Dash panel insert	2133
18. Oil pressure switch, Dash panel insert	2134
801 - -Fitting locations: Earth points - 3	2135-2139
1. Earth points	2135-2139
1.1 Earth points, in engine compartment	2135
1.2 Earth points in interior	2136-2137
1.3 Earth points in front, view from below	2138
1.4 Massepunkte vorn, Ansicht von unten	2139
802 - Fitting Locations: Fuse assignment - 3	2140-2182
1. Overview of fuses	2140-2182
1.1 Fuse holder A -SA-	2141-2145
1.1.1 Fitting location	2141
1.1.2 Fuse colours	2141
1.1.3 Fuse assignment, from November 2009	2142
1.1.4 Fuse assignment, from May 2011	2143
1.1.5 Fuse assignment, from June 2012	2144
1.1.6 Fuse assignment, from July 2013	2145
1.2 Fuse holder B -SB-	2146-2150
1.2.1 Fitting location	2146
1.2.2 Fuse colours	2146
1.2.3 Fuse assignment, from November 2009	2147
1.2.4 Fuse assignment, from June 2012	2148
1.2.5 Fuse assignment, from July 2013	2149-2150
1.3 Fuse holder C -SC-(72-pin)	2151-2167
1.3.1 Fitting location	2151
1.3.2 Fuse colours	2151
1.3.3 Fuse assignment on fuse holder C (from November 2009)	2152-2157
1.3.4 Fuse assignment, from June 2012	2158-2167
1.4 Fuse holder C -SC-(68-pin)	2168-2180
1.4.1 Fitting location	2168
1.4.2 Fuse colours	2168
1.4.3 Fuse assignment, from July 2013	2169-2180
1.5 Fresh air blower fuse 1 -S97- and ABS control unit fuse 1 -S123-	2181-2182
1.5.1 Fitting location	2181
1.5.2 Fuse colours	2181
1.5.3 Fuse assignment, from July 2013	2182
803 - -Fitting locations: control units - 3	2183-2237
1. Overview of control units	2183-2237
1.1 Control modules on the right A-pillar	2185-2187
1.1.1 Connector assignment of Parking aid control unit -J446-	2186
1.1.2 Connector assignment of 16-pin connector -T16p-, brown	2186
1.1.3 Connector assignment of 12-pin connector -T12a-, brown	2187
1.1.4 Connector assignment of 12-pin connector -T12c-, black	2187
1.2 Driver door control unit -J386-, Front passenger door control unit -J387-, Rear left door control unit -J388- and Rear right door control unit -J389-	2188

1.2.1 Connector assignment	2189
1.3 Telephone controls control unit -J738-	2189
1.4 Heater/heat output switch -E16- or Climatronic control unit -J255- or Air conditioning system control unit -J301-	2190-2192
1.4.1 Heater/heat output switch -E16-	2190
1.4.2 Climatronic control unit -J255-	2191
1.4.3 Air conditioning system control unit -J301-	2192
1.5 Differential lock control unit -J187-	2193-2194
1.5.1 Connector assignment	2195
1.6 Fuel pump control unit -J538-	2195-2197
1.6.1 Connector assignment	2197
1.7 Multifunction steering wheel control unit -J453-	2198
1.8 Control unit in dash panel insert -J285-	2198-2200
1.8.1 Connector assignment for 32-pin connector -T32-, blue	2199-2200
1.9 Onboard supply control unit -J519-	2201-2216
1.9.1 Connector assignment of Onboard supply control unit -J519-	2202
1.9.2 Pin assignment for 73-pin connector -T73a-, black	2203-2209
1.9.3 Pin assignment for 73-pin connector -T73b-, white	2210-2216
1.10 Voltage stabiliser -J532-	2217
1.11 Reversing camera system control unit -J772-	2218-2219
1.12 Trailer detector control unit -J345-	2220-2221
1.12.1 View from top	2220
1.12.2 View from below	2221
1.12.3 Connector assignment	2222
1.13 Engine control unit -J623-	2222-2223
1.13.1 Connector assignment	2224
1.14 Automatic glow period control unit -J179-	2224
1.15 ABS control unit -J104-	2225-2227
1.15.1 Connector assignment	2227
1.16 Auxiliary coolant heater control unit -J737-	2228
1.17 Battery monitor control unit -J367-	2229
1.18 Transfer box control unit -J646-	2229-2230
1.18.1 Connector assignment	2231
1.19 Radiator fan control unit -J293-	2231-2232
1.20 Airbag control unit -J234-	2233
1.20.1 Connector assignment	2234
1.21 Seat heating control unit -J882-	2234
1.22 Control unit for vehicle location system -J895-	2235
1.23 Selector lever sensors control unit -J587-	2236-2237
804 - -Fitting locations: coupling stations and connectors of wiring harnesses - 3	2238-2268
1. Overview of coupling stations	2238-2268
1.1 Coupling station in engine compartment, front left, on the radiator hood	2242-2244
1.1.1 Radiator fan control unit -J293- with increased fan output	2243
1.1.2 Radiator fan control unit -J293- with low or moderate fan output	2244
1.2 Coupling station on lock carrier	2245
1.3 Centre station in front right of engine compartment, near air filter box	2245
1.4 Coupling station in engine compart., right, behind the air filter box	2246
1.5 Coupling station in plenum chamber	2246-2247
1.7 Coupling station behind the glove compartment	2248
1.8 Coupling stations on right A-pillar and in front right door	2248-2249
1.9 Front passenger seat coupling station	2250
1.10 Coupling station near centre underbody	2250-2251
1.10.2 Fit. location start. July 2012	2250-2251
1.11 Coupling station B-pillar, rear right door	2252
1.12 Coupling station on rear left longitudinal member	2253
1.13 Coupling station on rear left longitudinal member	2253-2254
1.14 Coupling station on left rear wheel housing	2255
1.15 Coupling station on rear left roof frame	2255
1.16 Coupling station B-pillar, rear left door	2255-2256
1.17 Driver seat coupling station	2257
1.18 Contact assignment 41-pin connector -T41-, grey, on steering column switch	2258
1.19 Coupling station blocking diode	2259
1.20 Coupling stations on left A-pillar and in front left door	2260
1.21 Coupling station in centre console	2261
1.22 Coupling station on relay carrier	2262
1.23 Coupling station under left dash panel. near steering column	2263

1.24 Coupling station in engine compart., left, near the battery	2264
1.25 Coupling stations in engine compart., left, near main brake cylinder	2264
1.26 Coupling station in engine compart., left, on brake light switch -F-	2264-2266
1.26.1 Fitting location without air supply for timing belt drive	2264-2265
1.26.2 Fitting location with air supply for timing belt drive	2266
1.27 Coupling station near diesel injector valves	2267
1.28 Coupling station in left front of engine compartment	2268
1.29 Coupling station behind front bumper on left	2268
805 - Relay positions: Relay assignment - 3	2269-2291
1. Overview of relay carriers	2269-2291
1.1 Relay carrier under the dash panel on left (left-hand drive), up to May 2012	2271
1.1.1 Relay assignment	2271
1.2 Relay carrier under the dash panel on left (left-hand drive), from June 2012	2272-2273
1.2.1 Relay assignment	2272-2273
1.3 Relay carrier under the dash panel on left (left-hand drive), from January 2013	2274-2275
1.3.1 Relay assignment	2274-2275
1.4 Relay carrier under the dash panel on left (left-hand drive), from July 2013	2276-2277
1.4.1 Relay assignment	2276-2277
1.5 Relay carrier under the dash panel on left (left-hand drive), from April 2014	2278-2279
1.5.1 Relay assignment	2278-2279
1.6 Relay carrier under the dash panel on right (right-hand drive), up to May 2012	2280-2281
1.6.1 Relay assignment	2280-2281
1.7 Relay carrier under the dash panel on right (right-hand drive), from June 2012	2282-2283
1.7.1 Relay assignment	2282-2283
1.8 Relay carrier under the dash panel on right (right-hand drive), from January 2013	2284-2285
1.8.1 Relay assignment	2284-2285
1.9 Relay carrier under the dash panel on right (right-hand drive), from July 2013	2286-2287
1.9.1 Relay assignment	2286-2287
1.10 Relay carrier under the dash panel on right (right-hand drive), from April 2014	2288-2289
1.10.1 Relay assignment	2288-2289
1.11 Relay holder for engine dust kit, on steering fluid container	2290-2291
1.11.1 Relay location	2290-2291