



Contents

1	Engine list	1
1.1	Overview of engines - diesel engines	1
1.2	Overview of engines - petrol engines	2
2	Service work	3
2.1	Information about flexible or fixed service	3
2.2	Service tables	5
2.3	Scopes of service	6
3	General information	15
3.1	Vehicle identification number	15
3.2	Vehicle data sticker	15
3.3	Severe operating conditions	16
3.4	Engine code and engine number	17
3.5	Countries with high levels of dust	17
3.6	Stickers	20
3.7	Entries in the Digital Service Schedule	20
4	Descriptions of work:	22
4.1	AdBlue® (reducing agent)	23
4.2	Lifting the vehicle	29
4.3	Swivel joints and suspension link mountings: visual check	34
4.4	Reading ash mass (saturation level) of diesel particulate filter	36
4.5	Battery: checking with battery tester (always refer to workshop manual)	37
4.6	Battery: checking battery terminal clamps for secure seating	37
4.7	Charge battery (establish backup power supply)	40
4.8	Front passenger front airbag: checking key switch and "ON/OFF function"	40
4.9	Checking tyres: condition, wear pattern, tyre pressure, tread depth	41
4.10	Brake system and shock absorbers: inspecting for leaks and damage	46
4.11	Checking thickness of brake pads and condition of brake discs and drum brake linings	46
4.12	Brake and clutch mechanism: change brake fluid	48
4.13	Brake fluid level: checking	52
4.14	Electric windows: initialising (activation)	53
4.15	Vehicle diagnostic tester	54
4.16	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	55
4.17	Dust and pollen filter: cleaning housing and renewing filter element	56
4.18	Poly V-belt: checking condition	56
4.19	Poly V-belt: renewing	60
4.20	Diesel fuel filter: renewing	60
4.21	Diesel fuel filter: draining	61
4.22	Cooling system: checking frost protection and coolant level	63
4.23	Air filter: cleaning housing and renewing filter element	66
4.24	Engine oil level: checking	68
4.25	Engine oil: capacities and specifications	69
4.26	Engine oil: draining; renewing oil filter and filling engine oil	70
4.27	Multi-purpose additive for petrol fuel: adding	77
4.28	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	78
4.29	Bonnet lock: Cleaning and lubricating	78
4.30	Bringing ERA GLONASS into operation	79
4.31	Breakdown set: checking	80
4.32	Carrying out road test	81
4.33	Wheel securing bolts: tightening to specified torque	82
4.34	Tyre Pressure Loss Indicator: calibrating	83
4.35	Cleaning roll cover	84
4.36	Timing chain: Renewing	85



4.37	Windscreen wash/wipe system and headlight washer system: Checking function and settings	85
4.38	Headlight adjustment: checking and adjusting as necessary	88
4.39	Service interval display: resetting	93
4.40	Service interval display: recoding	95
4.41	Transportation mode: switching off	96
4.42	Power assisted steering: checking fluid level	97
4.43	Track rod ends: checking clearance, firm seating and boots	98
4.44	Doors: greasing door arrester	99
4.45	Interior and exterior body: inspecting for corrosion with doors and flaps open	99
4.46	Protective foil: Remove (if fitted)	100
4.47	Underbody: Visual check for damage to underbody protection and underbody covers	101
4.48	Clock and date: setting	101
4.49	Camshaft drive toothed belt: renew.	101
4.50	Camshaft drive toothed belt: checking condition	101
4.51	Spark plugs: renewing	102
5	Exhaust emissions test	104
5.1	Exhaust emissions test for petrol engines	104
5.2	Exhaust emissions test for diesel engines	106