



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Fundamentals for batteries	1
1.2 Warning notices and safety regulations	1
1.3 Types of batteries	3
1.4 Battery terminal connection	5
<b>2 Checking battery</b>	<b>6</b>
2.1 Checking the various types of batteries	6
2.2 Visual check	7
2.3 Information about battery replacement and battery gas venting	8
2.4 Checking colour indicator in battery cover	9
2.5 Battery tester with printer VAS 6161	12
2.6 Battery tester DSS-7814 SET, MAN TGE	17
2.7 Current draw test	19
2.8 No-load current measurement	20
<b>3 Charging the battery</b>	<b>28</b>
3.1 Totally discharged batteries	28
3.2 Battery charger VAS 5095 A	29
3.3 Battery charger VAS 5900	35
3.4 Battery charger VAS 5900 A	47
3.5 Battery charger VAS 5903	55
3.6 Battery charger VAS 5906	67
3.7 Battery charger VAS 5908	69
3.8 Midtronics INC 940 battery charger (USA/Canada only)	78
3.9 Battery charger Fronius Acctiva Professional 35A, MAN TGE	81
3.10 Solar charger module VAS 6102A	83
<b>4 Alternator</b>	<b>85</b>
4.1 Checking function of poly V-belt pulley with freewheel	85
<b>5 Cruise control system (CCS)</b>	<b>87</b>
5.1 General description - cruise control system (CCS)	87
5.2 Activating and deactivating cruise control system (CCS)	87
<b>90 - Gauges, instruments</b>	<b>88</b>
<b>92 - Windscreen wash/wipe system</b>	<b>89</b>
<b>1 Washer fluid line hose couplings</b>	<b>89</b>
1.1 Hose couplings - windscreen and rear window washer system	89
1.2 Hose couplings - windscreen and rear window washer system	90
1.3 Hose couplings - headlight washer system	91
<b>2 Hose repair</b>	<b>92</b>
2.1 General description - hose repair	92
2.2 Repairing smooth pipe	92
2.3 Repairing corrugated pipe	92
<b>94 - Lights, bulbs, switches - exterior</b>	<b>95</b>
<b>1 Operation and safety notes for gas discharge lamps</b>	<b>95</b>
<b>96 - Lights, bulbs, switches - interior</b>	<b>98</b>
<b>1 Immobiliser</b>	<b>98</b>
1.1 General description - immobiliser	98
1.2 Online system test	99
1.3 Immobiliser control unit J362	99



1.4	Engine control unit J623	99
1.5	Immobiliser reader coil	99
1.6	Replacement ignition key	100
1.7	Ignition key - variable code transponder	100
1.8	New lock set	100
1.9	New identity on renewing all components	101
<b>2</b>	<b>12 V socket</b>	<b>102</b>
2.1	Removing and installing 12 V socket	102
2.2	Removing and installing socket illumination bulb L42	104
<b>3</b>	<b>Cigarette lighter U1</b>	<b>105</b>
3.1	General description - cigarette lighter U1	105
3.2	Assembly overview - cigarette lighter U1	105
3.3	Removing and installing cigarette lighter socket	106
3.4	Removing and installing cigarette lighter illumination bulb L28	109
<b>97 - Wiring</b>		<b>110</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>110</b>
1.1	General description - vehicle diagnosis, testing and information system	110
1.2	Connecting vehicle diagnostic tester	110
<b>2</b>	<b>Wiring harness and connector repairs</b>	<b>113</b>
2.1	General notes concerning repairs to vehicle electrical system	113
2.2	Wiring harness repair set	116
2.3	Tool descriptions	119
2.4	Repairs to electrical wiring harnesses	122
2.5	Repairs to fibre optic cables	144
2.6	Repair of aerial wires	150
2.7	Repairing connector housings and connectors	164
2.8	Releasing and dismantling connector housings	168
<b>3</b>	<b>Cleaning contact surfaces</b>	<b>174</b>
3.1	General description - contact surface cleaning set VAS 6410	174
3.2	Repairing ring terminals	174
3.3	Repairing threaded electrical connections	176
3.4	Cleaning battery terminal clamp and battery terminal	178
3.5	Preserving threaded electrical connections	179
<b>4</b>	<b>Renewing Lambda probe</b>	<b>181</b>
4.1	General notes - renewing Lambda probe	181
4.2	Types of protective tube on uniform Lambda probes	181
4.3	Renewing LSF Lambda probe (4-pin)	182
4.4	Renewing LSU lambda probe (6-pin)	183
<b>5</b>	<b>ESD workplace VAS 6613</b>	<b>185</b>
5.1	Use of ESD workplace VAS 6613	185