



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Tipper body (Henschel)</b> .....	<b>1</b>
1.1 Data .....	1
<b>2 Box body (Junge)</b> .....	<b>2</b>
2.1 Data .....	2
<b>3 Box body (Spier)</b> .....	<b>4</b>
3.1 Data .....	4
<b>4 Box body (Schmitz Cargobull)</b> .....	<b>6</b>
4.1 General information .....	6
4.2 Data .....	6
<b>5 Tail lift (Sörensen)</b> .....	<b>7</b>
5.1 General information .....	7
5.2 Data .....	8
<b>6 Tail lift (BÄR - Cargolift)</b> .....	<b>11</b>
6.1 General information .....	11
6.2 Data .....	12
<b>7 Tail lift (Palfinger)</b> .....	<b>14</b>
7.1 General information .....	14
7.2 Data .....	15
<b>53 - Body - rear</b> .....	<b>16</b>
<b>1 Storage well liner and load compartment trim for rear lid</b> .....	<b>16</b>
1.1 Assembly overview - storage well liner .....	16
1.2 Removing and installing storage well liner .....	17
1.3 Removing and installing load compartment for rear lid .....	17
<b>61 - Convertible roof, hardtop, canopy</b> .....	<b>20</b>
<b>66 - Exterior equipment</b> .....	<b>21</b>
<b>1 Wheel housing liner</b> .....	<b>21</b>
1.1 Assembly overview - front wheel housing liner .....	21
1.2 Removing and installing front wheel housing liner .....	22
<b>2 Tipper body (Henschel)</b> .....	<b>25</b>
2.1 Load bed .....	25
2.2 Hydraulic system .....	33
<b>3 Crafter body (Schoon)</b> .....	<b>40</b>
3.1 Load bed .....	40
3.2 Hydraulic system .....	43
<b>4 Box body (Junge)</b> .....	<b>48</b>
4.1 Box body, exterior .....	48
4.2 Box body, rear .....	48
<b>5 Box body (Spier)</b> .....	<b>52</b>
5.1 Box body, exterior .....	52
5.2 Box body, rear .....	56
<b>6 Box body (Schmitz Cargobull)</b> .....	<b>60</b>
6.1 Box body, exterior .....	60
6.2 Box body, rear .....	64
<b>7 Tail lift (Sörensen)</b> .....	<b>72</b>
7.1 Platform .....	72
7.2 Hydraulic system .....	77
<b>8 Tail lift (BÄR - Cargolift)</b> .....	<b>84</b>



8.1	Platform .....	84
8.2	Hydraulic system .....	87
<b>9</b>	<b>Tail lift (Palfinger) .....</b>	<b>95</b>
9.1	Platform .....	95
9.2	Hydraulic system .....	98
<b>10</b>	<b>Repairing box body .....</b>	<b>107</b>
10.1	Repairing plywood panel .....	107
10.2	Repairing sandwich panel .....	110
10.3	Repairing transparent roof .....	122
<b>11</b>	<b>Trim film and protective film .....</b>	<b>126</b>
11.1	Assembly overview - protective films .....	126
11.2	Renewing protective films .....	128
<b>12</b>	<b>Taxi roof sign preparation .....</b>	<b>132</b>
12.1	Removing and installing taxi roof sign preparation .....	132
<b>13</b>	<b>Taxi roof sign preparation .....</b>	<b>133</b>
13.1	Removing and installing taxi roof sign preparation .....	133
<b>14</b>	<b>Roof spoiler .....</b>	<b>134</b>
14.1	Removing and installing roof spoiler .....	134
<b>15</b>	<b>Mounting bracket for towing bracket .....</b>	<b>136</b>
15.1	Assembly overview - mounting bracket for towing bracket .....	136
15.2	Removing and installing mounting bracket for towing bracket .....	136
<b>16</b>	<b>Roof basket .....</b>	<b>138</b>
16.1	Assembly overview - roof basket .....	138
16.2	Removing and installing roof basket .....	139
<b>17</b>	<b>Storage box on drop-side .....</b>	<b>142</b>
17.1	Assembly overview - storage box on drop-side .....	142
17.2	Removing and installing storage box on drop-side .....	142
<b>18</b>	<b>Cross strut .....</b>	<b>144</b>
18.1	Assembly overview - cross strut .....	144
18.2	Removing and installing cross strut .....	146
<b>19</b>	<b>Storage box under drop-side .....</b>	<b>149</b>
19.1	Assembly overview - storage box bracket .....	149
19.2	Removing and installing bracket for storage box .....	152
<b>20</b>	<b>Side underbody guard .....</b>	<b>153</b>
20.1	Assembly overview - side underbody guard .....	153
20.2	Removing and installing side underbody guard .....	153
<b>21</b>	<b>Storage box .....</b>	<b>155</b>
21.1	Assembly overview - storage compartment .....	155
21.2	Removing and installing storage box .....	155
<b>22</b>	<b>Ladder carrier .....</b>	<b>157</b>
22.1	Assembly overview - ladder carrier .....	157
22.2	Removing and installing ladder carrier .....	158
<b>23</b>	<b>Roof carrier system with securing device .....</b>	<b>161</b>
23.1	Assembly overview - roof carrier system with securing device .....	161
23.2	Removing and installing roof carrier system with securing device .....	161
<b>24</b>	<b>Easy Entry, right rear wing door .....</b>	<b>163</b>
24.1	Assembly overview - Easy Entry, right rear wing door .....	163
24.2	Removing and installing Easy Entry, right rear wing door .....	163
<b>25</b>	<b>Underbody guard (protection package) .....</b>	<b>166</b>
25.1	Assembly overview - underbody guard (protection package) .....	166
25.2	Removing and installing underbody guard (protection package) .....	167
<b>26</b>	<b>Roof ventilator .....</b>	<b>170</b>



26.1	Assembly overview - roof ventilator	170
26.2	Removing and installing roof ventilator	170
<b>27</b>	<b>Grille attachment for tipper</b>	<b>173</b>
27.1	Assembly overview - grille attachment	173
27.2	Removing and installing grille attachment	173
<b>28</b>	<b>Ladder support</b>	<b>174</b>
28.1	Assembly overview - ladder support	174
28.2	Removing and installing ladder support	175
<b>68</b>	<b>Interior equipment</b>	<b>178</b>
<b>1</b>	<b>Box body (Junge)</b>	<b>178</b>
1.1	Removing and installing securing strap rail	178
1.2	Removing and installing securing strap recesses	180
1.3	Removing and installing pull strap	181
<b>2</b>	<b>Box body (Spier)</b>	<b>183</b>
2.1	Removing and installing securing strap rail	183
2.2	Removing and installing securing strap recess	185
2.3	Pull strap	186
<b>3</b>	<b>Box body (Schmitz Cargobull)</b>	<b>188</b>
3.1	Removing and installing roof cross strut	188
3.2	Removing and installing securing strap rail	189
3.3	Removing and installing pull strap	191
<b>4</b>	<b>Equipment</b>	<b>193</b>
4.1	Universal floor	193
4.2	Roof carrier in load compartment	195
4.3	Removing and installing grab handle, A-pillar	197
<b>5</b>	<b>Box body (Plus)</b>	<b>199</b>
5.1	Assembly overview - box body (Plus)	199
5.2	Removing and installing seat bench padding	204
5.3	Removing and installing upper partition	204
5.4	Removing and installing lower partition	206
5.5	Removing and installing connection to side panel	207
5.6	Removing and installing side panel	207
5.7	Removing and installing sliding door step	209
5.8	Removing and installing front and rear bench trim	210
5.9	Removing and installing rear seat	212
5.10	Removing and installing floor items	213
5.11	Removing and installing headliner	214
5.12	Removing and installing roof items	216
<b>70</b>	<b>Trim, insulation</b>	<b>217</b>
<b>91</b>	<b>Communication</b>	<b>218</b>
<b>1</b>	<b>Aerial systems</b>	<b>218</b>
1.1	Removing and installing roof aerial R295	218
<b>2</b>	<b>Aerial systems</b>	<b>219</b>
2.1	Removing and installing roof aerial R295	219
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>220</b>
<b>1</b>	<b>Tipper body (Henschel)</b>	<b>220</b>
1.1	Electrics	220
<b>2</b>	<b>Crafter body (Schoon)</b>	<b>225</b>
2.1	Electrics	225
<b>3</b>	<b>Box body (Junge)</b>	<b>229</b>
3.1	Removing and installing tail light MX3 / MX4	229



3.2	Removing and installing rear fog light L46 / L47	230
3.3	Removing and installing number plate light X4 / X5	230
3.4	Removing and installing additional brake light M25	231
3.5	Removing and installing upper marker lights	232
3.6	Removing and installing side marker light M33 / M34 / M37 / M38 / M39 / M40 with bracket	232
3.7	Removing and installing lower marker light	232
<b>4</b>	<b>Box body (Spier)</b>	<b>234</b>
4.1	Removing and installing tail light MX3 / MX4	234
4.2	Removing and installing number plate light X4 / X5	235
4.3	Removing and installing high-level brake light	235
4.4	Removing and installing upper marker lights	236
4.5	Removing and installing side marker light M33 / M34 / M37 / M38 / M39 / M40	236
<b>5</b>	<b>Box body (Schmitz Cargobull)</b>	<b>238</b>
5.1	Removing and installing tail light cluster	238
5.2	Removing and installing number plate light	239
5.3	Removing and installing high-level brake light	240
5.4	Removing and installing rear upper marker light	241
5.5	Removing and installing front upper marker light	241
5.6	Removing and installing side marker light	242
<b>6</b>	<b>Tail lift (Sørensen)</b>	<b>244</b>
6.1	Removing and installing hazard warning light M115/M116	244
6.2	Removing and installing foot switch F558	245
6.3	Removing and installing tail lift operating unit EX56	246
6.4	Removing and installing tilt angle sensor	247
<b>7</b>	<b>Tail lift (BÄR - Cargolift)</b>	<b>249</b>
7.1	Removing and installing hazard warning light M115/M116	249
7.2	Removing and installing foot switch F556/F557	250
7.3	Removing and installing operating unit EX56	251
7.4	Removing and installing foot switch unit F558	252
<b>8</b>	<b>Tail lift (Palfinger)</b>	<b>255</b>
8.1	Removing and installing hazard warning light	255
8.2	Removing and installing foot controls	255
8.3	Removing and installing tilt switch	256
8.4	Removing and installing angle sensor	257
8.5	Removing and installing control box	257
<b>9</b>	<b>Removing and installing alarm system off switch E217</b>	<b>259</b>
<b>10</b>	<b>Roof spoiler elevated side light</b>	<b>260</b>
10.1	Removing and installing roof spoiler elevated side light	260
<b>11</b>	<b>Cross strut/tarpaulin lighting</b>	<b>261</b>
11.1	Removing and installing cross strut/tarpaulin lighting	261
<b>12</b>	<b>Cross strut/tarpaulin wiring harness</b>	<b>262</b>
12.1	Removing and installing cross strut/tarpaulin wiring harness	262
<b>96 - Lights, bulbs, switches - interior</b>		<b>263</b>
<b>1</b>	<b>Box body (Junge)</b>	<b>263</b>
1.1	Removing and installing load area illumination switch E481	263
1.2	Removing and installing interior lighting	263
<b>2</b>	<b>Box body (Spier)</b>	<b>265</b>
2.1	Removing and installing load area illumination switch E481	265
2.2	Removing and installing interior lighting	265
<b>3</b>	<b>Box body (Schmitz Cargobull)</b>	<b>267</b>
3.1	Removing and installing interior lighting	267
<b>4</b>	<b>Tail lift (Sørensen)</b>	<b>269</b>



4.1	Tail lift switch E629	269
<b>5</b>	<b>Tail lift (BÄR - Cargolift)</b>	<b>270</b>
5.1	Tail lift switch E629	270
<b>6</b>	<b>Tail lift (Palfinger)</b>	<b>271</b>
6.1	Tail lift switch	271
<b>7</b>	<b>Control elements</b>	<b>272</b>
7.1	Overview of fitting locations - controls in dash panel, Taxi	272
7.2	Removing and installing interior light switch (taxi) E115	272
7.3	Removing and installing taxi sign switch E138	273
7.4	Removing and installing hands-free system button E487	273
<b>8</b>	<b>Anti-theft alarm</b>	<b>274</b>
8.1	Removing and installing treble horn H2	274
<b>97 - Wiring</b>		<b>276</b>
<b>1</b>	<b>Control units</b>	<b>276</b>
1.1	Removing and installing special vehicle control unit J608	276
<b>2</b>	<b>Control units</b>	<b>279</b>
2.1	Removing and installing special vehicle control unit J608	279