



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 General repair instructions	2
3 Technical data	5
3.1 Capacities	5
3.2 Allocation gearbox - engine	5
30 - Clutch	7
1 Clutch operation	7
1.1 Assembly overview - clutch mechanism	7
1.2 Assembly overview - clutch release mechanism	9
1.3 Removing and installing over-centre spring	9
1.4 Removing and installing mounting bracket	10
1.5 Removing and installing clutch master cylinder	11
1.6 Bleeding clutch mechanism	12
1.7 Removing and installing clutch pedal switch	13
2 Clutch	16
2.1 Assembly overview - clutch	16
2.2 Removing and installing clutch	16
34 - Controls, housing	20
1 Selector mechanism	20
1.1 Installation position - selector mechanism	20
1.2 Assembly overview - gear knob and cover	22
1.3 Assembly overview - Gear lever and selector housing	22
1.4 Removing and installing selector mechanism	23
1.5 Adjusting selector mechanism	25
1.6 Checking selector mechanism	29
1.7 Removing and installing selector lever handle	30
1.8 Dismantling and assembling selector mechanism	31
2 Removing and installing gearbox	34
2.1 Specified torques for gearbox	34
2.2 Removing gearbox	34
2.3 Installing gearbox	41
3 Assembly mountings	42
3.1 Assembly overview - assembly mountings	42
4 Gear oil	44
4.1 Checking gear oil level	44
4.2 Draining and filling gear oil	45
35 - Gears, shafts	46
1 Currently, no repairs can be made to gears and shafts	46