



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on fuel supply system	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when tow-starting or towing	2
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General information	4
2.3 General repair instructions	4
2.4 Contact corrosion	5
2.5 Gaskets and seals	5
2.6 Nuts and bolts	6
2.7 Routing and attachment of lines	6
3 Technical data	7
3.1 Capacities	7
3.2 Allocation gearbox - engine	7
32 - Torque converter	9
1 Torque converter	9
1.1 Assembly overview - torque converter	9
1.2 Removing and installing torque converter	9
1.3 Draining torque converter	11
1.4 Removing and installing torque converter oil seal	11
37 - Controls, housing	13
1 ATF circuit	13
1.1 Assembly overview - ATF circuit	13
1.2 Removing and installing ATF cooler	14
1.3 Removing and installing ATF filter	16
1.4 Removing and installing ATF pipes	18
2 ATF	23
2.1 Checking ATF level	23
2.2 Draining and filling ATF	24
2.3 Purging ATF circuit	27
3 Removing and installing gearbox	29
3.1 Specified torques for gearbox	29
3.2 Removing gearbox	29
3.3 Installing gearbox	36
4 Assembly mountings	41
4.1 Assembly overview - assembly mountings	41
5 Transporting gearbox	42
6 Selector mechanism	44
6.1 Assembly overview - selector mechanism	44
6.2 Assembly overview - selector lever handle	45
6.3 Checking selector mechanism	45
6.4 Emergency release from position P	46
6.5 Removing and installing selector mechanism	47
6.6 Removing and installing selector lever handle	49
6.7 Removing and installing gear selector cable	51



6.8	Checking and adjusting selector lever cable	51
6.9	Removing and installing cable support bracket for selector lever cable	52
6.10	Removing and installing gearbox selector lever	55
38	Gears, control	56
1	ATF system	56
1.1	Assembly overview - sump/oil strainer	56
1.2	Removing and installing sump	57
1.3	Removing and installing hydraulic impulse oil storage with accumulator solenoid N485 ..	60
2	Oil seals in gearbox	62
2.1	Renewing oil seal in gearbox	62
3	Mechatronic unit	64
3.1	Removing and installing mechatronic unit	64