



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
1 <b>Safety information</b> .....	1
1.1 Safety regulations for working on fuel supply .....	1
1.2 Safety measures when working on vehicles with start/stop system .....	1
1.3 Safety precautions when using testers and measuring instruments during a road test .....	2
1.4 Safety precautions when working on the cooling system .....	2
1.5 Safety precautions when working on ignition system .....	2
1.6 Safety precautions when working on exhaust system .....	3
2 <b>Identification</b> .....	4
2.1 Engine number/engine data .....	4
3 <b>Repair notes</b> .....	5
3.1 Rules for cleanliness .....	5
3.2 General information .....	5
3.3 General repair instructions .....	6
3.4 Foreign objects in engine .....	6
3.5 Contact corrosion .....	6
3.6 Routing and attachment of lines .....	7
3.7 Fitting radiator and condensers .....	7
3.8 Checking vacuum system .....	7
<b>20 - Fuel supply system</b> .....	<b>8</b>
1 <b>Fuel</b> .....	8
1.1 Assembly overview - fuel tank .....	8
1.2 Removing and installing fuel tank .....	10
1.3 Removing and installing filling connection .....	13
1.4 Releasing high pressure in fuel system .....	15
2 <b>Fuel delivery unit, fuel gauge sender</b> .....	17
2.1 Removing and installing fuel delivery unit, fuel gauge sender .....	17
2.2 Removing and installing fuel gauge sender G .....	18
3 <b>Plug-in connectors</b> .....	19
3.1 Separating plug-in connectors .....	19
4 <b>Fuel filter</b> .....	23
4.1 Assembly overview - fuel filter .....	23
4.2 Removing and installing fuel filter .....	23
5 <b>Activated charcoal filter system</b> .....	26
5.1 Assembly overview - activated charcoal filter system .....	26
5.2 Removing and installing activated charcoal filter .....	26
5.3 Checking fuel tank breather .....	27
6 <b>Accelerator pedal</b> .....	29
6.1 Assembly overview - accelerator module .....	29
6.2 Removing and installing accelerator module with accelerator position sender G79 / G185 .....	30
7 <b>Fuel pump</b> .....	31
7.1 Checking fuel system pressurisation pump G6 .....	31
7.2 Removing and installing fuel pump control unit J538 .....	37