



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on exhaust system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair notes</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	6
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	7
3.7 Fitting radiator and condensers	7
3.8 Checking vacuum system	7
<b>20 - Fuel supply system</b>	<b>8</b>
<b>1 Filling with incorrect fuel</b>	<b>8</b>
1.1 Procedure should vehicle be misfueled	8
<b>2 Fuel</b>	<b>13</b>
2.1 Assembly overview - fuel tank	13
2.2 Removing and installing fuel tank	14
2.3 Removing and installing filling connection	23
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>25</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	25
3.2 Removing and installing fuel delivery unit, fuel gauge sender	25
3.3 Removing and installing fuel gauge sender G	27
<b>4 Plug-in connectors</b>	<b>29</b>
4.1 Separating plug-in connectors	29
<b>5 Fuel filter</b>	<b>33</b>
5.1 Assembly overview - fuel filter	33
5.2 Removing and installing fuel filter	42
<b>6 Accelerator pedal</b>	<b>49</b>
6.1 Assembly overview - accelerator module	49
6.2 Removing and installing accelerator module with accelerator position sender G79 / G185	49
<b>7 Fuel pump</b>	<b>51</b>
7.1 Checking fuel system pressurisation pump G6 , 4-cylinder engine	51
7.2 Checking fuel system pressurisation pump G6 , 6-cylinder engine	68
<b>8 Senders and sensors</b>	<b>76</b>
8.1 Removing and installing water separator sender G63	76